



SUBSITE Marksman Tracker Receiver User Guide

[Home](#) » [SUBSITE](#) » SUBSITE Marksman Tracker Receiver User Guide 

Contents

- 1 SUBSITE Marksman Tracker Receiver User Guide
- 2 Before you start!
- 3 Connecting Marksman Tracker to Wi-Fi
- 4 Connecting Marksman Tracker to Wi-Fi
- 5 Connecting Marksman Tracker to Wi-Fi
- 6 Connecting Marksman Tracker to Wi-F
- 7 Connecting Marksman Tracker to Wi-Fi
- 8 Connecting Marksman Tracker to Wi-Fi
- 9 Connecting Marksman Tracker to Wi-Fi
- 10 Updating the Marksman
- 11 Updating the Marksman
- 12 Updating the Marksman
- 13 Updating the Marksman
- 14 Updating the M-series Beacon
- 15 Updating the M-series Beacon
- 16 Your Marksman HDD Guidance System is now up to date. If you have any questions, please feel free to call your Subsite Product Support Group at 1-800-846-2713 (U.S.) or +1-580-572-3700 (outside U.S.).
- 17 Read More About This Manual & Download PDF:
- 18 Documents / Resources
- 19 Related Posts

SUBSITE Marksman Tracker Receiver User Guide




Before you start!

1. Make sure Bluetooth® is enabled on your iOS or Android mobile device.
2. Make sure you have Field Scout™ app version 1.6.1167 or later.
3. Ensure Wi-Fi is enabled from the “Wireless” menu on your Marksman tracker.



Connecting Marksman Tracker to Wi-Fi


- Power on your Marksman and then open your Field Scout™ Application on your phone. Again, ensure you have version 1.6.1167 or later.

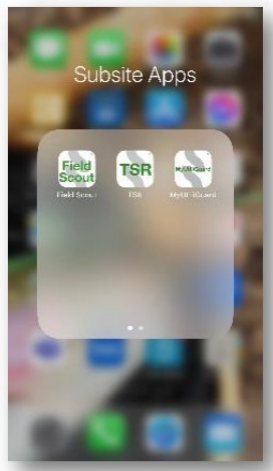


Open Field Scout™

Open Field Scout™

Connecting Marksman Tracker to Wi-Fi

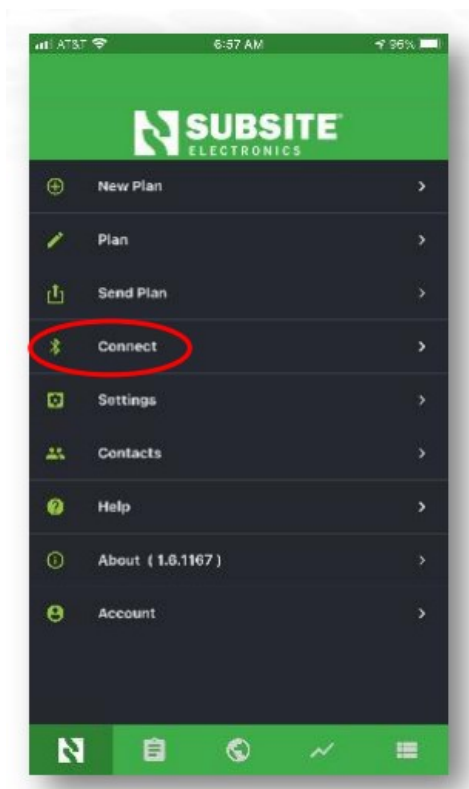

Connecting Marksman Tracker to Wi-Fi

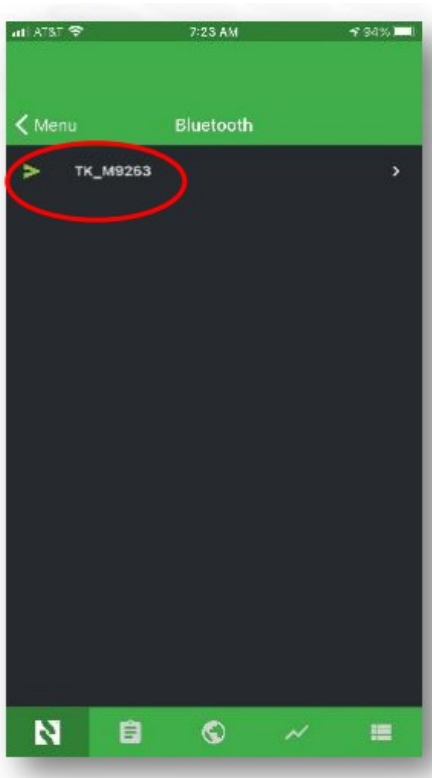

- Make sure you see your Marksman tracker in Bluetooth window
- It will be identified with TK_M and the last 4 digits of the unit serial number
- Click on your Marksman tracker


Connecting Marksman Tracker to Wi-F

- Click on the purple “Plus” symbol at the bottom right of the app.




Connecting Marksman Tracker to Wi-Fi

- Now, click on the Wi-Fi icon.

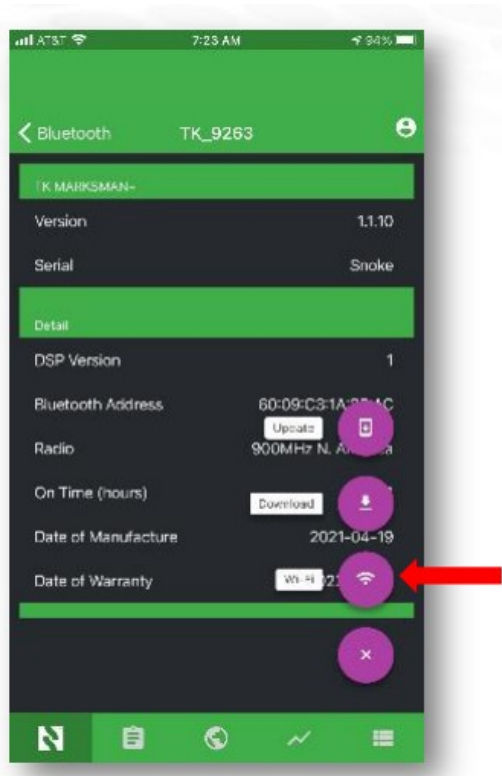

Connecting Marksman Tracker to Wi-Fi


- You will need to use stable Wi-Fi connection. It is recommended to use Wi-Fi at your office, but a wireless card or phone hotspot will work as long as you have good cellular signal.

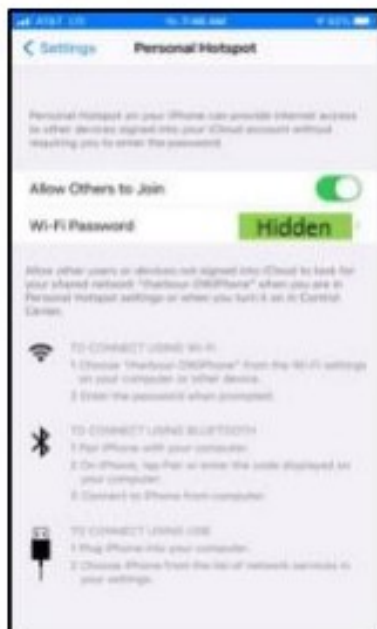


- Click (tap) on the Wi-Fi you wish to connect
- Note: If connecting to iPhone hotspot, the hotspot window in your phone's settings menu must be visible while powering on the Marksman tracker

Connecting Marksman Tracker to Wi-Fi

- Click (tap) on "Password" and type it in and then select "Connect"

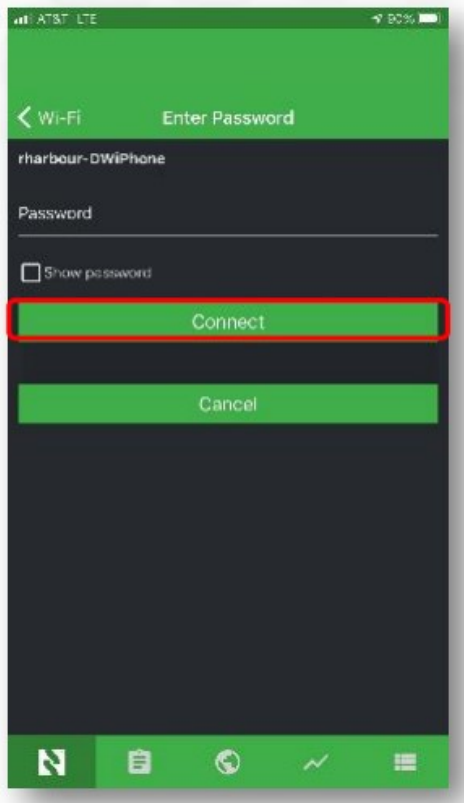


Updating the Marksman

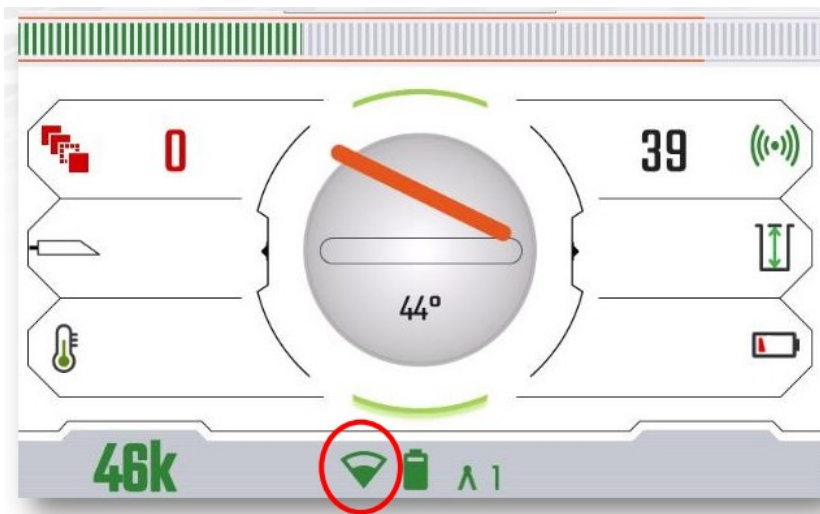

- Make sure you are connected to Wi-Fi identified by the circled icon in the status bar of the Marksman screen.
- After initial setup, the Marksman will automatically connect to same Wi-Fi if it is within range of the tracker.

Updating the Marksman

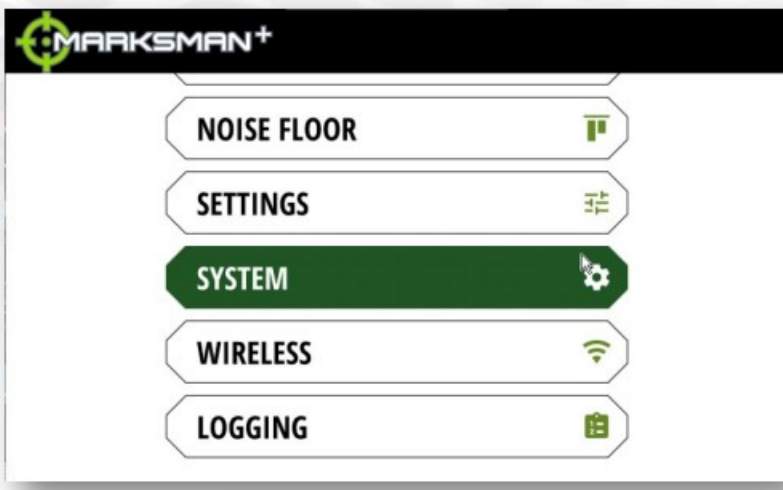

- Toggle joystick to the right to enter Menu
- Scroll to “System” and toggle right
- Scroll to “Updates” and toggle right


Updating the Marksman



- This Marksman has been updated, but if updating from 1.0, there will be a list of updates on this screen.
- Select “Main” (top selection) and proceed with the update. The Marksman will reboot a couple of times during the update.


- Note: DO NOT POWER DOWN MARKSMAN OR DISCONNECT WI-FI DURING THIS PROCESS OR IT MAY NEED TO BE SENT BACK TO FACTORY FOR REPAIRS.

Updating the Marksman

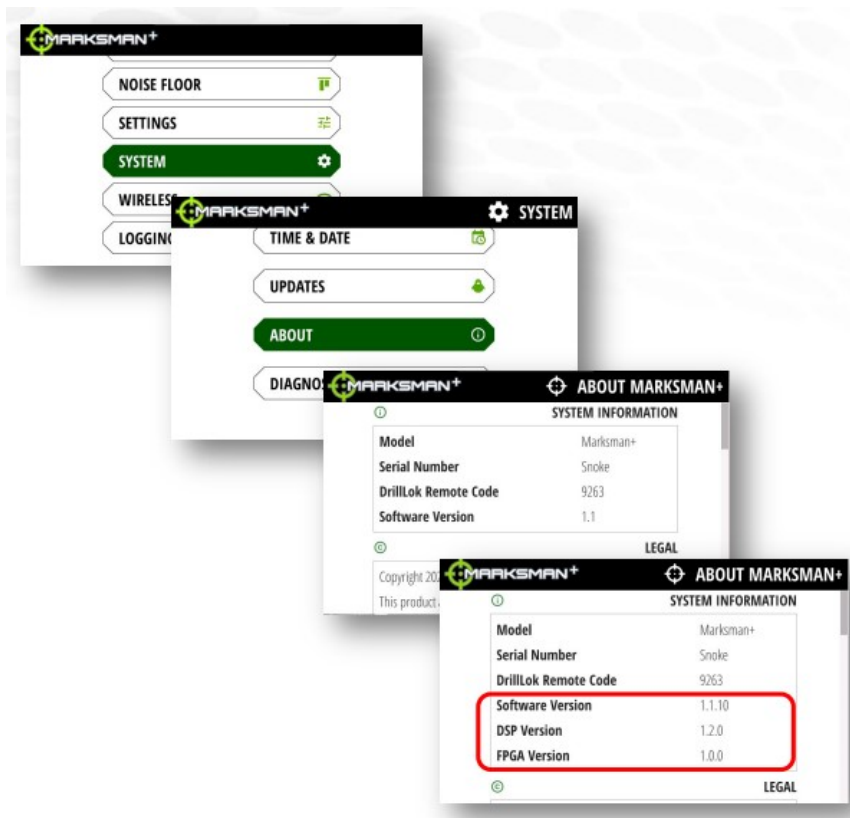


- Ensure update has been installed by going into the “System” menu
- Select “About”
- Software version displayed in System Information block
- To view the full Software version numbers, move joystick in the following combination:
- UP- UP- DOWN- DOWN- RIGHT- RIGHT

Updating the M-series Beacon

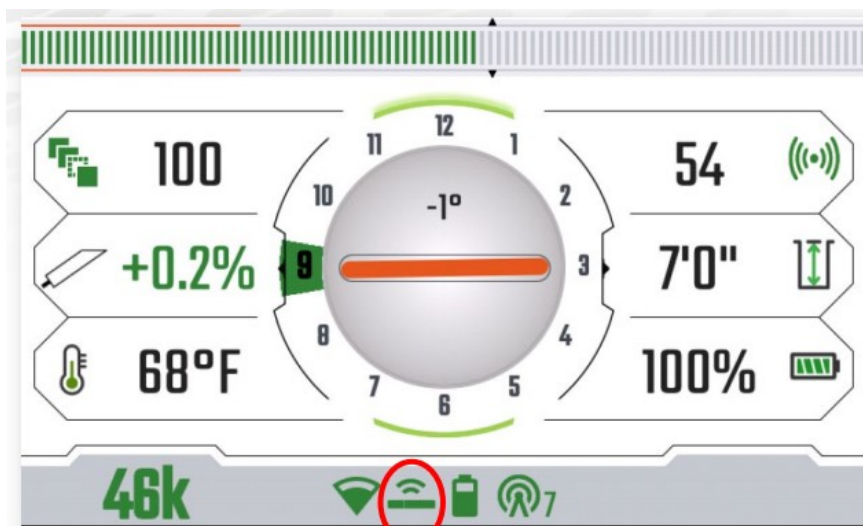

- Once the Marksman tracker has been updated to version 1.1, allow tracker to reconnect to the Wi-Fi network. While connected, the tracker will download and store the beacon update in the tracker memory.
- Wi-fi connection is not needed to update beacon.
- Updating M-series beacons
- Power up beacon and ensure it is connected to the Marksman by looking for the “Beacon Connected” icon in the status bar.
- Note: You can be receiving beacon signal and data and not be wirelessly connected to the beacon.

Updating the M-series Beacon

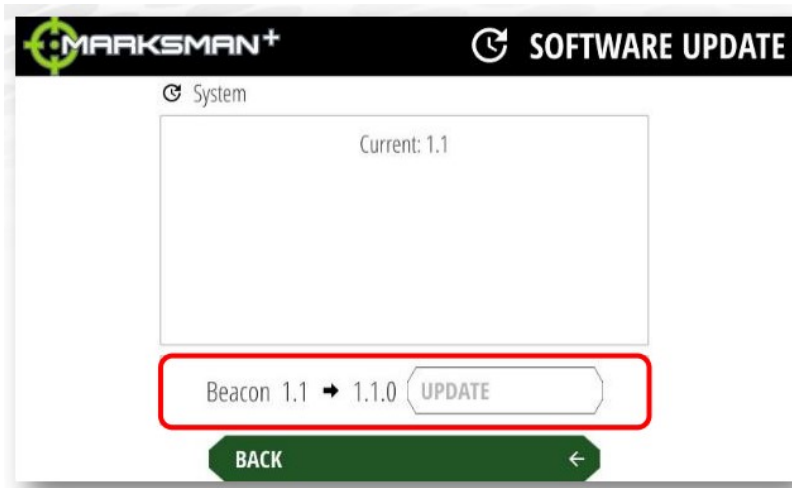


- This beacon is already updated, but on one that needs updates, the “Update” box will be highlighted green and available to select.
- If beacon is updated, the box will be grayed out and unselectable.
- Select “Update” to start updating. Allow process to complete before powering down units.
- Confirm update by going to Beacon menu and selecting “Information”

Your Marksman HDD Guidance System is now up to date. If you have any questions, please feel free to call your Subsite Product Support Group at 1-800-846-2713 (U.S.) or +1-580-572-3700 (outside U.S.).



Read More About This Manual & Download PDF:

Documents / Resources

| | |
|--|---|
|  <p>SUBSITE UNIVERSITY <small>MARKSMAN TRACKER RECEIVER</small></p> <p>Updating Your Marksman™ Tracker</p> | <p>SUBSITE Marksman Tracker Receiver [pdf] User Guide</p> <p>Marksman Tracker Receiver, Marksman, Tracker Receiver, Receiver</p> |
|--|---|

Manuals+.