



Contents [[hide](#)]

- [1 SUBSONIC SA5716 Wireless LED Controller](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PRODUCT OVERVIEW](#)
- [5 Before the first use](#)
- [6 Features](#)
- [7 Specifications](#)
- [8 Charging](#)
- [9 Connecting the controller to PSS](#)
- [10 Programming the RGB LEDs](#)
- [11 Turbo function](#)
- [12 Gaming headset](#)
- [13 Troubleshooting](#)
- [14 Precautions for use](#)
- [15 Contact and support](#)
- [16 Respect for the environment](#)
- [17 RADIO EQUIPMENT DIRECTIVE](#)
- [18 Frequently Asked Questions](#)
- [19 Documents / Resources](#)
 - [19.1 References](#)





Product Information

Specifications

- **Brand:** Subsonic
- **Website:** www.subsonic.com

Product Usage Instructions

Step 1: Unboxing and Setup

- When you receive the product, carefully unbox it and check for any damage. Follow the user manual provided for setup instructions.

Step 2: Powering On

- Connect the product to a power source using the provided cable and turn it on by pressing the power button.

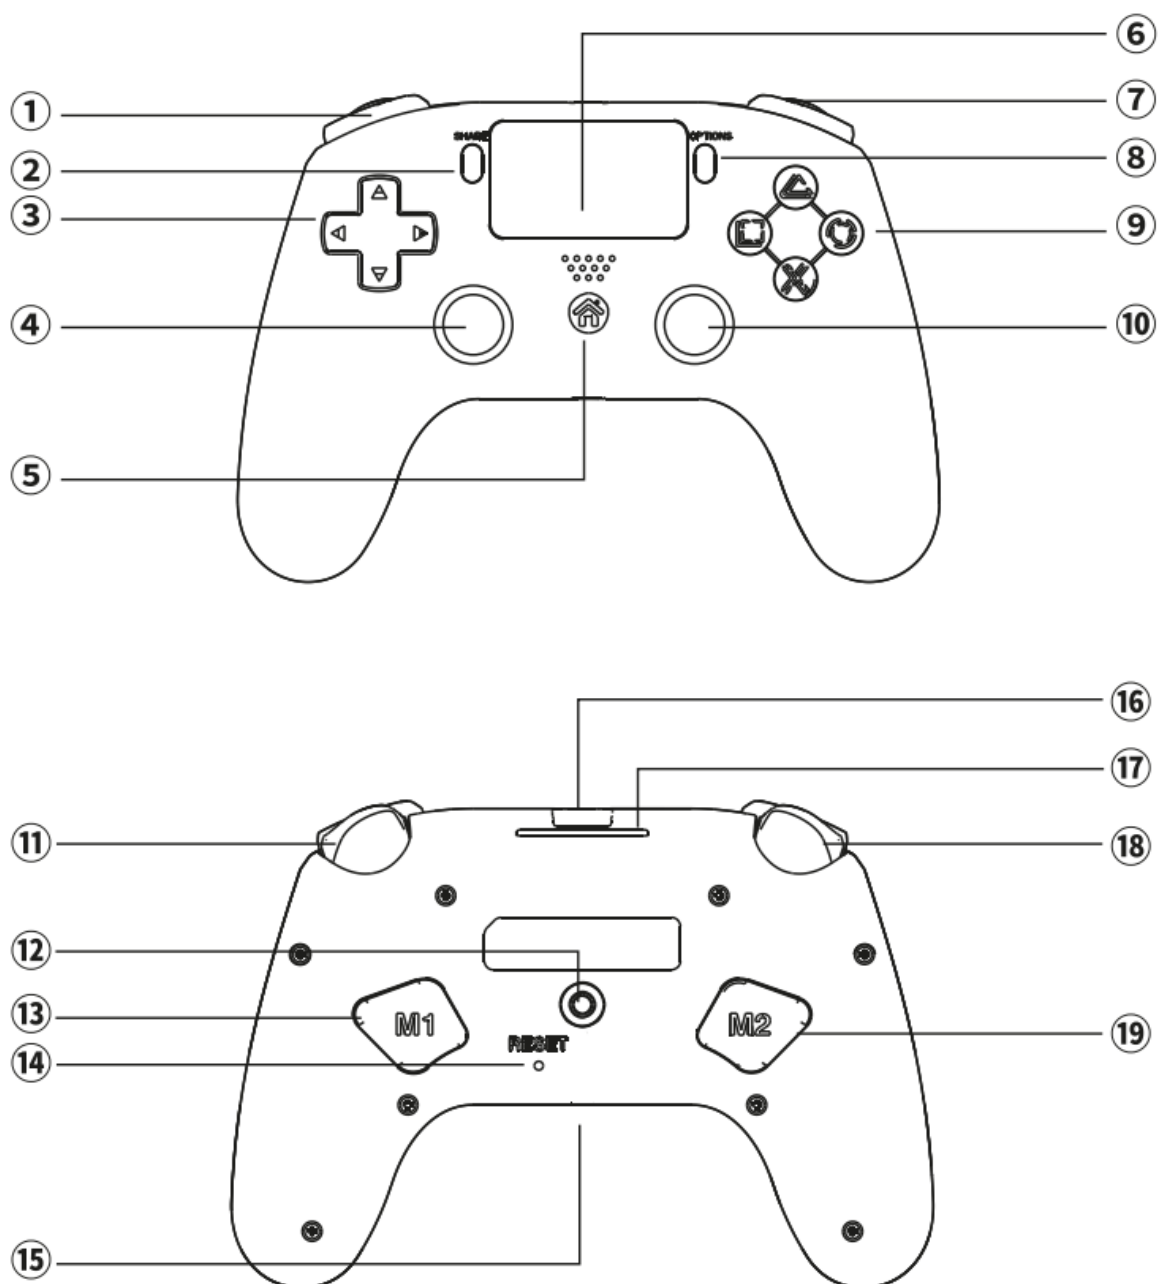 
Step 3: Using the Product

- Once powered on, familiarise yourself with the product features and controls. Refer to the user manual for detailed usage instructions.

Step 4: Maintenance and Care

- Regularly clean the product using a soft, dry cloth. Avoid using harsh chemicals that may damage the product's surface.

PRODUCT OVERVIEW



1. L1
2. Share
3. D-Pad

4. Left joystick+ L3
5. Home button
6. Touch panel
7. R1
8. Options
9. Action buttons
10. Right joystick+ R3
11. R2
12. Turbo
13. M1 button
14. Reset
15. Headphone input (PSS, wired mode only)
16. USB-C Charging port
17. Light indicator
18. L2
19. M2 button

Before the first use

- Thank you for purchasing the WIRELESS LED CONTROLLER.
- Before using it, please read this manual carefully. Please keep it for future reference.
- For more details on precautions for use, safety warnings and respect for the environment, visit our website www.subsonic.com.

Features

- The WIRELESS LED CONTROLLER is compatible with PSS & PC (Windows 8/10/11, Direct Input)
- Programmable RGB LED
- Additional programmable eSport M1 and M2 buttons on the back of the controller, turbo function
- Built-in rechargeable battery (charging cable included)
- Vibration, touchpad, motion sensor (PSS only)
- Compatible with PSS gaming headsets (wired mode only)
- The haptics, adaptive triggers, speaker and microphone functions are not supported

by the WIRELESS LED CONTROLLER

Specifications

- **Working voltage:** DC 3.SV-4.2V
- **Working current:** 1 00mA±l 0mA
- **Built-in lithium battery:** 600mAh
- **Input charging voltage:** Type-C input SV
- **Transmission distance:** 10 M
- **Battery life:** approx 1 0 hour

Charging

- Before connecting for the first time, fully charge the controller's battery.
- To charge the battery, connect the controller to a USB port using the supplied USB cable. The LED indicator on the front of the controller will flash slowly in orange while charging and will turn off when the charge is complete.
- Press and hold the Home button for 10 seconds to turn the controller off.

Connecting the controller to PSS

1. Turn on the console.
2. Connect the controller in sleep mode to one of the console's USB ports using the USB cable provided.
3. Press the Home button: the controller connects and the LED indicator lights up. The controller is ready for use.
 - For subsequent connections, simply press the Home button on the controller, and it will automatically connect to the console.
 - You can also wake the console by pressing the Home button after the first pairing.

Connecting the controller to the PC

The controller only works in wired mode on a PC, using the Direct Input protocol.

1. Switch on your PC.
2. Connect the switched-off controller to one of the console's USB ports using the USB

cable supplied.

3. The controller is ready to use. It is recognised as a “DualSense Wireless Controller” in the list of game controllers. Vibration is not supported on PC.





Programming the RGB LEDs

When the controller is on, the default light mode is monochrome gradient.

 
 
 

 

 
 
You can change the light mode:

- **Fixed colours:** press R3 & D-Pad up to change to switch colour.
- **Colour gradient:** press R3 & D-Pad down to change to colour gradient mode.
- To switch the RGB LED off (or back on), press R3 & Share.

Turbo function

- **IMPORTANT:** The turbo function is not available in all games, only some can support it.
- You can assign a turbo or auto function to the keys ////L1/R1/L2/R2.
- **Turbo:** for the first time, press one of the keys listed above, then Turbo. The key now has the turbo function, so every time you press it, it will repeat quickly.
- **Automatic:** for the second time, press one of the keys listed above, then Turbo. The key now has the auto function, press it once, and the action will repeat endlessly.
- **Clear the turbo function:** for the third time, press one of the keys listed above, then Turbo. The key is now reset to the original.

eSport M1 & M2 buttons

- You can assign the keys ////////L1/R1/L2/R2/L3/R3 to the M1 or M2 buttons.
- By default, M1 is mapped to O and M2 is mapped to X.
 1. Press and hold the M key, then press Share. The LED indicator will turn red.
 2. Then press the key that you would like to affect and press M again to save the setting.
- **Example:** to map R1 on M1, press and hold M1, then press Share. The LED indicator

turns red. Press R1, then M1 again, and M1 is now mapped to R1.

- To clear the mapping, press the M key, then Share, then the M key again.

Gaming headset

- You can plug a PSS gaming headset into the audio socket on the controller only if you are using it in wired mode.
- To do this, connect it to the console using the USB cable supplied, then go to: Settings/ Accessories/ Controller (General)/ Communication mode and select USB cable.

Troubleshooting

- If you are unable to connect the controller to the console, press the RESET button located in a small hole on the back of the controller with a paper clip. This will reset the controller.
- If the controller does not work properly, go to www.subsonic.com to update the controller driver.
- The haptics, adaptive triggers, speaker and microphone functions are not supported by the WIRELESS LED CONTROLLER. If you wish to use these functions in a game, use the official PSS controller.

Precautions for use

- Do not use the controller for any purpose other than those described in this document.
- To avoid electrical shock, store and use the controller in a dry place, away from moisture and direct sunlight.
- Exposure to high temperatures may damage the body or internal electronics of the unit.
- Do not disassemble.
- Stop using the controller immediately if you experience fatigue, discomfort or pain. If these effects persist, consult your doctor.
- Take regular breaks during play.
- Do not allow small children to play with the controller. This product is not intended for children under the age of 7.

Contact and support

- The Subsonic team is at your disposal for any further information concerning the WIRELESS LED CONTROLLER or other products in our range of peripherals.

contact@subsonic.com

Respect for the environment



- To protect the environment, electrical and electronic equipment must not be disposed of with household waste.
- Please return them to a collection point for recycling.

RADIO EQUIPMENT DIRECTIVE

- UE Declaration of conformity to the Radio Equipment Directive.
- Hereby, SUBSONIC S.A.S. declares that the product WIRELESS LED CONTROLLER
- **Brand:** Subsonic
- **Models:** SA5716-I, SA5716-2, SA5716-3
- **EAN codes:** 3701221704261, 3701221704278, 3701221704575 comply with the essential requirements and other relevant provisions of Directive 2014/53/EU.
- For details, please contact SUBSONIC, 314 Allee des Noisetiers, 69760 LIMONEST, France, or visit: <https://subsonic.com/fr/contenU54-compliance>
- WWW.SUBSONIC.COM
- In case of malfunction, update the controller firmware on www.subsonic.com.

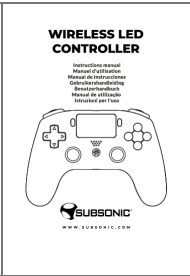
CONTACT & SUPPORT

- SUBSONIC
- 314, allée des noisetiers
- 69760 Limonest – France
- contact@subsonic.com
- www.subsonic.com

Frequently Asked Questions

- **Q: Where can I find additional accessories for the Subsonic product?**
 - **A:** You can visit our official website at www.subsonic.com to explore and purchase compatible accessories.
- **Q: How do I contact customer support for technical assistance?**
 - **A:** For any technical support or queries, please reach out to our customer support team via the contact information provided on our website.

Documents / Resources

	SUBSONIC SA5716 Wireless LED Controller [pdf] Instruction Manual SA5716, 2506, SA5716 Wireless LED Controller, Wireless LED Controller, LED Controller, Controller
---	---

References

- [User Manual](#)

■ SUBSONIC

◆ 2506, controller, LED Controller, SA5716, SA5716 Wireless LED Controller, SUBSONIC, Wireless LED Controller

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.