



Home » SUBSONIC » SUBSONIC Switch 2 Netzteil Power Adapter Instruction Manual



# **SUBSONIC Switch 2 Netzteil Power Adapter Instruction Manual**

May 28, 2025

### Contents [ hide ]

- 1 POWER ADAPTER
  - 1.1 Instructions manual
    - 1.1.1 Precautions for use
    - 1.1.2 1. INTRODUCTION
    - 1.1.3 2. IMPORTANT
    - 1.1.4 3. SAFETY INSTRUCTIONS
    - 1.1.5 4. CONTACT AND SUPPORT
    - 1.1.6 5. ENVIRONNEMENTAL SAFETY
- 2 Documents / Resources
  - 2.1 References

## **POWER ADAPTER**

Instructions manual

**CONTACT & SUPPORT** 



**SUBSONIC** 

314, allee des noisetiers

## contact@subsonic.com www.subsonic.com



### WWW.SUBSONIC.COM

#### Precautions for use

#### 1. INTRODUCTION

Thank you for purchasing the POWER ADAPTER.

Please read this document carefully before using this product. Please keep this document for future reference.

#### 2. IMPORTANT

This power supply is compatible with any 220-240 V AC wall socket.

It enables you to recharge your Nintendo Switch\* system even while you play.

Do not try to charge a device other than the compatible ones, that could lead to damage the device, risk of short circuits, fire, electric shock, etc.

The charger has been designed for domestic use only.

#### 3. SAFETY INSTRUCTIONS

- The power supply should be plugged into an easily accessible socket that is near the equipment to be charged. It shall remain readily operable during the use.
- Do not use the charger near water. It shall not be exposed to dripping or splashing and should be kept away from direct contact with liquids.
- For an external cleaning, use a soft, clean and dry cloth only.
- Main plug is used as the disconnect device. To disconnect equipment, unplug the charger from the wall socket.
- Do not store your charger in a dusty or dirty location. The charger parts and electrical

components can be damaged.

- Do not store the charger in areas where it may be exposed to high temperatures. High temperatures can deform or melt certain plastic parts.
- Do not store the charger in areas where it may be exposed to low temperatures. When
  the charger returns to its normal temperature, humidity can form inside it and damage
  the electronic circuits.
- Do not attempt to open the charger. If the power supply, the plug or the external cable are damaged, do not use the charger.
- Do not use the charger outdoors.
- Never leave the charger plugged in when not in use or when left unattended.
- Unplug the charger during lightning storms.
- Use of this product by children should only be allowed with the full supervision of a parent or legal guardian.

#### 4. CONTACT AND SUPPORT

The Subsonic team is at your service and happy to provide you with any additional information on the charger or other Subsonic products.

contact@subsonic.com

### 5. ENVIRONNEMENTAL SAFETY

In order to protect the environment, electric and electronic equipment should not be disposed of in household trash. Please dispose of this equipment at your nearest recycling center.

## **Documents / Resources**



SUBSONIC Switch 2 Netzteil Power Adapter [pdf] Instruction Manual Switch 2 Netzteil Power Adapter, Switch 2 Netzteil, Power Adapter, Adapt er

### References

- User Manual
  - Adapter, Power Adapter, SUBSONIC, Switch 2 Netzteil, Switch 2 Netzteil Power
- SUBSONIC Adapter

## Leave a comment

Your email address will not be published. Required fields are marked\* Comment \* Name Email Website ☐ Save my name, email, and website in this browser for the next time I comment. **Post Comment** Search: e.g. whirlpool wrf535swhz Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.