

SUNBEAM FPSBHS0302 HAND-STAND MIXER



## Sunbeam FPSBHS0302 Hand-Stand Mixer User Manual

[Home](#) » [Support](#) » Sunbeam FPSBHS0302 Hand-Stand Mixer User Manual 

### Contents

- [1 Sunbeam FPSBHS0302 Hand-Stand Mixer](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 SPECIAL INSTRUCTIONS](#)
- [4 Features](#)
- [5 ACCESSORIES](#)
- [6 OPERATING INSTRUCTIONS](#)
- [7 CARING & CLEANING OF YOUR MIXER](#)
- [8 Two-Year Limited Warranty](#)
- [9 Frequently Asked Questions](#)
- [10 References](#)

The Sunbeam logo, featuring the word "Sunbeam" in a red, cursive script font, with a red arc above the letters.

**Sunbeam FPSBHS0302 Hand-Stand Mixer**



### Hand-Stand Mixer

- FPSBHS0301
- FPSBHS0302
- [www.sunbeam.com](http://www.sunbeam.com)
- P.N. 139598



## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before use

- To protect against risk of electrical shock, do not put mixer in water or other liquid. This may cause personal injury or damage to the product.
- Close supervision is necessary when mixer is used by or near children or incapacitated persons.
- Unplug from outlet while not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not operate mixer with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. If the mixer becomes damaged please contact Consumer Services for assistance. (1-800-557-4825 in the U.S. or 1-800-667-8623 in Canada)
- The use of attachments not recommended or sold by Jarden Consumer Solutions may cause fire, electrical shock or injury.
- Do not use outdoors or for commercial purposes.
- Do not let cord hang over edge of table or countertop or touch hot surfaces, including the stove.
- Remove beaters from mixer before washing.
- Do not place mixer or bowl on or near a hot gas or electric burner, in a heated oven (microwave, convection, etc.) or on any other heated surface.
- Do not use mixer for other than intended use.
- Do not leave mixer unattended while it is operating.
- Any servicing, other than cleaning and user maintenance should be performed by any authorized service representative.
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.

- Don't Abuse Cord. Never carry the mixer by the cord or yank it to disconnect from an outlet; instead, grasp the plug and pull to disconnect.

If the use of an extension cord is necessary, please follow these guidelines:

- Use only extension cords having an electrical rating not less than the rating of the mixer.
- Examine the extension cord before using and do not use if damaged.
- Do not abuse the extension cord and do not yank on any cord to disconnect.
- Keep all cords away from heat and sharp edges.

THIS UNIT IS FOR HOUSEHOLD USE ONLY

- The motor of your mixer is protected by a heat cured insulation. This is a standard process. Due to the heat curing of the insulation, you may experience an odor and possibly a slight wisp of smoke from your mixer's motor. This effect will disappear after the first few uses.

## **SPECIAL INSTRUCTIONS**


- FOR PRODUCTS PURCHASED IN THE U.S. AND CANADA ONLY
- To reduce the risk of electrical shock, this appliance is equipped with a polarized plug (one blade is wider than the other). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature. Also, do not pull, twist or otherwise abuse the power cord; instead, grasp the plug and pull to remove from the outlet.

SAVE THESE INSTRUCTIONS


## **Features**

### **FEATURES OF YOUR HAND-STAND MIXER**

- A. Attachment Eject Button
- B. Speed Control Dial
- C. Burst of Power® Button

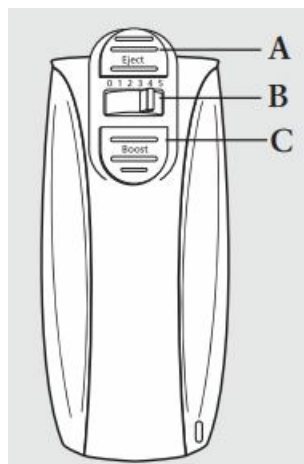


 - D. Ergonomic Handle
- E. Heel Rest
- F. Base
- G. Bowl
- H. Head Release
- I. Head Tilt

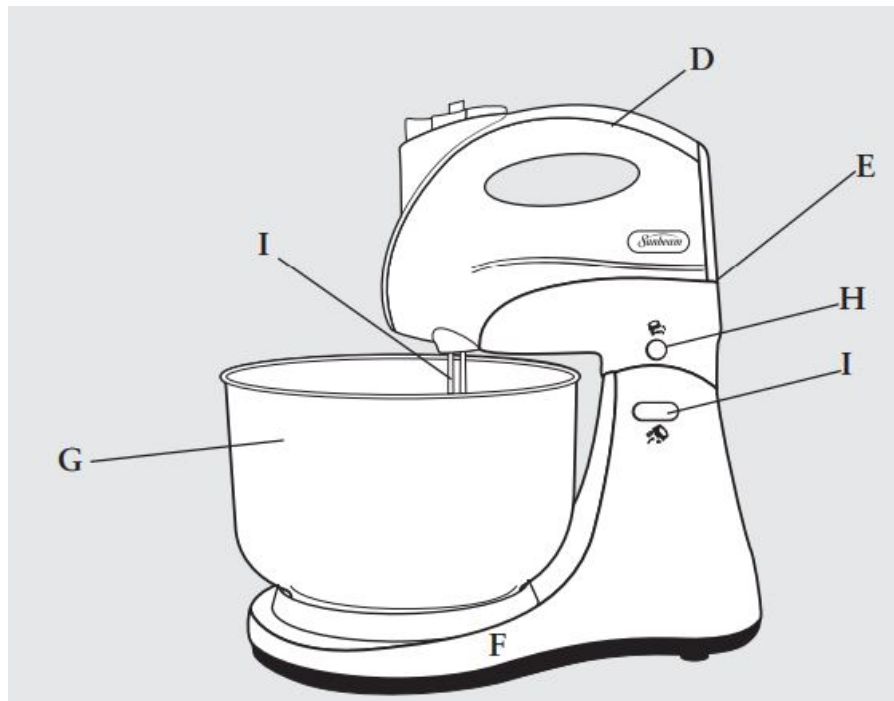

## ACCESSORIES

- J. Beaters (2)
- K. Dough Hooks

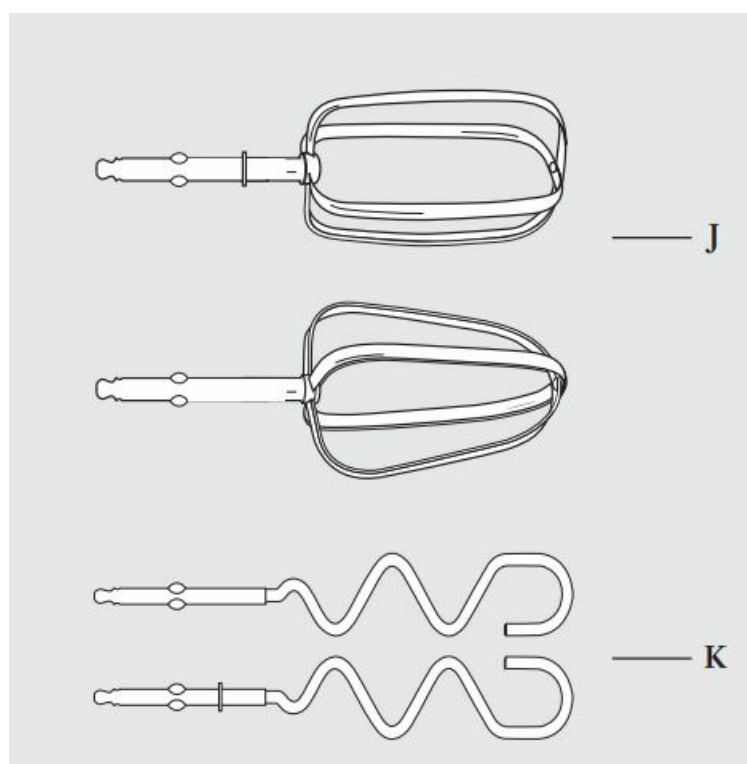

## FEATURES OF YOUR HAND-STAND MIXER

- A. Attachment Eject Button
- B. Speed Control Dial
- C. Burst of Power® Button – This feature allows for an added boost to the selected speed setting at the press of a button.
- D. Ergonomic Handle – The handle has been ergonomically designed to provide comfort to prevent hand fatigue during heavy or long mixing tasks.
- E. Heel Rest – The newly designed heel rest provides exceptional stability.
- F. Base – The bowl rest tab allows you to easily rest the hand mixer against the bowl to provide more stability and comfort while mixing.
- G. Bowl – For holding contents, use with Hand Mixer or mount to stand for Stand Mixer usage.
- H. Head Release – Button to release Hand Mixer portion from stand.
- I. Head Tilt – Button to tilt head back for easy bowl and accessory access.
- J. Beaters – For creaming butter and sugar, plus mixing cake batter.
- K. Dough Hooks – To knead light dough or other heavy batters.

## Helpful Hints

- When mixing liquids, especially hot liquid, add small quantities at a time to reduce spillage.
- Ingredients should be added to the mixing bowl as they are specified in the recipe.
- Use the mixing speed that is recommended in the recipe. Use the speed control dial of the mixer to help you find the correct speed to use.
- If times are specified in the recipe, use them! BE CAREFUL NOT TO OVERMIX. Overmixing can cause the mixture to become very tough.
- Should an object, such as a spatula, fall into the bowl while the mixer is operating, turn the mixer OFF immediately, then, remove the object.
- For easier clean-up remove beaters and rinse immediately with warm water.

## Mixing Guide

- Please keep in mind that the various mixing tasks and related speeds, listed in the table below, may vary slightly from recipe to recipe.
- For most recipes, it is better to begin your mixing on a slower speed until the ingredients begin combining, then move to the appropriate speed range for the particular task.
- When mixing larger quantities you may need to increase the hand-stand mixer speed due to the amount of mixing required and the larger load on the machine.

## Speed Guide for Hand-Stand Mixer

speed	Mixing Tasks	exaMple
0	Off	
1	Stir	Use when stirring liquid ingredients or when
		mixing dry and liquid together alternately in a
		recipe. Use when preparing any of the ready-
		prepared or packaged instant puddings
2	Mix	Use when a recipe calls for combining ingredients
		together. Use for quick breads or muffins that
		require a brisk action, just enough to blend.
3	Blend	Use when preparing cake mixes or for directions
		calling for a medium speed. Use to cream butter
		and sugar together.
4	Beat	Use when preparing a frosting from a recipe or package. Use when whipping cream for desserts.
5	Whip	Use to mash potatoes to develop a light and fluffy texture. Use when whipping egg whites.

### Preparing the Hand-Stand Mixer for Use




The Sunbeam® Hand-Stand Mixer has been designed to assist you in preparing delicious foods.

Before using your mixer for the first time, wash the attachments in hot, soapy water. Rinse and dry thoroughly.

Note: All attachments are dishwasher safe.

### Installing Attachments

Make sure the speed control is in the “0” position and mixer is unplugged from an electrical outlet. Insert attachments one at a time by placing stem end into the opening on the bottom of the mixer. Turn attachment slightly and push in until it clicks into position. (See Figure A) Plug into the appropriate outlet. Turn mixer on and adjust speed setting using the control on the top of the unit.

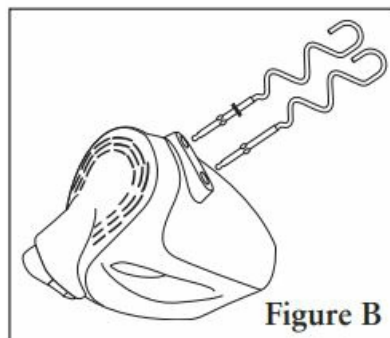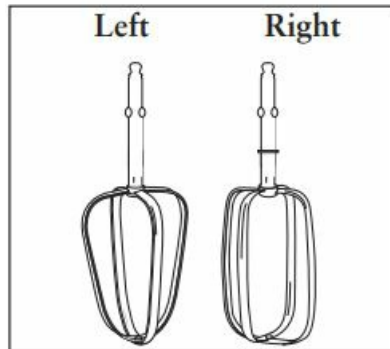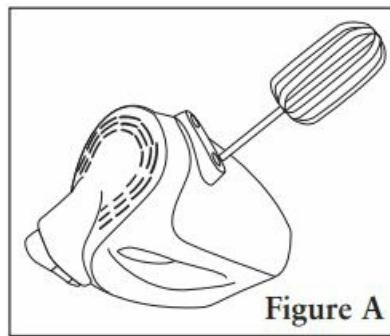

## Attachments

- Beaters – The beater design allows for thorough, fast mixing results for all types of batters.
- Dough Hooks – Use these hooks to knead light dough or other heavy batters.
- Use at lower speeds for best results.

**Note:** The dough hook with the collar fits into the left drive hole and the other one goes into the right. (See Figure B) If dough hooks do not click into the drive holes, reverse and try again.

## OPERATING INSTRUCTIONS

- When building up a recipe that requires the addition of dry ingredients, such as flour, slow the speed down while these ingredients are being added to avoid a snowstorm effect. Once the extra ingredients begin combining, slowly increase to the appropriate speed for the particular mixing task.

## USING AS A HAND MIXER

- Slowly guide mixer around the sides and through the center of the bowl, going in the same direction. Be careful not to over beat the mixture. Over beating tends to make some mixtures tough.
- Whenever scraping of the bowl is required, stop the mixer and scrape sides and bottom of bowl with a rubber



spatula as needed. Turn speed control to “0” and rest mixer on its heel rest while adding ingredients. Make sure to position beaters over mixing bowl so any drippings will fall back into the mixing bowl.

- When mixing is complete, set speed control to “1” and raise beaters slowly from batter to clean off clinging food. Make sure to turn unit to “0” before raising beaters completely out of mixing bowl.
- **SPEED CONTROL SWITCH** – The hand mixer features a 5 speed control switch. Move the switch with your finger from 0 to 5 (Off to High) for desired speed. Gradually move to higher speeds to reduce splattering of contents.
- **BURST OF POWER® BUTTON** – During especially heavy mixing tasks, press the button to drive through the mixture with ease. Once the button is released, the mixer will return to the original speed setting.
- **BEATER EJECT BUTTON** – Is a large separate button located at the top of the Hand Mixer portion. With the unit on “0”, push with thumb to release the beaters. There will be a noticeable “click” when ejecting beaters.

To attach the Hand Mixer to the Stand, tilt the Stand’s cradle (the top of the Stand that holds the Mixer) back and insert the Mixer’s front into the 2 slots. Then push the back of Mixer until it snaps into place. To remove the Mixer from the Stand, tilt the cradle back then grasp the Mixer firmly with hand and press the Release Button on the bottom of the cradle.



**Caution:** The Mixer should be unplugged from the electrical outlet and in the “Off” or “0” position when attaching to — or removing from the Stand.

## **RAISING AND LOWERING THE MIXING HEAD**

Press the head lock button, located on the neck of the Stand Mixer. While the button is depressed, hold the handle and ease the head of the Stand Mixer back, release the button, the Stand Mixer head will lock into this position. To lower the mixing head, press the head lock button. While the button is depressed, hold the handle and ease the head of the stand mixer down. A “click” sound will indicate when the mixing head is securely in position. Be sure the mixer head is securely in position before using.

Make sure the Hand Mixer is firmly attached to the base and the head is firmly down and locked into place before picking up or moving mixer.



## EJECTING BEATERS

Make sure the speed control is in the “0” position and unplugged from an electrical outlet. Scrape off any excess batter with a rubber spatula. Grasp the stems of the beaters with your hand and press the beater eject button.

## BOWL PLACEMENT

With Hand Mixer firmly attached, tip back head. Place bowl on the mixer turntable and rotate clockwise to lock bowl into position. To unlock hold turntable and rotate bowl counter-clockwise.

## CARING & CLEANING OF YOUR MIXER

- Before cleaning any part of the mixer, set the position selector to the “0” position, then unplug the cord from the outlet and eject the beaters. Make sure to wash and dry all non-electrical parts thoroughly before using them again.
- The mixer and cord are to be cleaned with a damp cloth but the final cleaning must be with a dry cloth. Do not immerse mixer or cord in liquids.
- To remove stubborn spots, wipe surfaces with a piece of cloth, slightly dampened, in soapy water or a mild, non-abrasive cleaner.
- The attachments and bowl may be washed in hot, soapy water or in a dishwasher.
- Do not use any abrasive cleaner or material to clean any part of the hand mixer, as it can harm the body of the product.

## STORAGE

- Store the hand mixer on its heel rest in a clean, dry location such as a cabinet or shelf. Store beaters in a

drawer or assembled on the stand, or assemble on the stand and store together.

## **MAINTENANCE**

- Other than the recommended cleaning, no further user maintenance should be necessary. If for any reason your hand mixer should require repairs, do not try to fix it yourself. Send it to the nearest Authorized Sunbeam Appliance Service Center.

## **Two-Year Limited Warranty**

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of two years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, a replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of the initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes, and tornadoes.

## **What are the limits on JCS's Liability?**

- JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied, or statutory warranty or condition.
- Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.
- JCS disclaims all other warranties, conditions, or representations, express, implied, statutory, or otherwise.
- JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential, or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against the purchaser by any other party.
- Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.
- This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state, or jurisdiction to jurisdiction.

## **How to Obtain Warranty Service**

## **In the U.S.A.**

- If you have any questions regarding this warranty or would like to obtain warranty service, please call 1.800.458.8407 and a convenient service center address will be provided to you.

## **In Canada**

If you have any questions regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

- PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR THE PLACE OF PURCHASE.
- PLEASE ALSO SEE [WWW.SUNBEAM.COM](http://WWW.SUNBEAM.COM)

FOR MORE INFORMATION

### **For product questions:**

Sunbeam Consumer Service

- **USA:** 1.800.458.8407
- **Canada:** 1.800.667.8623
- [www.sunbeam.com](http://www.sunbeam.com)

© 2010 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

SPR-041210

Made with 100% recycled paper

Printed in China

## **Frequently Asked Questions**

What makes the Sunbeam FPSBHS0302 Hand-Stand Mixer stand out from other models?

The Sunbeam FPSBHS0302 Hand-Stand Mixer stands out for its unique hand-stand design, offering versatility and convenience in one appliance.

How many speed settings does the Sunbeam FPSBHS0302 Hand-Stand Mixer have?

The Sunbeam FPSBHS0302 Hand-Stand Mixer features 5 different speed settings to cater to various mixing needs.

Is the Sunbeam FPSBHS0302 Hand-Stand Mixer suitable for heavy-duty mixing tasks?

While it is ideal for everyday baking and mixing tasks, the Sunbeam FPSBHS0302 Hand-Stand Mixer may not be suitable for heavy-duty mixing like kneading bread dough.

Does the Sunbeam FPSBHS0302 Hand-Stand Mixer come with attachments?

Yes, the Sunbeam FPSBHS0302 Hand-Stand Mixer comes with traditional beaters and dough hooks for added versatility.

What is the wattage of the motor in the Sunbeam FPSBHS0302 Hand-Stand Mixer?

The Sunbeam FPSBHS0302 Hand-Stand Mixer boasts a powerful 250-watt motor for efficient mixing performance.

Can the Sunbeam FPSBHS0302 Hand-Stand Mixer be used as a hand mixer as well?

Yes, the Sunbeam FPSBHS0302 Hand-Stand Mixer can easily convert to a traditional hand mixer for added flexibility in your kitchen.

Is the bowl included with the Sunbeam FPSBHS0302 Hand-Stand Mixer dishwasher safe?

Yes, the bowl that comes with the Sunbeam FPSBHS0302 Hand-Stand Mixer is dishwasher safe for easy cleaning.

What is the weight of the Sunbeam FPSBHS0302 Hand-Stand Mixer?

The Sunbeam FPSBHS0302 Hand-Stand Mixer is lightweight, making it easy to handle and store when not in use.

What safety features does the Sunbeam FPSBHS0302 Hand-Stand Mixer have?

The Sunbeam FPSBHS0302 Hand-Stand Mixer is equipped with safety features such as automatic shut-off to prevent overheating and ensure user safety.

What should I do if my Sunbeam FPSBHS0302 Hand-Stand Mixer won't turn on?

Check if the power cord is plugged in correctly and try resetting the mixer by unplugging it for a few minutes. If the issue persists, contact the manufacturer for further assistance.

How do I clean the Sunbeam FPSBHS0302 Hand-Stand Mixer after using it?

Disassemble the mixer and wash the bowl, beaters, and other removable parts with warm, soapy water. Rinse thoroughly and dry completely before reassembling the mixer.

What should I do if the Sunbeam FPSBHS0302 Hand-Stand Mixer starts to smoke or overheat?

Unplug the mixer immediately and let it cool down. If the issue persists, contact the manufacturer for further assistance.

**Download the PDF:** [Sunbeam FPSBHS0302 Hand-Stand Mixer User Manual](#)

**Reference:** [Sunbeam FPSBHS0302 Hand-Stand Mixer User Manual-device.report](#)

---

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.