




SUNCO LIGHTING 80755 Bi Level Dimming Sensor Instruction Manual

[Home](#) » [Sunco Lighting](#) » SUNCO LIGHTING 80755 Bi Level Dimming Sensor Instruction Manual 

SUNCO LIGHTING 80755 Bi Level Dimming Sensor Instruction Manual



PLEASE FIND A QUALIFIED ELECTRICIAN FOR INSTALLATION. Please read the instructions before you install and use the luminaire. WARNING, CAUTIONS AND OPERATING INSTRUCTIONS

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards read all warnings and instructions included with and on the fixture box and all fixture labels.
- Before installing, servicing, or performing routine maintenance upon this equipment, follow these general precautions.
- If you are unsure about the installation or maintenance of the luminaires, consult a qualified licensed electrician and check your local electrical code.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
- Turn off electrical power at fuse or circuit breaker box before installation or performing any maintenance.

- Avoid direct eye exposure to the light source while it is on.
- For use with POWER-SELECT™ HIGH BAYS, with an installed sensor socket.




WARNING DISCONNECT POWER BEFORE INSTALLING OR SERVICING.

Contents


- [1 SENSOR INSTALLATION](#)
- [2 GENERAL WIRING DIAGRAM](#)
- [3 SENSOR DEFAULT SETTINGS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

SENSOR INSTALLATION


1. Note: a sensor effects the whole fixture.

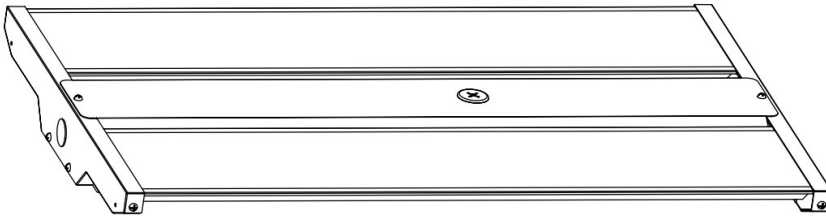


2. Remove sensor socket cover.

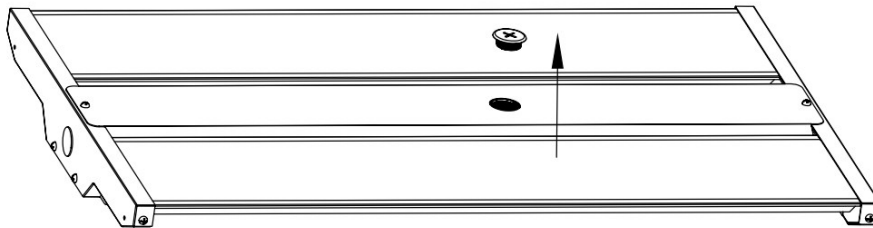


3. Expose sensor socket.

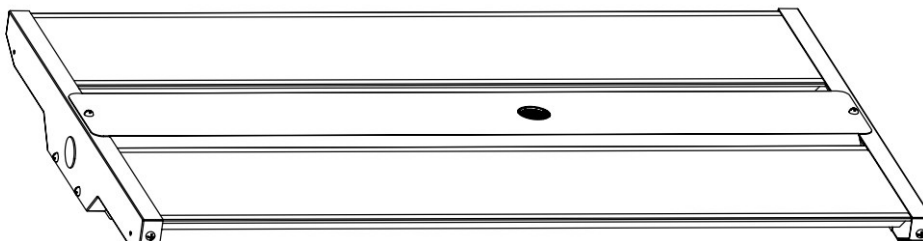


4. Plug in sensor.

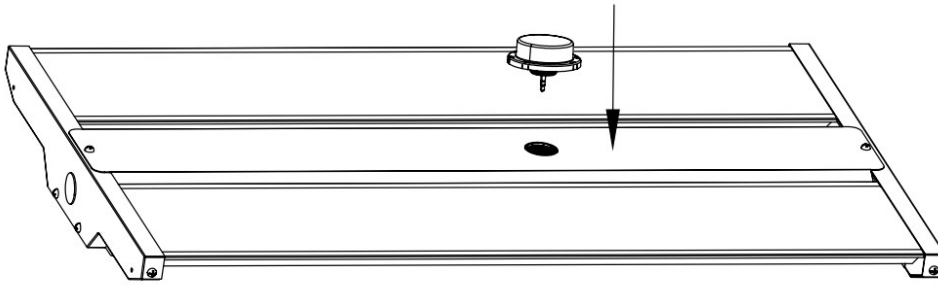


5. Turn clockwise to fasten sensor to the socket.

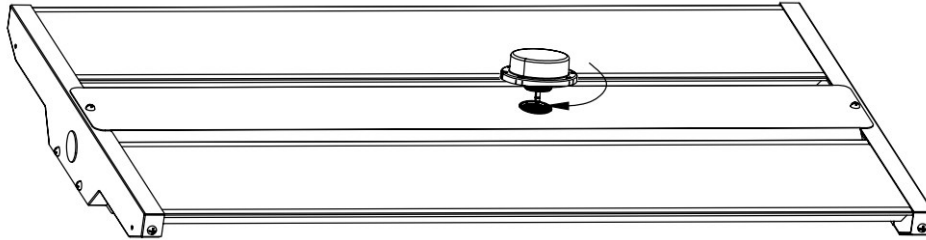

6. Installation complete, see sensor operating instructions.

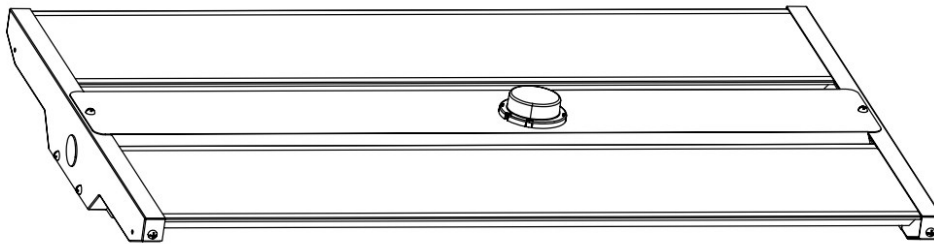

GENERAL WIRING DIAGRAM

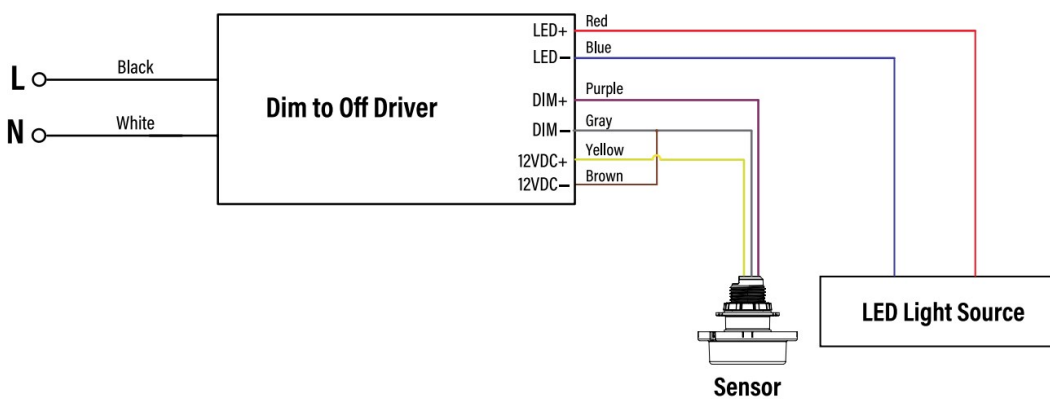


SENSOR DEFAULT SETTINGS

- **Trim Level:** 100%
- **Sensitivity:** High
- **Hold Time:** 5 min.
- **Stand-by Dim:** 50%
- **Stand-by Time:** 30min.

- **Photocell:** Of

Specifications subject to change without notice. Photos and line drawings may not be to scale and are for general reference only.

Documents / Resources

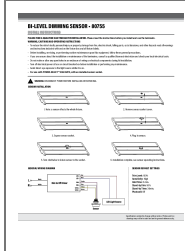

[SUNCO LIGHTING 80755 Bi Level Dimming Sensor](#) [pdf] Instruction Manual
80755, Bi Level Dimming Sensor, 80755 Bi Level Dimming Sensor, Dimming Sensor

[Manuals+](#)