


SUNLITE SLESA-U10 Easy Stand Alone USB and WiFi DMX Controller User Manual

[Home](#) » [sunlite](#) » SUNLITE SLESA-U10 Easy Stand Alone USB and WiFi DMX Controller User Manual 

SUNLITE SLESA-U10 Easy Stand Alone USB and WiFi DMX Controller User Manual

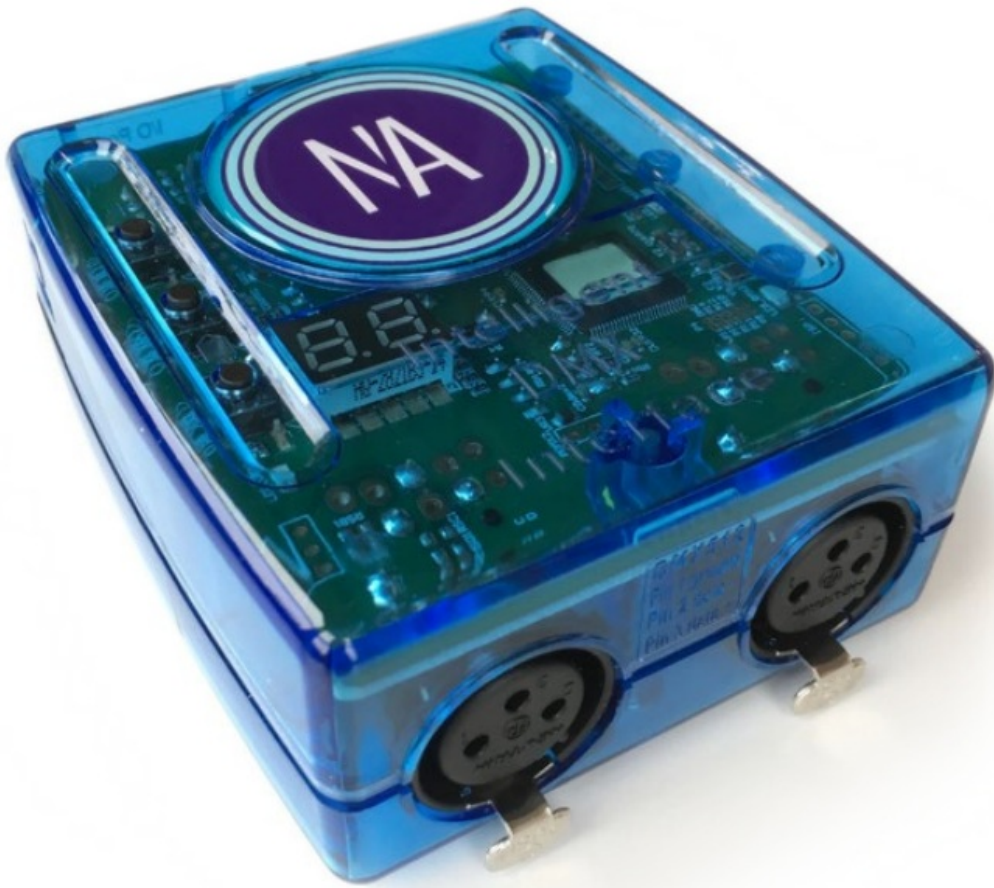

Contents

- 1 Overview
- 2 Key Features
- 3 Technical Data
- 4 CONNECTIVITY
- 5 Setting up the Controller
 - 5.1 iPhone/iPad/Android Control
- 6 Service
- 7 Troubleshooting
- 8 SUPPORT
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

Overview

The Stand Alone DMX controller can be used to control a wide variety of different DMX systems- from RGB/RGBW to more advanced moving and color mixing luminaires, DMX audio players and fountains. The controller comes with a variety of features including 512 DMX channels (expandable to 1,024), iPhone/iPad/Android remote control, WiFi facilities, dry contact port triggering and flash memory. The lighting levels, colors and effects can be programmed from a PC, Mac, Android, iPad or iPhone using the included software.

Key Features

- DMX Stand Alone controller
- USB & WiFi connectivity for programming/control
- Up to 2 DMX512 universes in live and stand alone
- Stand Alone mode with 99 scenes
- 100KB flash memory for storing stand alone programs
- 8 dry contact trigger ports via HE10 connector
- Network communication. Control lighting remotely
- OEM customization
- Windows/Mac software to set dynamic colors/effects
- iPhone/iPad/Android remote and programming apps
- SUT Technology allows the device to be used with other Nicol Audie Group software via an online upgrade.
Note: feature compatibility depends on which application is being used with the controller and which SUT add-ons have been purchased

Technical Data

- **Input Power:** 5-5.5V DC 0.6A
- **Output Protocol:** DMX512 (x2)
- **Programmability:** PC, Mac, Tablet, Smartphone
- **Connections:** USB-C, 2x XLR3, 2x HE10, battery
- **Memory:** 100KB flash
- **Environment:** IP20. 0°C – 50°C

- **Buttons:** 2 buttons to change scene 1 button to change dimmer
- **Dimensions:** 79x92x43mm 120g
- **Complete Package:** 140x135x50mm 340g
- **OS Requirements:** Mac OS X 10.8-10.14 Windows 7/8/10
- **Standards:** Low voltage, EMC, and RoHS

CONNECTIVITY

Live use with a computer



Stand Alone or live use with a smartphone/tablet




External HE10





- **P1** PORT 1
- **P2** PORT 2
- **P3** PORT 3
- **P4** PORT 4
- **P5** PORT 5
- **P6** PORT 6
- **P7** PORT 7
- **P8** PORT 8
- **GND** Ground

Internal HE10

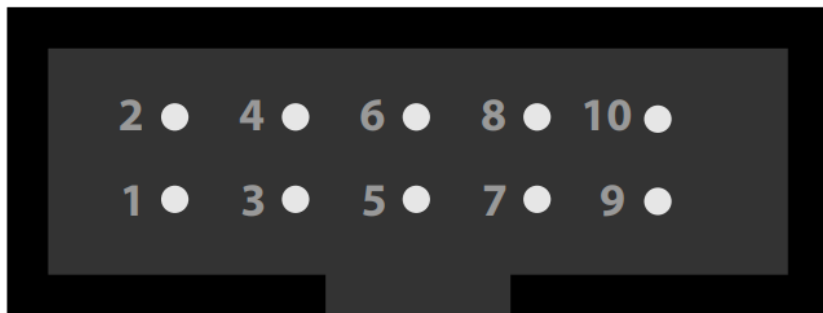

1. Ground
2. Dimmer
3. DMX1+
4. PREVIOUS
5. DMX1-
6. NEXT
7. Zone
8. LED DMX
9. VUSB
10. LED USB

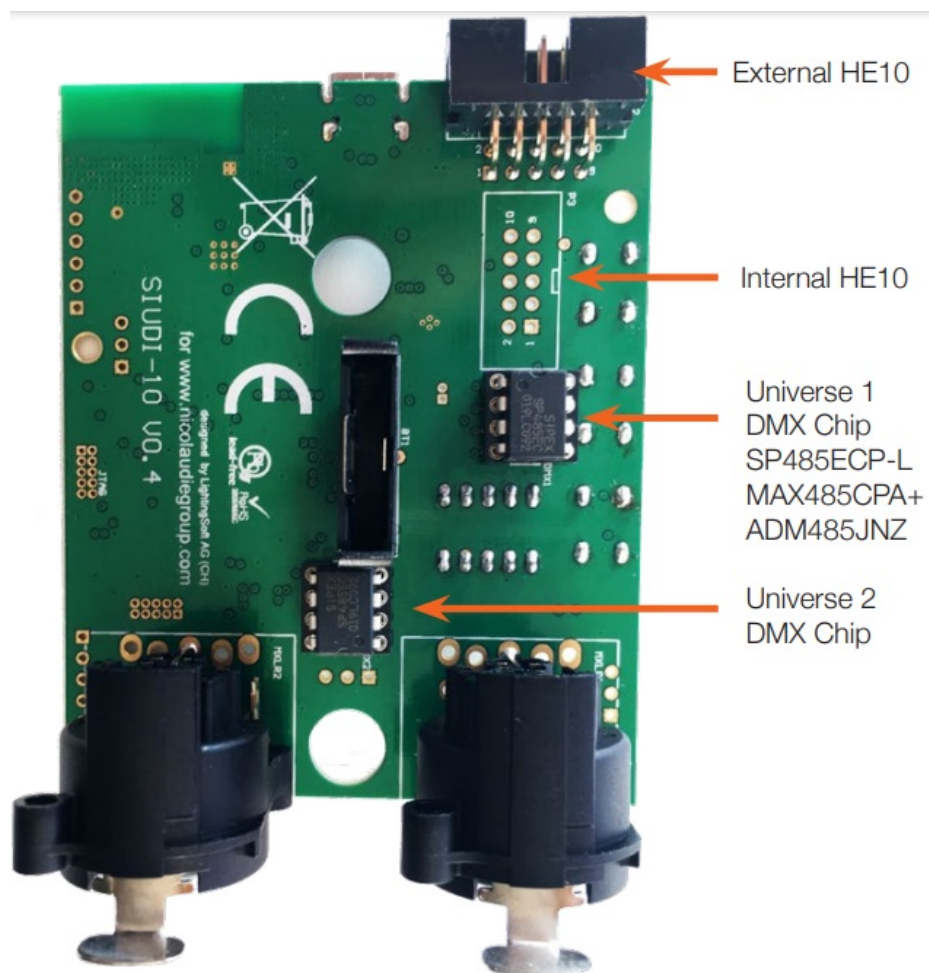

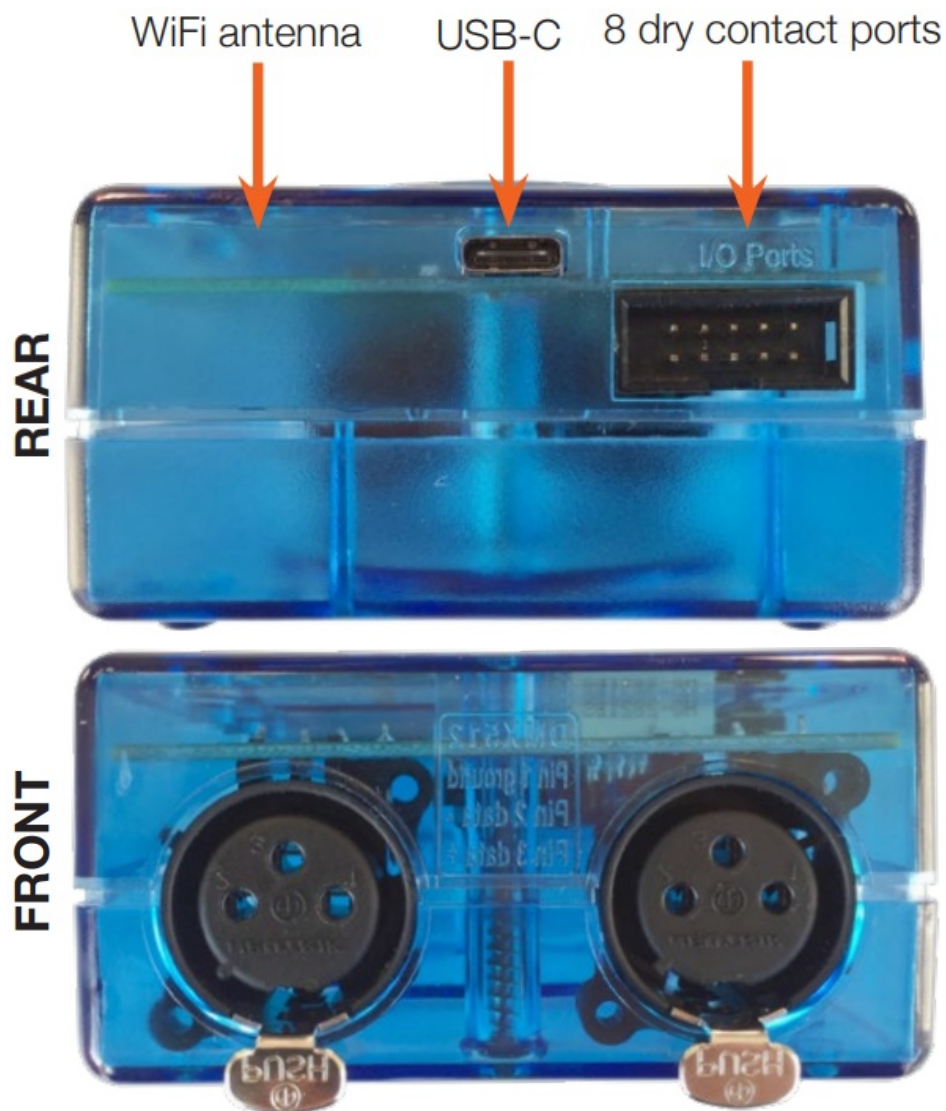

Universe #1

1. DMX1 ground
2. DMX1 data
3. DMX1 data+

Universe #2

1. DMX2 ground
2. DMX2 data
3. DMX2 data+

Setting up the Controller

Network Control

The controller can be connected directly from a computer/smartphone/tablet (Access Point Mode), or it can be connected to an existing local network (Client Mode).

The controller will work in Access Point (AP) Mode by default. See Programming the Controller for further information

- In AP Mode, the default network name is Smart DMX Interface XXXXXX where X is the serial number.

For serial numbers below 179001 the default password is 00000000.

For serial numbers above 179000 the default password is smartdmx0000

- In Client Mode, the controller is set, by default, to get an IP address from the router via DHCP. If the network is not working with DHCP, a manual IP address and subnet mask can be set.

If the network has a firewall enabled, allow port 2430

Upgrades

The controller can be upgraded at store.dmxsoft.com.


Hardware features may be unlocked and software upgrades may be purchased without the need to return the controller.

Dry Contact Port Triggering

It is possible to start scenes using the input ports (contact closure).

To activate a port, a brief contact of at least 1/25 second must be established between the ports (1...8) and the ground (GND) using the external HE10 connector.

Note: the scene will not be switched off when the switch is released.

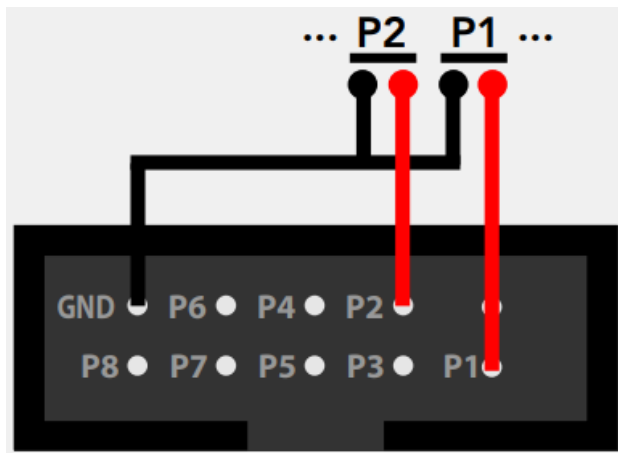

iPhone/iPad/Android Control

Easy Remote Pro

Create an entirely customized remote controller for your tablet or smartphone.

Easy Remote is a powerful and intuitive app allowing you to easily add buttons, color wheels (*) and faders.

Connect to a WiFi network and the app will find all compatible devices. Available for iOS and Android.

Note: Color wheel and color selection remote control functions are not supported with this model of controller.

Light Rider

Designed for live use, moving and color effects can be created automatically to create an automated light show.

Light Rider SUT license required.

UDP Triggering

The controller can be connected to an existing automation system over a network and triggered via UDP packets on port 2430.

Refer to the remote protocol document for more information.

Programming the Controller

The controller can be programmed from a PC, Mac, Tablet or Smartphone using the software available on our website.

Refer to the corresponding software manual for more information.

The firmware can be updated using the Hardware Manager which is included with the programming software and also available on the App Store.

ESA2 Software (Windows/Mac) – Single Zone

<http://www.nicolaudie.com/esa2.htm>

Hardware Manager (Windows/Mac/iPhone/iPad) – Firmware, clock..

<https://storage.googleapis.com/nicolaudie-eu-tools/Release/HardwareManager.exe>

<https://storage.googleapis.com/nicolaudie-eu-tools/Release/HardwareManager.dmg>

The iPhone/iPad version can be found on the app store

Service

Servia cable parts include:

- DMX Chips – used to drive the DMX (see p2.)

Troubleshooting

'88' is showing on the display

The controller is in bootloader mode.

This is a special 'startup mode' which is run before the main firmware loads.

Try re-writing the firmware with the latest hardware manager

'EA' is displayed

There is no show on the device.

The controller is not detected by the computer

- Be sure that the latest software version is installed from our website
- Connect by USB and open the Hardware Manager (found in the software directory). If it is detected here, try to update the firmware.

If it is not detected, try the method below.

- Bootloader Mode

Sometimes the firmware update may fail and the device may not be recognized by the computer.

Starting the controller in 'Bootloader' mode forces to the controller to start at a lower level and in some cases allows the controller to be detected and the firmware to be written.

To force a firmware update in Bootloader Mode:

1. Power off your interface
2. Start Hardware Manager on your computer
3. Press and hold the dimmer button (marked 'PB_ZONE' on PCB) and connect the USB cable at the same time.
If successful, your interface will appear in Hardware Manager with the suffix _BL.
4. Update your firmware

'LI' is showing on the display

This stands for 'LIVE' mode and means that the controller is connected and running live with a computer, tablet or smartphone.

The lights are not responding

- Check the DMX +, – and GND are connected correctly
- Check that the driver or lighting fixture is in DMX mode
- Be sure that the DMX address has been set correctly
- Check there are no more than 32 devices in the chain
- Check that the red DMX LED is flickering. There's one by each XLR
- Connect with the computer and open Hardware Manager (found in the software directory). Open the DMX Input/output tab and move the faders.

If your fixtures respond here, it is possibly a problem with the show file

What do the LED's on the controller signify?

- **Blue:**
- **ON:** Connected but no data transmission
- **Flickering:** WIFI activity
- **OFF:** no Wi-Fi connection
- **Yellow:** The device is receiving power
- **Red:** Flickering indicates DMX activity
- **Green:** USB activity

SUPPORT

www.nicolaudie.com

Documents / Resources

References

- [!\[\]\(2a133ebb0337313d16cc068f19494aa2_img.jpg\) Webstore | Dmxsoft](#)
- [!\[\]\(e5831951c2bb646a242d812c288ddabc_img.jpg\) Easy Stand Alone 2 DMX lighting software for Mac and PC](#)
- [!\[\]\(767ddc536c5331f5333c7801240a378b_img.jpg\) Nicolaudie Architectural - lighting control, DMX, DALI, LED, RGB...](#)
- [!\[\]\(7379045168890876f99aa36845a7ccf9_img.jpg\) storage.googleapis.com/nicolaudie-eu-tools/Release/HardwareManager.dmg](https://storage.googleapis.com/nicolaudie-eu-tools/Release/HardwareManager.dmg)
- [!\[\]\(42f4a0fde8ff3fc8d2b462e1f7f61ba8_img.jpg\) storage.googleapis.com/nicolaudie-eu-tools/Release/HardwareManager.exe](https://storage.googleapis.com/nicolaudie-eu-tools/Release/HardwareManager.exe)