



Home » SUNNIMAX » SUNNIMAX B0967RMG9N 10×10 Pop up and Instant Canopies Instruction Manual ₹

Contents [hide]

- 1 SUNNIMAX B0967RMG9N 10×10 Pop up and Instant Canopies
- 2 Specifications
- 3 Setup Instructions
- 4 Usage Tips
- 5 Safety Precautions
- 6 FAQS
- 7 Documents / Resources
 - 7.1 References

SUNNIMAX

SUNNIMAX B0967RMG9N 10×10 Pop up and Instant Canopies



Specifications

- Easy and quick to set up
- Includes guy ropes and weight bags for stability
- Temporary use only, not for permanent installation
- Material: Durable fabric
- Dimensions: Various sizes available

Usage Tips

- Do not leave the canopy unattended in harsh weather conditions.
- Always use the guy ropes and weight bags for addedstability.
- Ideal for temporary use only, avoid permanent installation.

Maintenance Guidelines

- Cleaning: Use mild soap and water to clean the canopy fabric.
- Avoid harsh chemicals or pressure washers that may damage the material.
- Allow the fabric to dry completely before storing to prevent mold and mildew.
- Storage: Store in a dry, cool place to maintain the canopy's condition.
- Ensure the canopy is completely dry before packing it away.

Setup Instructions

- Choose Location: Select a flat, stable surface free from overhead obstacles.
- Unpack & Unfold: Remove the canopy from its carrying bag. With two people, gently
 pull the frame outward until it is partially expanded.
- Attach Canopy Top (if not pre-attached): Drape the fabric over the frame and secure with Velcro or hooks at each corner.
- Fully Expand: Pull the frame outward until fully extended. Secure each corner by locking the slider brackets into place.
- Adjust Height: Extend the legs to your desired height using the push-button or telescopic system.
- Secure in Place: Use stakes or weight bags to anchor each leg, especially in windy conditions.

Usage Tips

- Do not leave the canopy unattended in harsh weather.
- Always use the guy ropes and weight bags for added stability.
- Ideal for temporary use only; not designed for permanent installation.

Maintenance Guidelines

- Cleaning: Use mild soap and water. Avoid harsh chemicals or pressure washers. Allow fabric to dry completely before storing.
- Storage: Always store in a dry, cool place. Ensure the canopy is completely dry before packing to prevent mold and mildew.
- Inspection: Regularly check for loose screws, worn parts, or tears in the fabric.
 Replace damaged components promptly.

Safety Precautions

Not intended for use during heavy rain, snow, or strong winds. Keep clear of power lines and flammable materials. Ensure all frame locks are secure before use.

FAQS

Q: Can I leave the canopy set up overnight?

A: It is not recommended to leave the canopy unattended for long periods, especially in harsh weather conditions. Always supervise its use.

Q: How should I store my canopy when not in use?

A: Store the canopy in a dry, cool place. Ensure it is completely dry before packing it away to prevent damage.

Q: Can I use the canopy in windy conditions?

A: The canopy is not suitable for use in strong winds. Always use the provided guy ropes and weight bags for added stability.

Documents / Resources



SUNNIMAX B0967RMG9N 10x10 Pop up and Instant Canopies [pdf] Instr

uction Manual

B0967RMG9N 10x10 Pop up and Instant Canopies, B0967RMG9N, 10x1 0 Pop up and Instant Canopies, Pop up and Instant Canopies, Instant Canopies

References

- User Manual
- **■** SUNNIMAX
- ♦ 10x10 Pop up and Instant Canopies, B0967RMG9N, B0967RMG9N 10x10 Pop up and Instant Canopies, Instant Canopies, Pop UP and Instant Canopies, SUNNIMAX

Leave a comment

Your email address will not be published. Required fields are marked*
Comment *
Name
Email
Website

Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.