

SUNORA CLAIRE Rechargeable LED Table Lamp With Wireless Charging 2.2W User Manual

<u>Home</u> » **<u>SUNORA</u>** » **SUNORA** CLAIRE Rechargeable LED Table Lamp With Wireless Charging 2.2W User Manual



Contents

- 1 SUNORA CLAIRE Rechargeable LED Table Lamp With Wireless Charging
- **2.2W**
- **2 SAFETY INSTRUCTIONS**
- **3 PARTS IDENTIFICATION**
- **4 OPERATION OF THE DEVICE**
- **5 BATTERY CHARGING**
- 6 CLEANING
- 7 Documents / Resources
 - 7.1 References



SUNORA CLAIRE Rechargeable LED Table Lamp With Wireless Charging 2.2W



PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Read the operating instructions carefully before putting the product into operation and keep the instructions, the receipt and, if possible, the box with the internal packing. If you give this product to other people, please also pass on the operating instructions.

USER MANUAL SYMBOLS

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the machine:

WARNING: This sign warns you of dangers to your health and indicates possible injury risks.

CAUTION: This sign refers to possible hazards to the machine or other objects.

NOTE: This sign highlights tips and information.

SAFETY INSTRUCTIONS


- 1. Do not use the device for any purpose other than that described in this user manual.
- 2. This device can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, provided that they use it under supervision or have been instructed in its safe use and understand the potential risks.
- 3. Keep the device and its cord out of the reach of children.
- 4. Children should not play with the device.
- 5. Cleaning and maintenance of the device must not be done by children without supervision.
- 6. Always place and use the device on a dry, stable, flat, horizontal and heat-resistant surface.
- 7. Do not place the device on a small, uneven or any other surface that may cause the device to tip over or fall.
- 8. Keep the device away from heat sources, direct sunlight, moisture (never immerse it in liquids) and sharp edges.
- 9. Do not immerse the device or cable in water or any other liquid.
- 10. Do not leave the device unattended. If you leave the area, always switch off the device.

- 11. If cracked or damaged, the protective cover and light source cannot be replaced.
- 12. To charge the battery, use only a certified USB power supply unit. Using any other power supply unit may damage the battery or cause an explosion!

For simultaneously charging of 6, 12 or 18 table lamps, please use SONORA CS 6, CS 12 or CS 18 charging stations (sold separately)

PARTS IDENTIFICATION

- 1. On/off/brightness adjustment pull cord
- 2. Support base
- 3. Charging plate

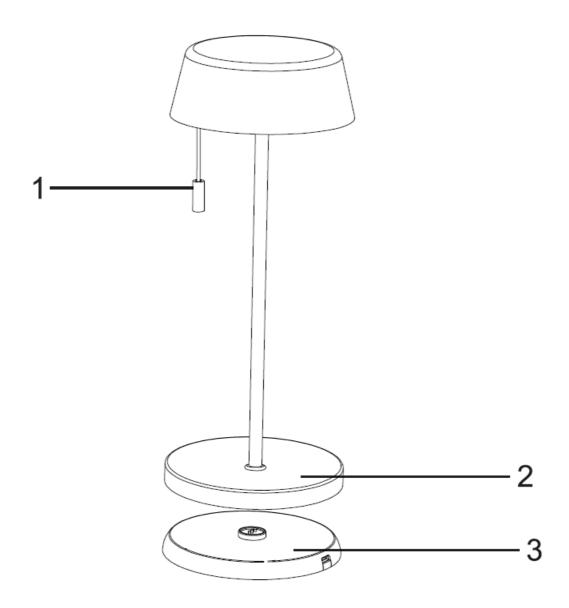

OPERATION OF THE DEVICE

- 1. Read all instructions carefully and keep them for future reference.
- 2. Remove all packaging materials and keep out of reach of children.
- 3. Remove any sticker or storage cover.
- 4. Pull down on the pull cord to activate the device. The light of the lamp will turn on at the lowest brightness.

- 5. Pull the cord down again to switch to medium brightness.
- 6. Pull the cord down again to switch to the highest brightness.
- 7. Pull the cord down one last time to turn off the device.

BATTERY CHARGING

The device works using an integrated 4000 mAh lithium battery, with a charging requirement of 5V/1A.

- 1. To charge the device, connect the plug of the charging plate to a USB power supply unit.
- 2. Then place the lamp on the charging plate.
- 3. The indicator light at the top of the device will light up and stay red throughout the charging process. When the light turns green, charging will be complete.

CAUTION: The integrated lithium battery is not replaceable.

CLEANING

- 1. Always unplug the device from the power supply before cleaning it.
- 2. Never immerse the device in water or any other liquid and do not rinse it with tap water.
- 3. Wipe the housing of the device with a soft, damp cloth. Do not use a wire brush or reinforced cleaners.

STORAGE

- 1. Always switch off the device before storing it.
- 2. Always store the device in a safe and clean place. To best protect the device, store it in its original packaging.
- 3. Do not store the device near hot or wet surfaces.



DISPOSAL OF APPLIANCE AND ACCESSORIES

This symbol appearing on the product, its accessories or accompanying manuals indicates that the product and its electronic accessories should not be disposed of with other household trash. In order to avoid possible harmful effects on the environment or health due to uncontrolled waste

disposal, please separate these products from other types of waste and recycle them.

Household users should contact either the store where they purchased this product or their local services for details of where and how they can return these products for environmentally safe recycling.

DISPOSAL OF BATTERIES

This marking on the battery, manual or packaging indicates that the batteries of this product should not be disposed of with other household waste at the end of their life cycle.

e-mail: <u>info@sun.gr</u> <u>www.sonora.com.gr</u>

Documents / Resources



SUNORA CLAIRE Rechargeable LED Table Lamp With Wireless Charging 2.2W [pdf] User

/lanual

CLAIRE Rechargeable LED Table Lamp With Wireless Charging 2.2W, CLAIRE, Rechargeable LED Table Lamp With Wireless Charging 2.2W, LED Table Lamp With Wireless Charging 2.2W, Lamp With Wireless Charging 2.2W, Wireless Charging 2.2W, Charging 2.2W, 2.2W

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.