



sunstech TAB1011 Tablet User Guide

[Home](#) » [sunstech](#) » sunstech TAB1011 Tablet User Guide 

Contents

- 1 sunstech TAB1011 Tablet
- 2 SAFETY
- 3 SIM CARDS INSTALATION
- 4 USING THE SIM CARDS
- 5 MEMORY CARD INSTALATION
- 6 CHARGING THE BATTERY
- 7 BUTTONS
 - 7.1 Multifunction On/Off button
 - 7.2 Volume Increase and Decrease buttons
- 8 CHANGE TABLET'S VIEW
- 9 USING THE TOUCH SCREEN
 - 9.1 Touch
 - 9.2 Swipe
 - 9.3 Triple click
 - 9.4 Hold and swipe
 - 9.5 Slide in and out
- 10 COMPUTER CONNECTION
- 11 APPLICATIONS
- 12 ADDING CONTACTS
- 13 COMMUNICATION
- 14 SETTINGS
- 15 USERS & ACCOUNTS. ADD A NEW ACCOUNT
- 16 CONNECTED DEVICES
- 17 APPS & NOTIFICATIONS
- 18 BATTERY
- 19 DISPLAY
- 20 SOUND
- 21 STORAGE
- 22 SECURITY
- 23 ACCESSIBILITY
- 24 GOOGLE
- 25 SYSTEM
 - 25.1 LANGUAGES & IMPUT
 - 25.2 GESTURES
 - 25.3 DATE & TIME
 - 25.4 ABOUT TABELT
 - 25.5 SYSTEM UPDATE
 - 25.6 RESE T OPITIONS
 - 25.7 ABOUT TABELT
- 26 SAFE USE OF THE BATTERY
- 27 MAINTENANCE OF THE DEVICE
 - 27.1 Use of the manual
- 28 SPECIFICATIONS
- 29 POWER ADAPTER INFORMATION
 - 29.1 WARNINGS
- 30 Documents / Resources
- 31 Related Posts

sunstech[®]



SAFETY

Read these guidelines carefully. Not following them may be dangerous or illegal.

DO NOT RISK

All wireless devices may cause interferences, which could affect the performance of other devices. Do not switch on the device when the use of mobile phones is prohibited or if it might cause interference or danger

RESTRICTED AREAS

Switch OFF the device in an airplane since it may disturb the operation of other equipment located therein. The device may interfere with operation of the medical equipment in hospitals and health protection entities. Abide by any kinds of prohibitions, regulations and warnings conveyed by the medical staff.

PETROL STATIONS

Always turn off the device while refueling your car on petrol station. Do not use your device close to chemicals.

WI-FI (WLAN)

WLAN network may be used indoors without any restrictions.

ROAD SAFETY

Do not use this device while driving any kind of vehicle.

QUALIFIED SERVICE

Only qualified personnel or an authorized service center may install or repair this product. Repairing by an unauthorized or unqualified service may cause device damage and warranty loss.

CHILDREN AND PHYSICALLY OR MENTALLY DISABLED PEOPLE

This device should not be operated by people (including children) with limited physical or mental abilities, as well as by people with no earlier experience in operation of electronic equipment. They may use the device only under supervision of people responsible for their safety. This device is not a toy.

Memory card and SIM card are small enough to be swallowed by a child and cause choking. Keep the device and its accessories out of reach for children.

WATER AND OTHER LIQUIDS

Protect the device from water and other liquids. It can influence work and the life span of electronic components. Avoid using the device in environments with high humidity like kitchens, bathrooms or during rainy weather. Particles of water can cause the liquefaction of moisture in the device, and this may

have a negative impact on the work of electronic components.

BATTERY AND ACCESSORIES

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. The battery should be used according to its purpose. Do not destroy, impair or throw the battery into flames – it might be dangerous and may cause fire. Worn-out or impaired battery should be placed in a dedicated container. Excessive charging the battery can cause damage. Therefore a single battery charge should not last longer than 3 days.

Installing an incorrect battery type can cause an explosion. Never open the battery. Please dispose of battery according to the instructions. Disconnect an unused charger from power grid. In case of the charger wire damage, it should not be repaired but replaced with a new one. Use the original manufacturer's accessories only.

HEARING

To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.

EYESIGHT

To avoid eyesight damage do not look closely onto the flash light during its work. A strong beam of light may cause permanent eye damage!

The device and screen shots contained in this manual may differ from the actual product. Accessories attached to the set may differ from the illustrations included in manual. Options described in the manual are found in Android™ system. Those descriptions may differ, depending on the version of the operating system and applications installed on the device.

Important information

The majority of applications which can be installed on the device are mobile apps. Modus operandi of such applications may be different from their counterparts installed on a personal computer. Apps installed on the device may vary depending on country, region, and hardware specifications. The manufacturer is not liable for problems caused by third party software. The manufacturer is not responsible for anomalies that may occur when editing the registry settings and modifying the operating system software. Attempts to modify the operating system can cause malfunctions and problems with applications. It may cause a loss of warranty.

Notes: -.,



Android System

Android™ operating system – incredible opportunities are within your hand – all applications are available at any time; the latest Gmail™ email client or browser, it is only the beginning of what you can find in this device – the rest you will find in the online Google Play™. Android is a trademark of Google LLC.



Google Play

Manufacturer's tablets can use the applications purchased in Google Play. To do this you should register a individual Google™ account providing e-mail and password. After registration and acceptance of the rules you can use paid and free applications listed in the Google Play. Google and Android are trademarks of **Google LLC**



If any of the above items is missing or damaged, please contact us.



We advise to keep the container in case of any complaints. Keep the container out of reach of children.



 
Disposal of container in accordance with local regulations when it is no longer needed.

SIM CARDS INSTALATION

This tablet has dual SIM technology allowing the use of two mobile networks simultaneously. It has two slots – one is a dedicated nano SIM card slot and the other is a nano SIM card/ microSD card slot.

To insert the SIM card(s), first turn off the tablet. Use a needle or similar object to press the hole on the side of the SIM card tray. The tray will pop out, gently take it out and place the SIM card(s) onto the slot as shown in the illustration.

Then push the SIM card tray back into position

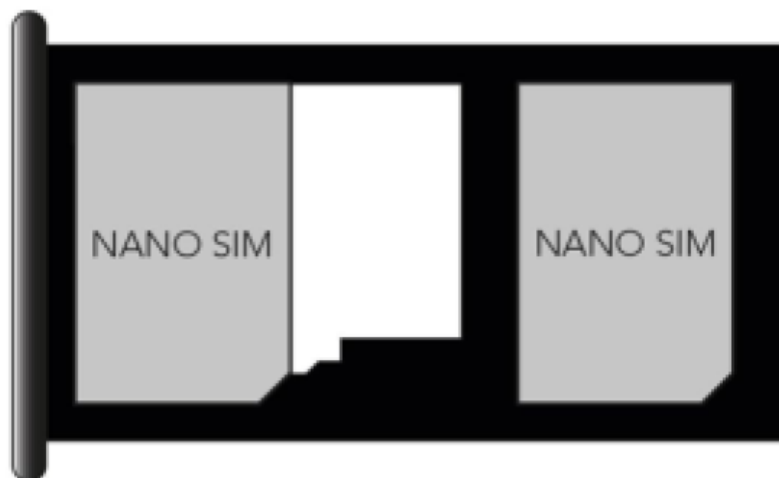


USING THE SIM CARDS

When you turn on the tablet after inserting the SIM cards, the tablet automatically identifies the SIM cards and you can see the signal information on the top bar. To change the SIM card settings, go to [Settings] > [Network & Internet] > [SIM cards].

Here you can choose one of the SIM cards as the preferred SIM for mobile data, calls and messages. This SIM will use 4G and the other SIM will use 3G.

MEMORY CARD INSTALATION

 To insert the microSD card, first turn off the tablet. Use a needle or similar object to press the hole on the side of the SIM card tray. The tray will pop out, gently take it out and place the microSD card onto the slot as shown in the illustration. Then push the SIM card tray back into position.

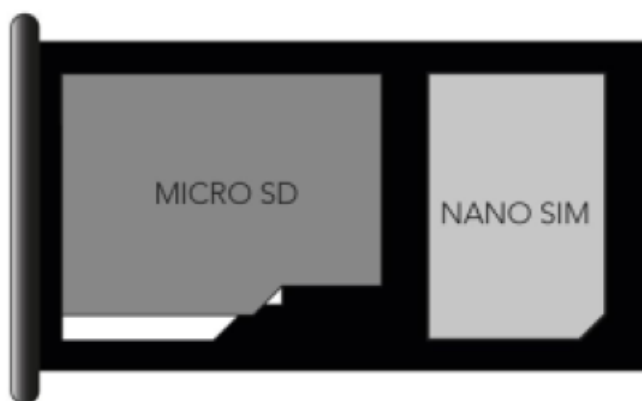

Supports up to 128GB microSD card with FAT32 format.



Use only memory cards recommended by the manufacturer.

Pay attention to the selection of the proper format-the microSD card, capacity and type / class. Incompatible memory cards may damage the device and cause the stored data to be destroyed as well. Incompatibility of memory card can be caused, among others, by an incorrect card format (required format microSD) or an unsupported card capacity – above the value recommended by the manufacturer.

CHARGING THE BATTERY

Charge the battery before the first use. The battery should be charged by the attached charger or another charger, intended for this type of equipment. If doubt contact the seller or manufacturer service. Use only chargers and wires recommended by the manufacturer. Using incompatible chargers or cables can cause explosion of the battery or damage to your device. When the battery is near a complete discharge, the notification is displayed on a low battery charge. To continue uses of the device charge the battery.

If the battery is completely discharged the device can not be switched on even when the loading process is ongoing. Before the device can be turned

on again, the battery has to be charged for at least a few minutes. In case of any problems with the battery or if in need of a replacement, the device should be delivered to the manufacturer's service center. To charge the battery, connect the micro USB plug to the socket in the device and the USB plug to the charger.



Incorrect charger connection (USB cable) can cause damage to the AC adapter or the device. The damages resulting from improper handling are not covered by the warranty.

Plug the charger into the wall socket. Once you start charging, an icon of the battery situated in the upper right corner will change to an animated symbol of lightning. If the device is turned off an animation depicting the level of battery charge should appear.



The device can heat up during charging. It is a regular occurrence and should not affect the stability or performance of the device.

 
When the charge reaches 100% it means that the battery is fully charged, finish the charging. Unplug the charger from the wall socket and from the device.



If the device does not charge properly deliver it with the charger to a service center of the manufacturer.

BUTTONS

On screen buttons

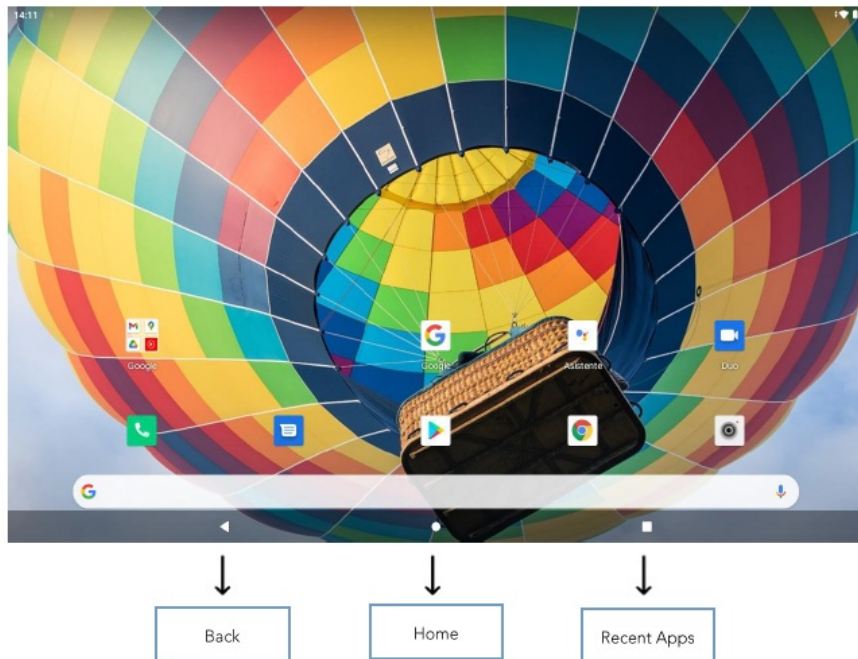

Recent Apps

Pressing it will cause the list of open apps to appear, where you can switch in-between or turn them off. Double quick press switches on the previously used application.

HOME

One quick press takes you to device desktop.
Longer press and release will turn on the Google search engine and access Google Now™ function.

BACK

Pressing <Back> will cause exit from the application/ return to the previous screen.

Multifunction On/Off button

One quick press locks/unlocks the screen.
If the device is off and you press the button for about 2 seconds, the device will switch on.
If the device is on and you press the button for about 2 seconds a menu will be displayed allowing you to shut down, restart, take screenshots, or make emergency phone calls.
You can also reset by pressing and holding the button until the device resets.

Volume Increase and Decrease buttons

If you press these buttons during a voice call, you will increase or decrease the audio connection volume.
If you press these buttons during an incoming call, you will mute the ringtone.
If you press these buttons when no calls are active, you will decrease or increase the volume of the ringtone or change the sound profile to "vibration only" or "alarms only".
If you press these buttons in any other app, you will control the volume level of the music, spoken instructions or other sounds.

CHANGE TABLET'S VIEW

The Auto-rotate feature allows you to change the view of the device. For landscape view, hold the tablet horizontally. For portrait view, hold the

 
tablet vertically.

To change the Auto-rotate setting, swipe down from the top of the screen to display notifications, and then touch the screen rotation icon to lock or unlock the screen rotation.

USING THE TOUCH SCREEN


The device lets you easily select items or perform different operations. Its touchscreen can be controlled by the following actions:

Touch

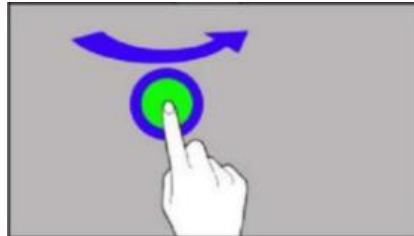


Touch one to start options, apps, menus, etc.

 Swipe

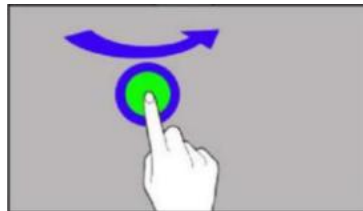


Quickly swipe up, down, to the left or to the right, to scroll through lists or the screen.

 Triple click

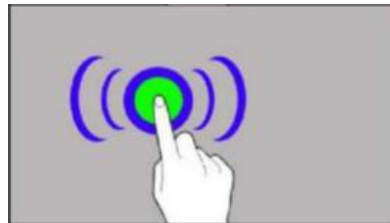


Quickly tap the screen three times to start zooming (only if this option is enabled in your device settings).

 Hold and swipe

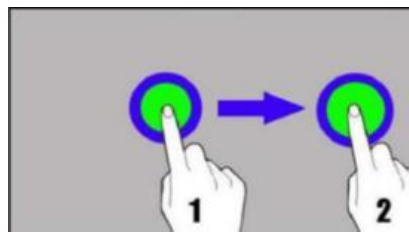

Touch an element (an icon perhaps) and hold it for about 1 second then swipe it to delete or uninstall.

 Slide in and out

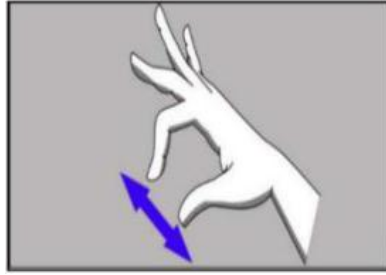

Touch the screen with two fingers and slide them together or apart to zoom in or out of a photo or a map.



The touch screen will be turned off after some time of inactivity. To turn on/off the screen press the Multifunction on/off button.

To set how long to wait before turning off the screen automatically, select [Settings] > [Display] > [Sleep].

COMPUTER CONNECTION

To connect to a PC computer with Microsoft Windows XP/Nista/7 /8/10 using the USB cable, plug the micro USB end of the USB cable into the socket in the device. Plug the other end of the cable into the socket of your computer.

 
 
When the device is plugged in, a screen will appear on your tablet with the fingerprint of the computer, here you will choose “Always allow from this computer” “OK” .

Next you need to connect the tablet to computer in [Settings] > [Connected devices]> [USB]. The default option is “charging the device via USB”, choose “File Transfer” if you wish to do so.

The Steps are shown below.





Check if the installed driver operating the device is correct. Search the driver list manually and choose “File Transfer”.

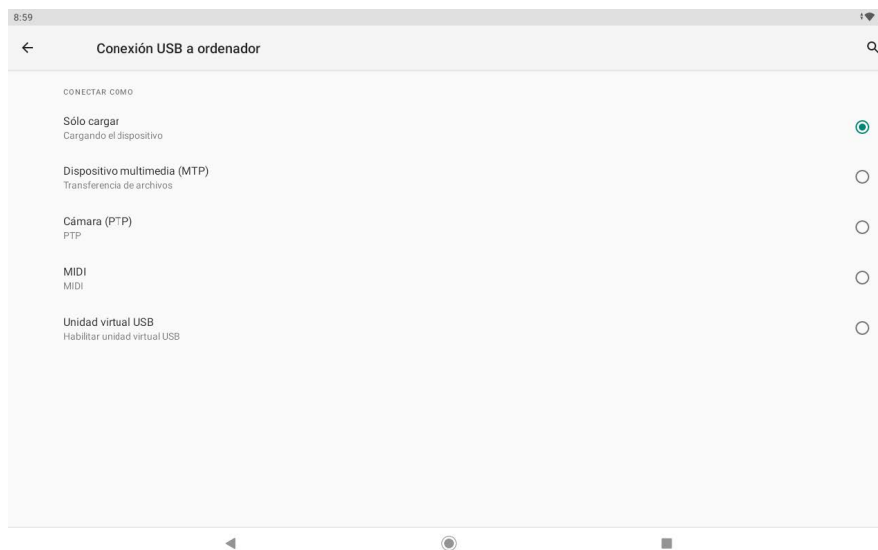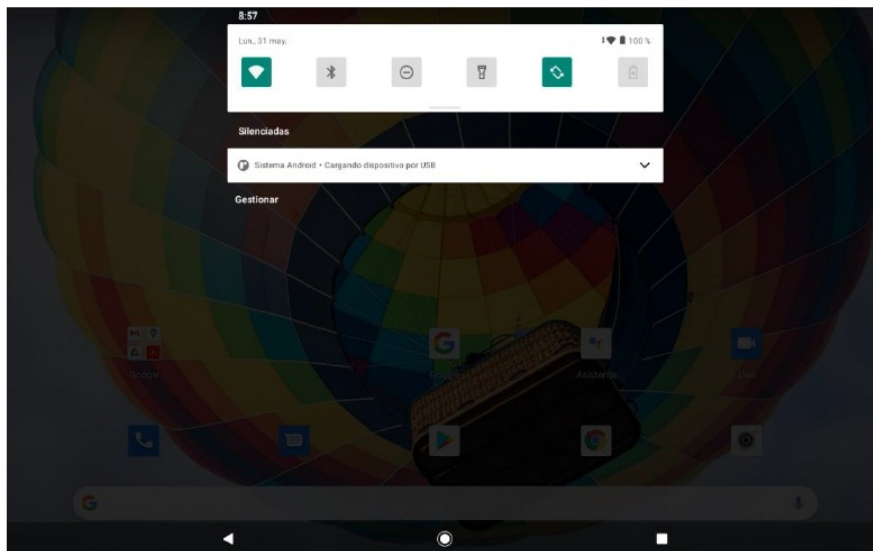


APPLICATIONS

  When running applications, you can make the most of the device. On screen desktop tap the icon [Application menu) to gain access to installed applications. To add a shortcut to an application on the desktop screen, press the application icon in the application menu and hold it. Then, when you change the view to the desktop view, select the place where you wish to create a shortcut and “drop” it in there.

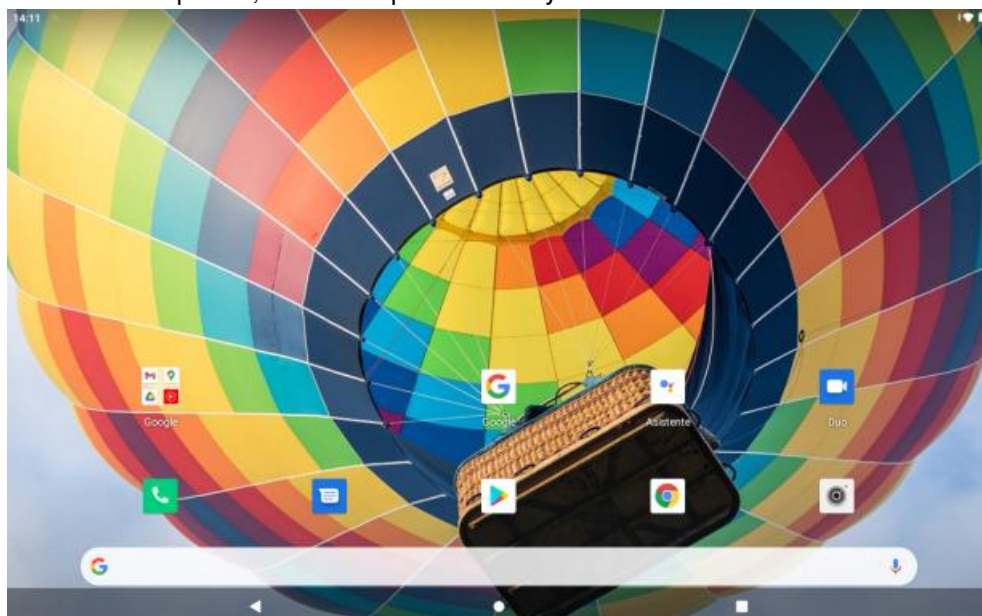

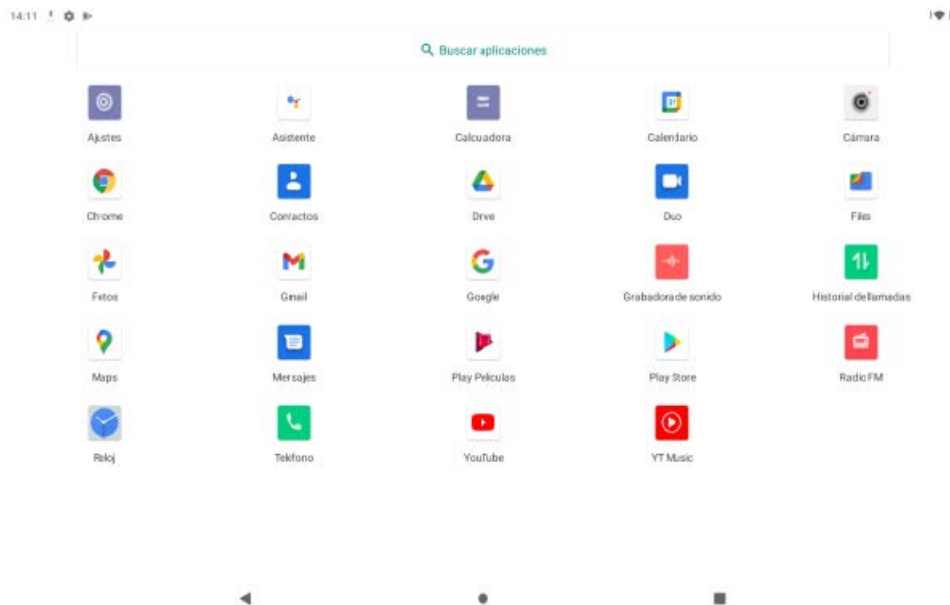



ADDING CONTACTS

One way is entering [Phone] application  and typing the number you wish to add. Then press “Create a new contact” B. A menu will appear containing, among others: Name and surname, Phone number, Second phone number, E-mail. Fill-in fields you wish and press SAVE to save changes.


COMMUNICATION


Making Calls



To make a call touch “Phone” icon  placed on the main screen or in


Android Applications  menu and choose the keyboard icon  Insert the phone number you wish to call. Press “Handset” placed at the bottom of the screen and chooses which SIM card you wish to use (only if you are using two SIM cards).

SMS – Messages

 
 
You can manage messages using the [Messaging]  application on the home screen or in the device menu. Run an application and touch

 icon and insert the phone number and name. When you have chosen the contact a screen will appear where you can type the message.

To send a message, press the icon with the SIM card designation  (for SIM 1) or  (for SIM 2).


Before you send a text message you can transform it into a multimedia message by pressing  symbol situated on the left hand side of the screen and adding a file (picture, video, music etc.)

SETTINGS

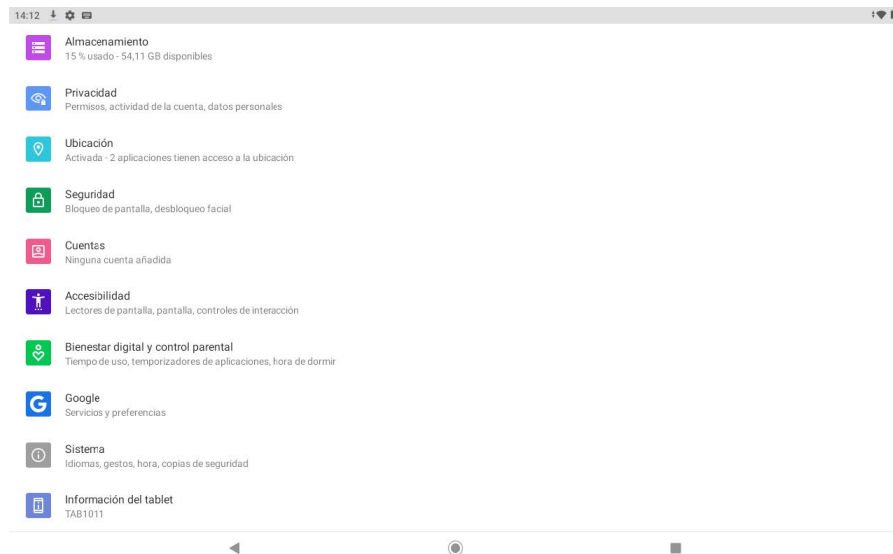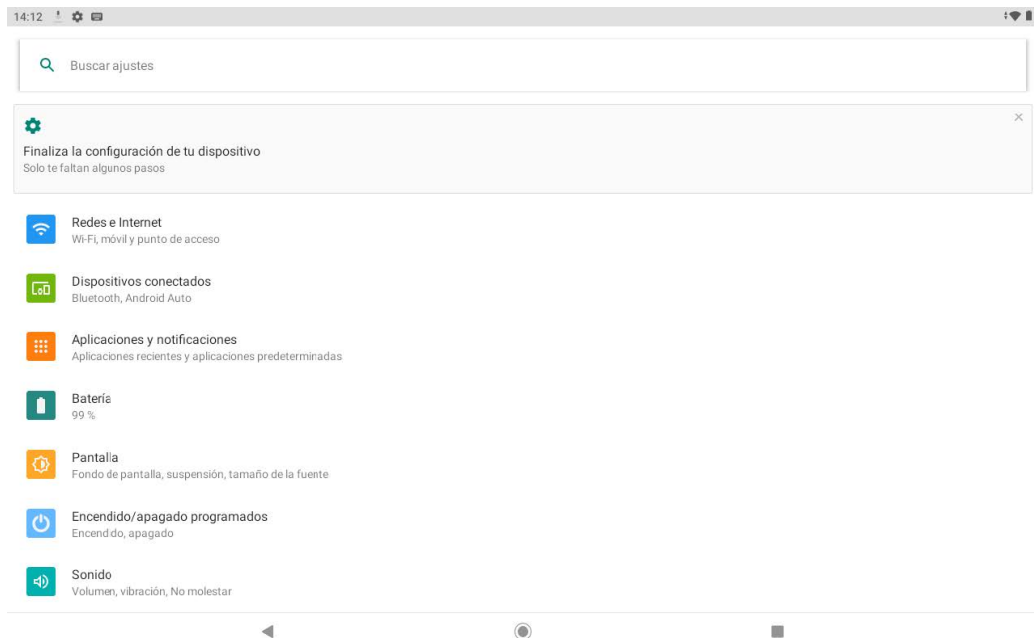


USERS & ACCOUNTS. ADD A NEW ACCOUNT

 You can add different email account for this device, as Google, Outlook, Hotmail, or Yahoo, etc. Tap this setting to add or remove any of your accounts .

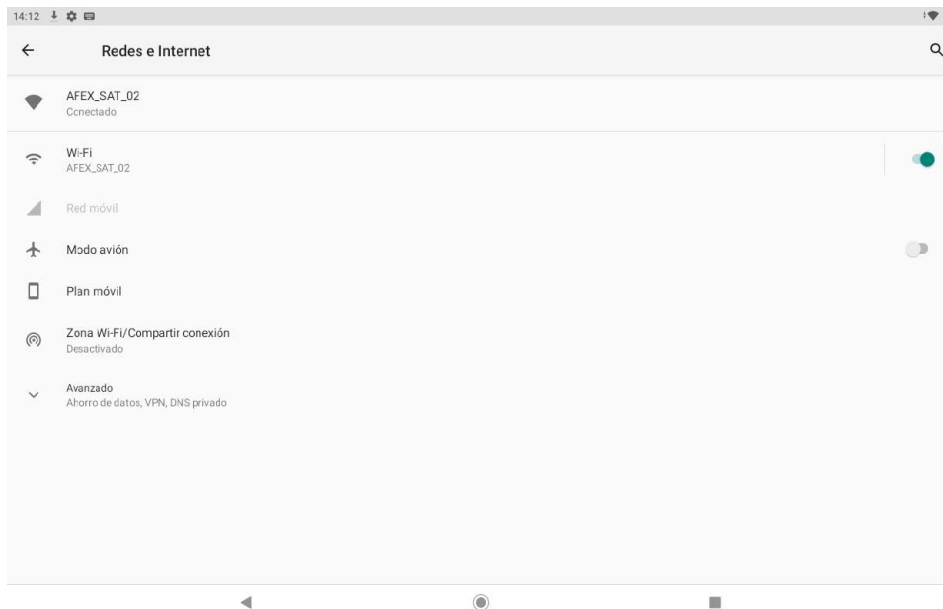


CONNECTED DEVICES

 You can connect Bluetooth, Cast, Print service and connect the Tablet to Computer by USB cable.

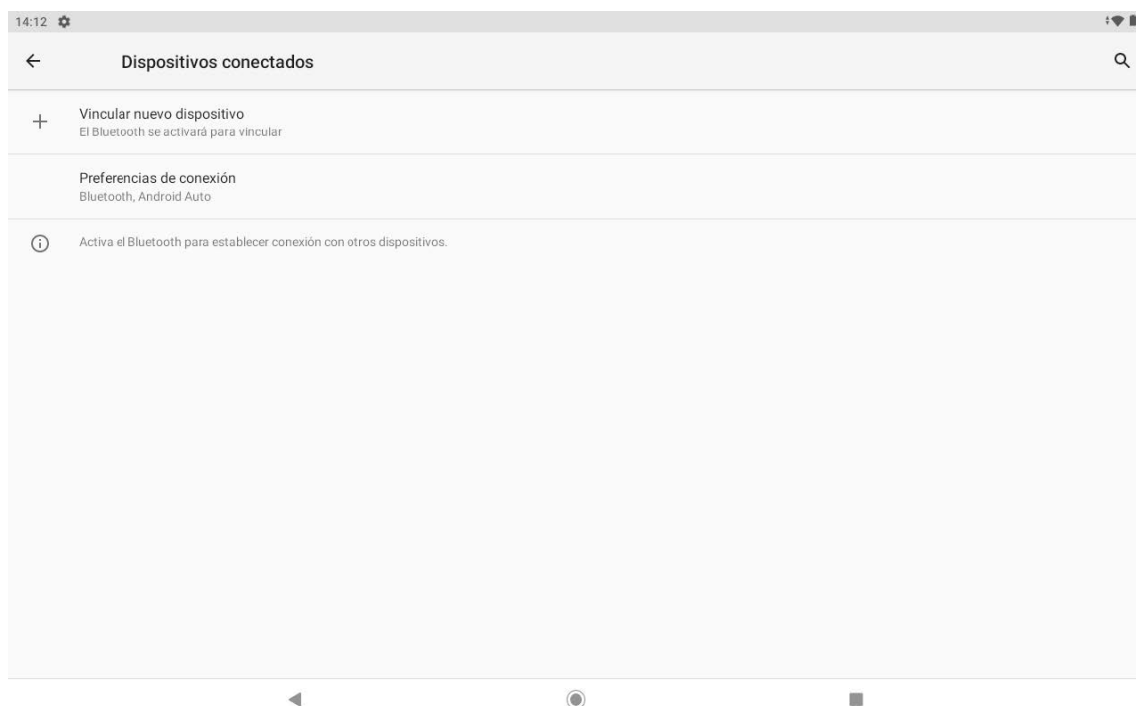


APPS & NOTIFICATIONS

 You can check All APP information and set Notifications, also APP permissions and some special app access.

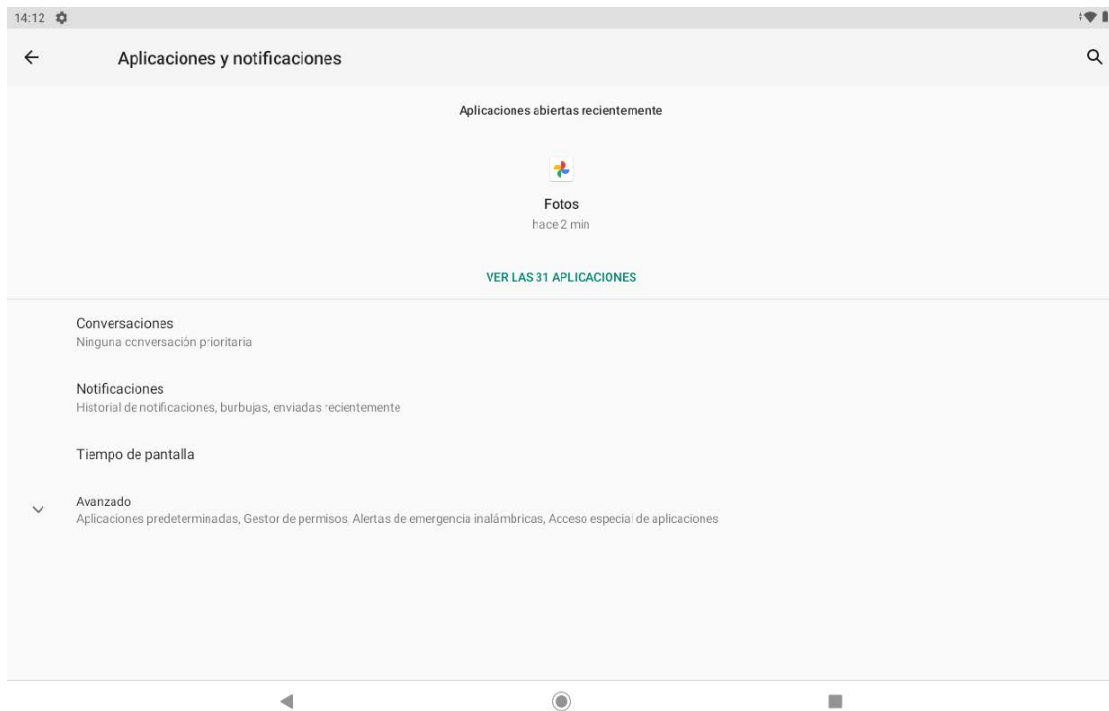


BATTERY

 You can check all battery information as Percentage, Last full charge time, Power Management, etc. as below. Also set Battery Saver function.

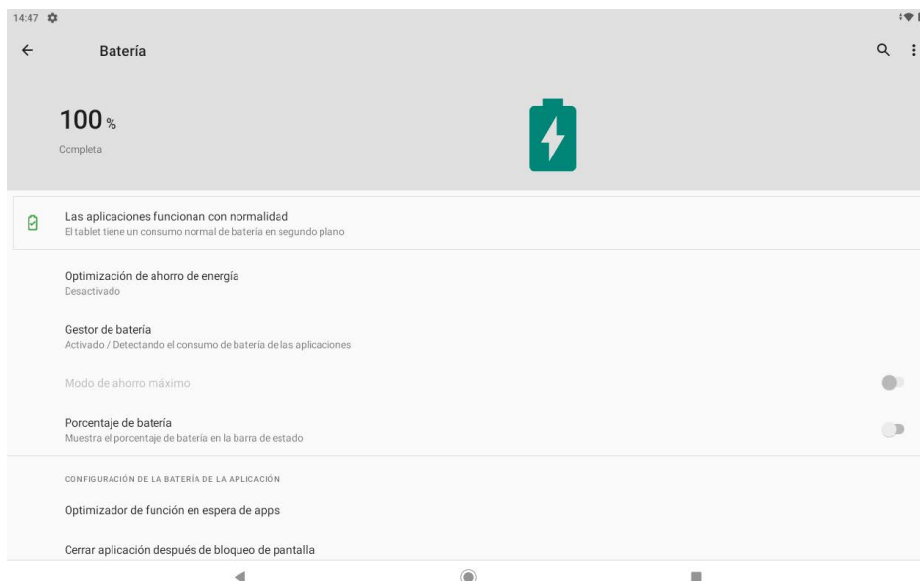


DISPLAY

 Adjust Brightness, change your Wallpaper, turn on/ off Screen Rotation, set Sleep settings and Font Size. Moreover, you can set Night Light function to use tablet at night.

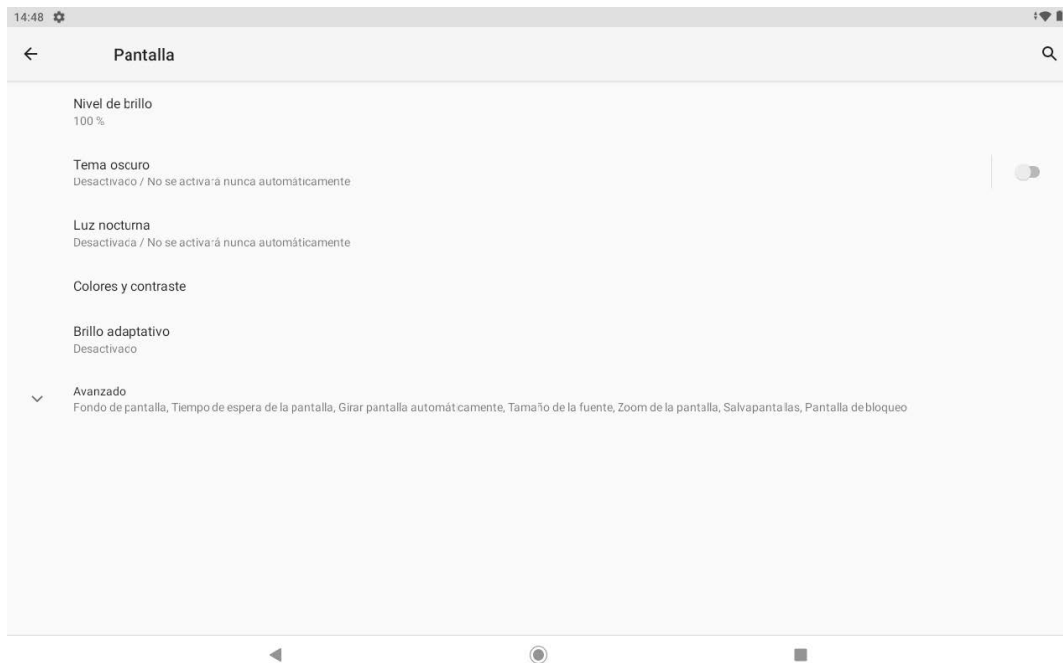


SOUND

 You can set Sound Volume, Not disturb preference, Default notification sound, Alarm and other Sounds and Vibrations

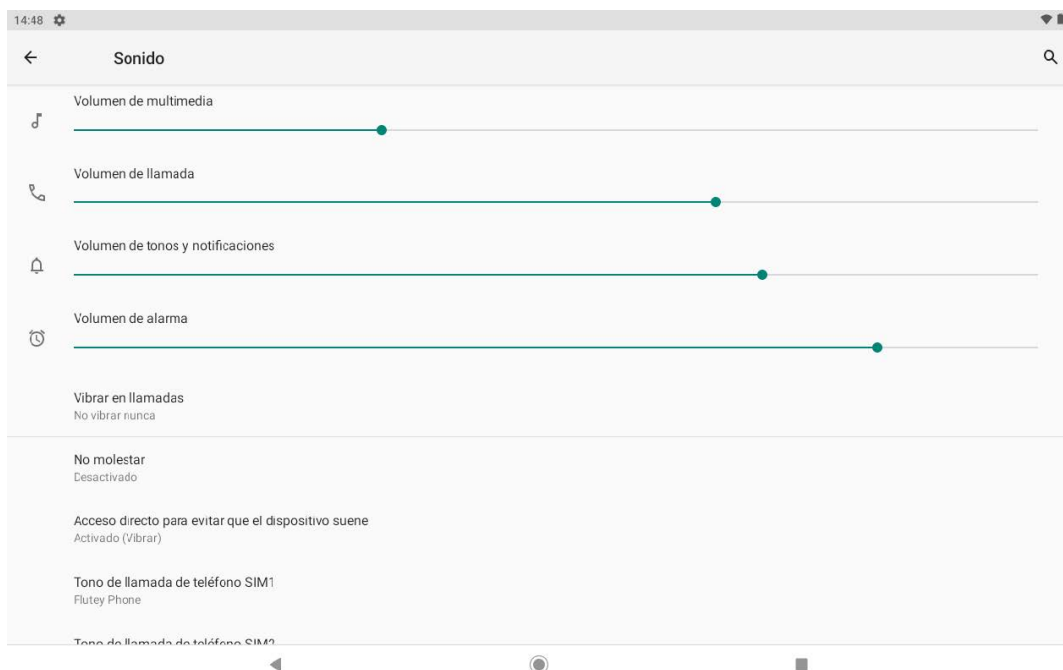


STORAGE

 You can check all storage details as below.

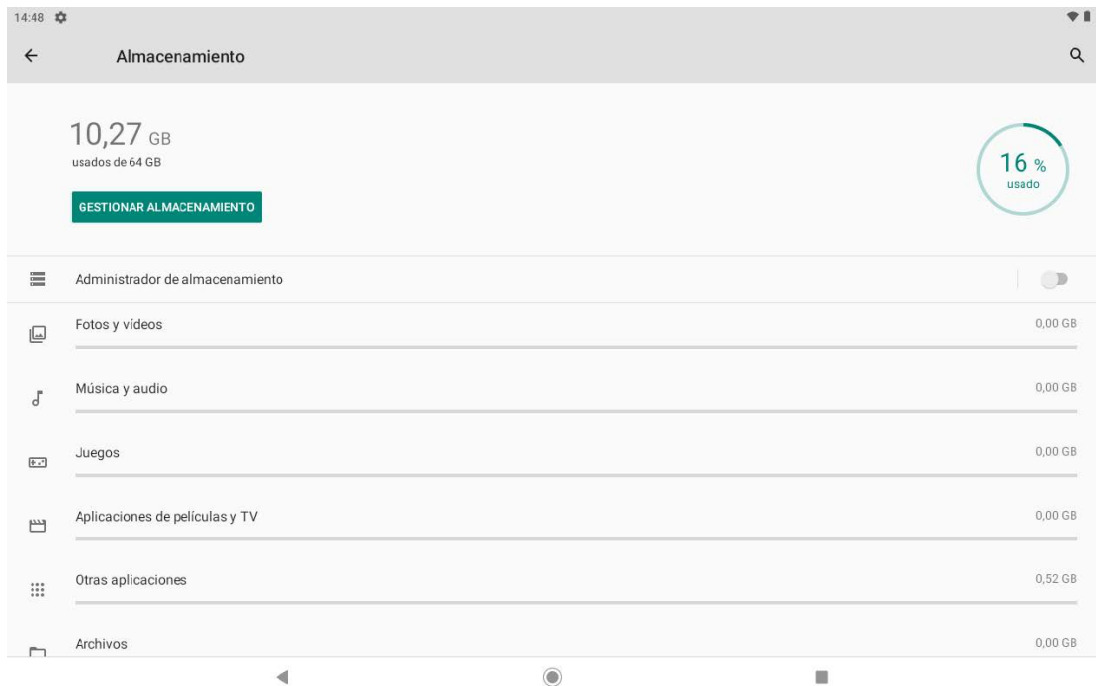


SECURITY

 You can set Security of the device and Privacy settings as below.

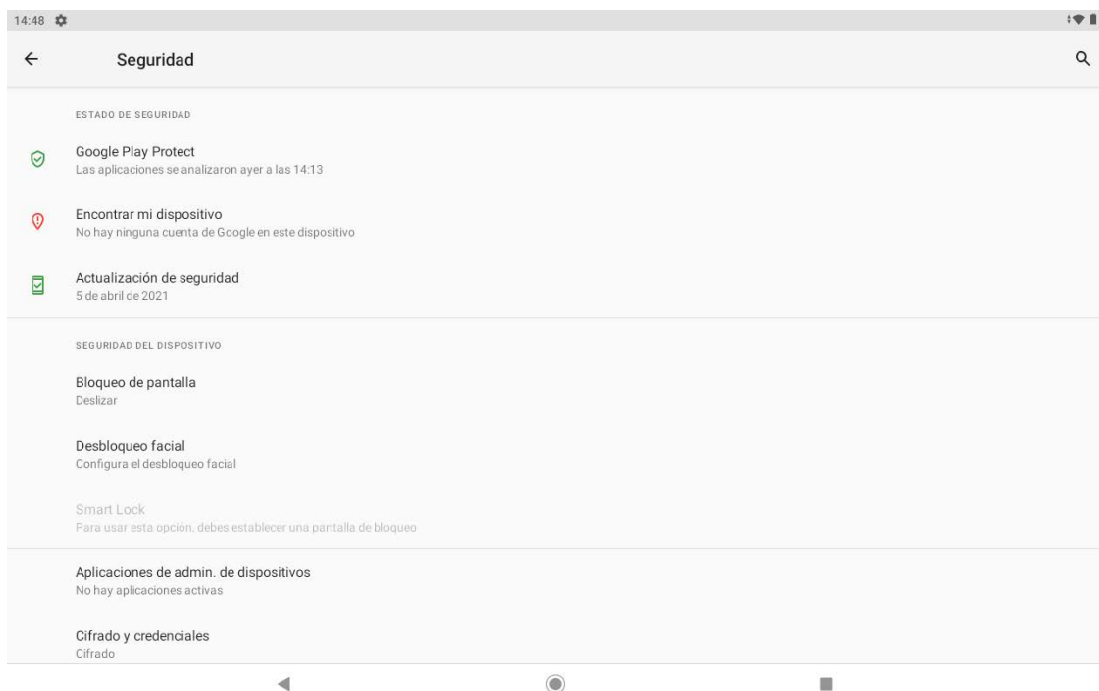


ACCESSIBILITY

 You can set Below Options

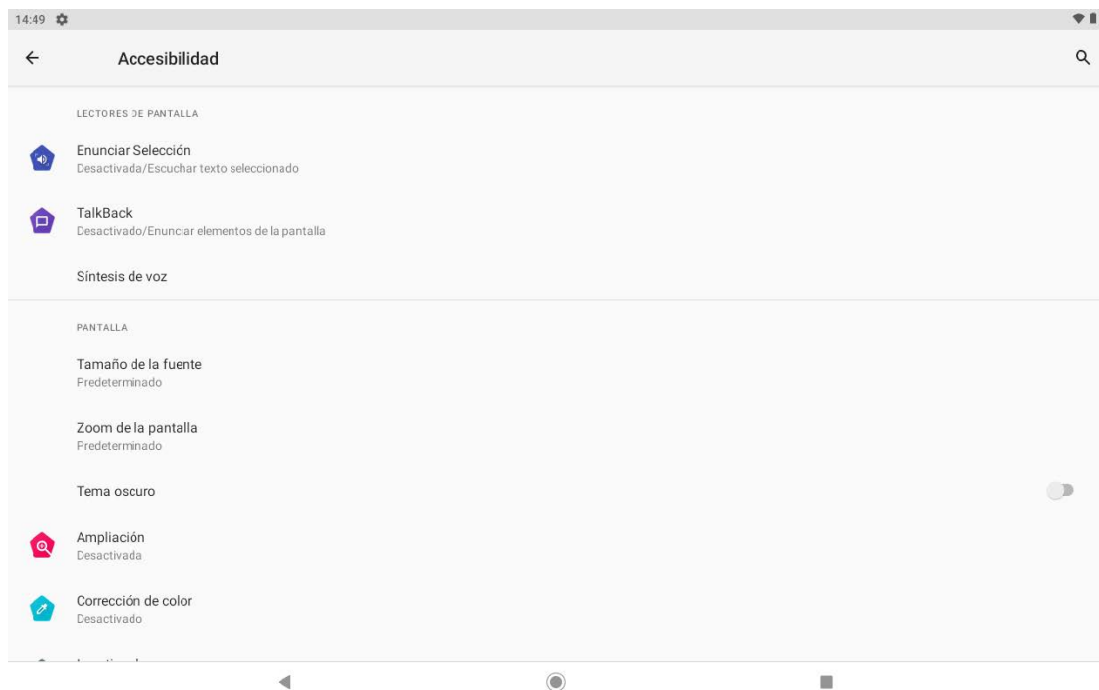

GOOGLE

 
You can set Android Auto app, Cast Media controls, Location Nearby, Restore contacts, Security, Set up nearby device, Set up work profile under this settings

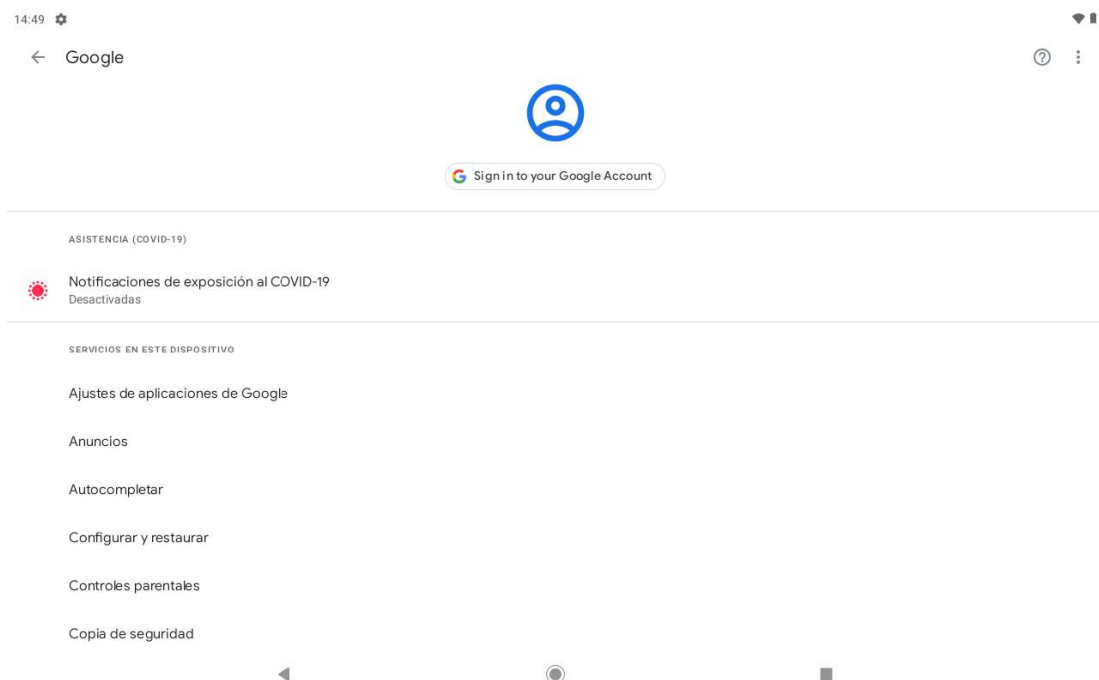

SYSTEM


LANGUAGES & IMPUT

 Set language, spelling correction, keyboard and voice settings.

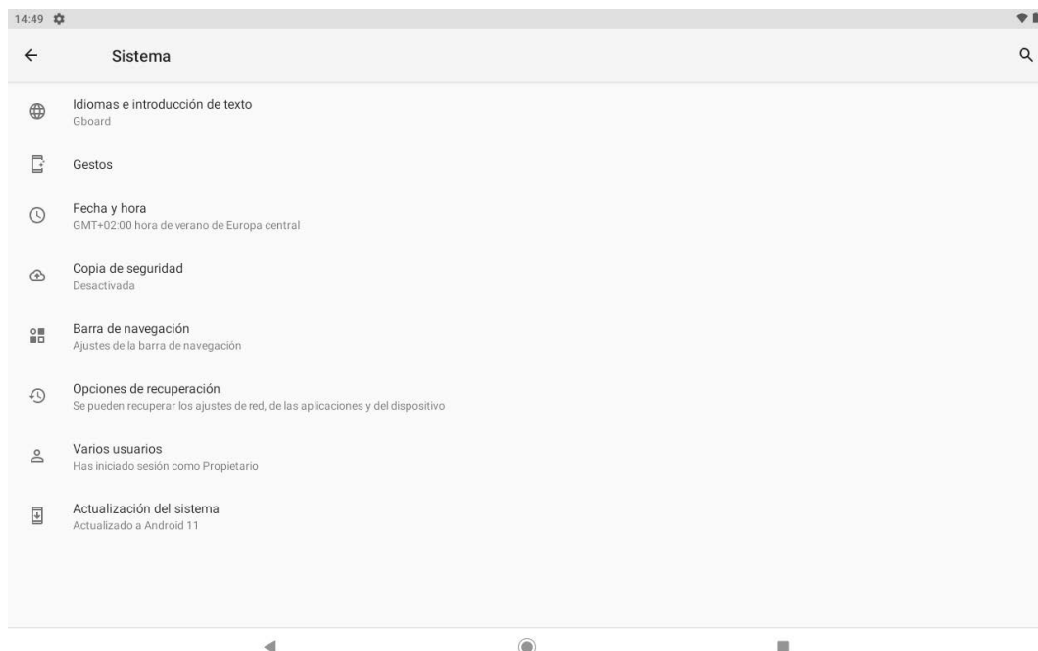

GESTURES

 You can set Gestures to jump to Camera and prevent ringing

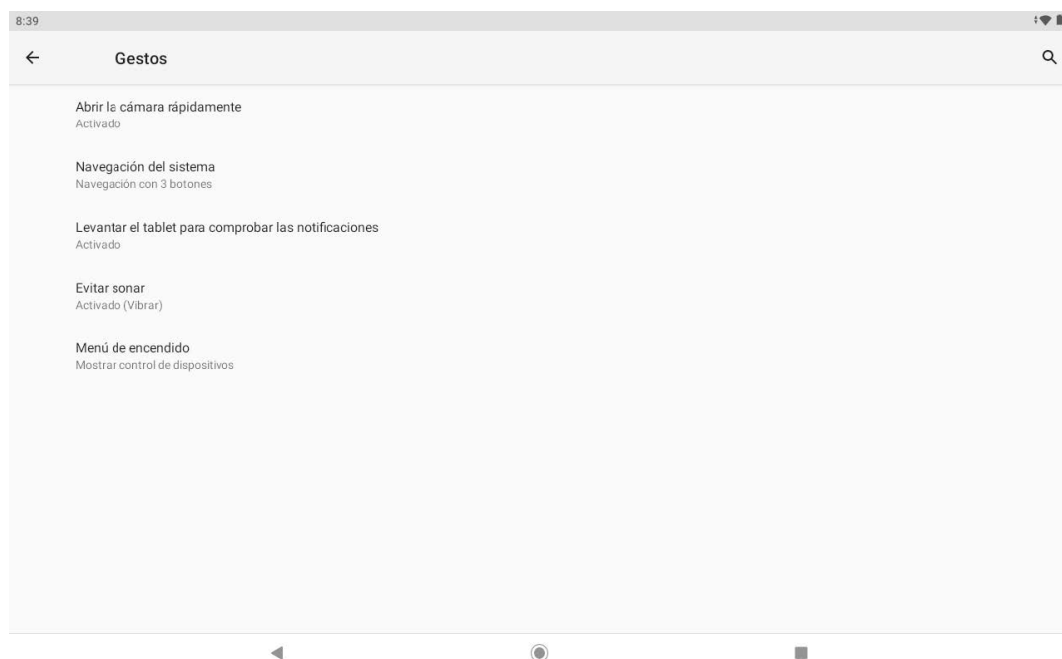


DATE & TIME

You can set Date and Time, Select time zone, and set hour format as below .


ABOUT TABELT

 You can check Status and Legal Information, Android version inforamtaions as below.

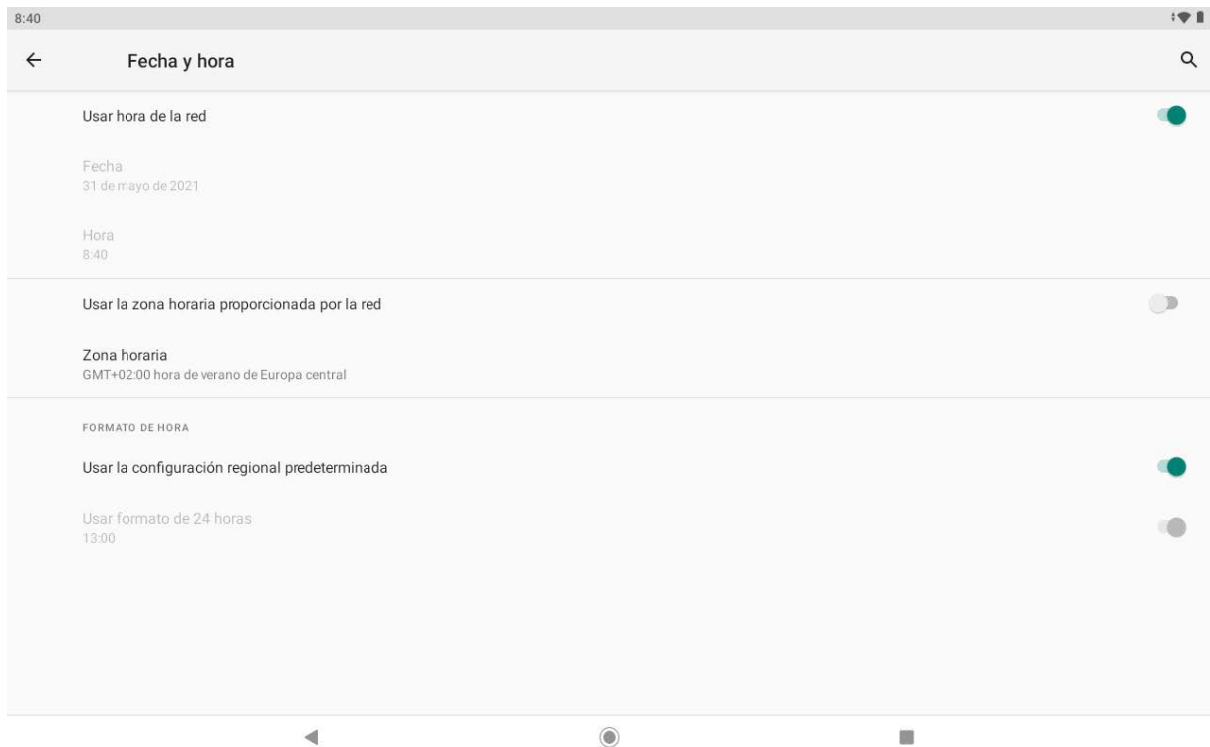

SYSTEM UPDATE

 You can check the system version and date as below.

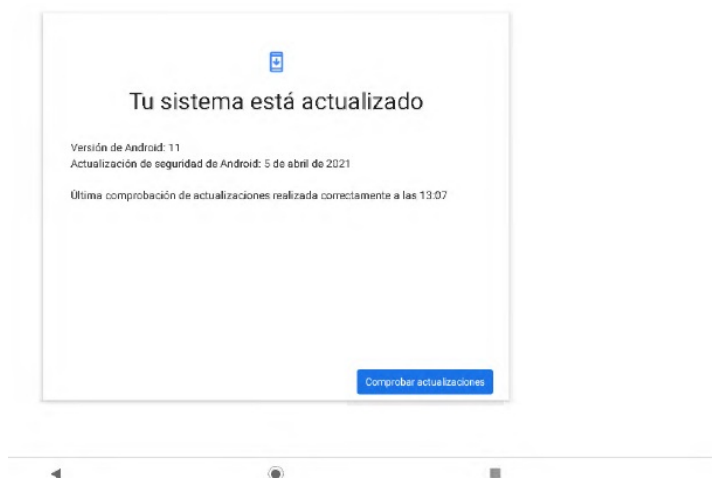


RESET OPTIONS

You can reset Wi-Fi mobile & Bluetooth settings and devices, reset app references and erase all data (factory reset) as below.




 Please note that doing a factory reset will delete all your apps and data.

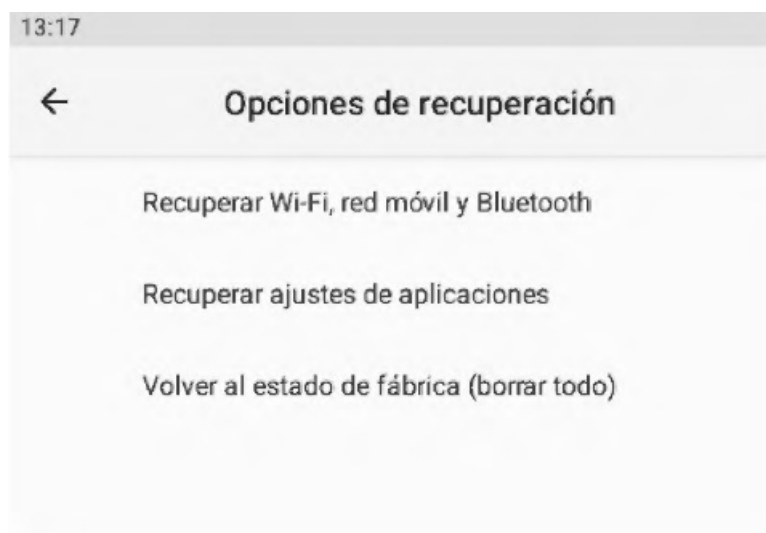

ABOUT TABELT

 You can check Status and Legal Information, Android version ect information as below.

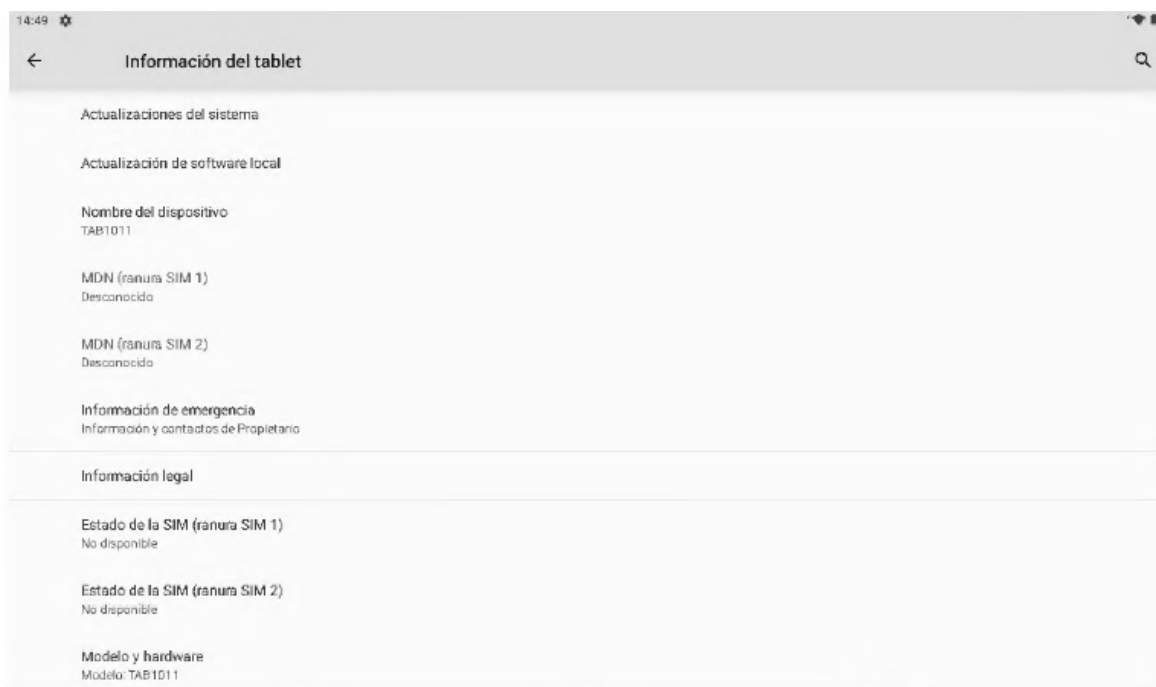

SAFE USE OF THE BATTERY

The battery may be charged with USB port in the computer or laptop.

Nevertheless, it is not a recommended form of charging an operating device due to the low charging current offered by the USB – even though the device is connected to a power source battery can still get discharged. If you wish to charge your device this way turns off the device. If the battery level is low, recharge it to continue the use of the device. If you wish to prolong the battery life span, discharge the battery beneath 20% of the battery capacity and charge it back to 100%. If not used, unplug the charger from the device.

Excessive charging might cause shortened battery life. The temperature of the battery has an impact on its charging cycle. Prior to the charging process, cool the battery or raise its temperature so that it is similar to the room temperature. If the battery temperature exceeds 40°C the battery must not be charged! Do not use a damaged battery! The battery life span can be shortened, if it has been exposed to very low or very high

temperatures – this causes interference to the device, even when the battery has been properly charged.

MAINTENANCE OF THE DEVICE

To prolong the life span of the device act according to these instructions.

- Keep the device and its accessories out of reach of children.
- Avoid contact with liquids; it can cause damage to electronic components of the device.
- Avoid very high temperatures for it can shorten the life of device electronic components, melt the plastic parts and destroy the battery.
- Do not try to disassemble the device. Tampering with the device in an unprofessional manner may cause serious damage to the device or destroy it completely.
- For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis.
- Use the original accessories only. Violation of this rule may result in an invalidation of the warranty

The packaging of the device can be recycled in accordance with local regulations.

Surroundings security

Turn off the device in areas where its use is forbidden or when it may cause interference or danger. The use of any devices that radio waves causes interference with medical devices (i.e. cardiac pacemaker), if they are not properly secured (if in doubt, consult your doctor or medical device manufacturer).

Attention	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the device	The software version can be up graded without earlier advice

Use of the manual

Consents

Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

Appearance

The device and screen shots contained in this manual may differ from the actual product. Accessories attached to the set may differ from the illustrations included in manual.

Trademarks

- Google, Android, Google Play, Google Play logos and other brands are Google LLC trademarks.

- Oracle and Java are registered trademarks of Oracle and/ or its affiliates-Fi® Wi-Fi logo are a registered trademarks Wi-Fi Alliance association.
- All other trademarks and copyrights belong to their respective owners.

The Android robot has been reconstructed or modified on the basis of a project created and made available by Google. Its use is subject to the terms and conditions described in the Creative Commons 3.0

Authorization

SPECIFICATIONS

OS	Android® 11 GSM
CPU	Octa core SC9863, 1.6GHz
Display	10.1 “, 1280*800IPS
RAM Memory	3GB DOR
Memory	64GB (Total built-in)
Speaker	2x 1 W
Cameras	Front: 2MP; Back SMP

Ports	Micro USB (OTG supports up to 32GB), Micro SD (supports up to 128 GB), Headphone Jack, SIM Card Slot
Wi-Fi	802.11 b/g/n
4G Calling	FDD B1/B3/B4/B20 GSM: 850/900/1800/1900 Mhz WCDMA:900/2100 Mhz FDD B1/B3/B4/B20
Battery	5000mAh
Others	Bluetooth / GPS / FM
Adaptor	DC 5V, 2.5A

Ports	Micro USB (OTG supports up to 32GB), Micro SD (supports up to 128 GB), Headphone Jack, SIM Card Slot
Wi-Fi	802.11 b/g/n
4G Calling	FDD B1/B3/B4/B20 GSM: 850/900/1800/1900 Mhz WCDMA:900/2100 Mhz FDD B1/B3/B4/B20
Battery	5000mAh
Others	Bluetooth / GPS / FM
Adaptor	DC 5V, 2.5A


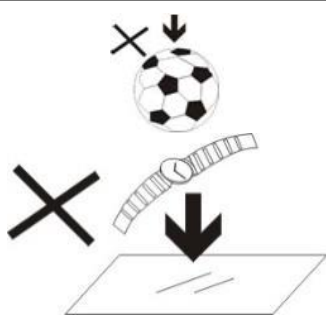 
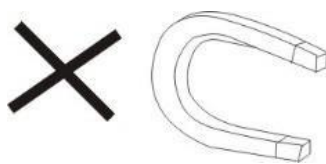 
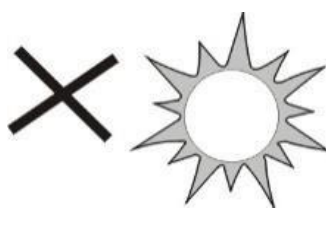 

- If any of the above items are missing or damaged, please contact us.
- It is recommended to keep the packaging in case of any complaints. Keep the packaging out of reach of children.
- Dispose of the packaging in accordance with local regulations when it is no longer needed.


POWER ADAPTER INFORMATION

- Manufacturer: Shenzhen RICHLY Technology Co., Ltd. Address: 8 / f, Dahong
- Science and Technology Park, No. 48, Xinyu Road, Xinqiao, Sha Jing, Bao 'a
- District, Shenzhen
- Model identifier: TAB1011
- Input voltage: 100-240 V
- Input AC frequency: 50/60Hz
- Output voltage: DC 5V
- Output current: 2500 mA
- Output power: 12.5W
- Average active efficiency: 75%
- Efficiency at low load (10%): 56%
- No-load power consumption: 0.01W

WARNINGS


	Correct disposal of this Product
	(Waste Electrical & Electronic Equipment)(WEEE)

	<p>Your product is designed and manufactured with high quality materials and components which can be recycled and reused.</p> <p>This symbol means that electrical and electronic equipment, at</p>
<p>x/</p> <p>Pb</p>	<p>their end-of-life should be disposed of separately from your household waste.</p> <p>Please dispose of this equipment at your local community waste collection/recycling centre.</p> <p>In the European Union there are separate collection systems for</p>
	<p>used electrical and electronic products. Please help us to conserve</p>
	<p>the environment we live in!</p>
	<p>DO NOT place objects on top of the device, as objects may scratch the device.</p> <p>DO NOT expose the device to dirty or dusty environments</p> <p>DO NOT place the device on an uneven or unstable surface.</p>
<p>X</p> <p>1a1., 5 10 15 2</p> <p><u>1t11111t1111</u> t11111</p>	<p>DO NOT insert any foreign objects into the device.</p>
	<p>DO NOT expose the device to strong magnetic or electrical field.</p>
	<p>DO NOT expose the device to direct sunlight as it can damage the device. Keep it away from heat sources.</p>
<p>60°C(140°F)</p>  <p>20°C(68°F)</p>	<p>DO NOT store your device in temperatures higher than 40°C(104°F). The internal operating temperature for this device is from 20°C(68°F) to 60°C(140°F).</p>

	<p>DO NOT use the device in the rain.</p> <p>Please check with your Local Authority disposal of electronic products.</p>	or	retailer	for	proper
	<p>The device and adaptor may product some heat during normal operation of charging. To prevent discomfort or injury from heat exposure, DO NOT leave the device on your lap.</p>				
<p>•o sunstech,</p>	<p>POWER INPUT RATING: Refer to the rating label on the device</p>				
<p>POWER LIPT,</p>					
<p>POWER CIH 'ifmce11:</p>	<p>and be sure that the power adaptor complies with the rating. Only</p>				
<p>IIMO (€[\$_</p>	<p>use accessories specified by the manufacturer.</p>				
	<p>Clean the device with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.</p>				
	<p>Always power off the device to install or remove external devices that do not support hot-plug.</p>				

	<p>Disconnect the device from an electrical outlet and power off before cleaning the device.</p> <p>DO NOT disassemble the device. Only a certified service technician should perform repair.</p> <p>The device has apertures to disperse heat. DO NOT block the device ventilation, the device may become hot and malfunction as a result.</p>
	<p>Risk of explosion if battery replaced by an incorrect type. Dispose of used batteries according to the instruction.</p>

	<p>PLUGGABLE EQUIPMENT: the socket-outlet shall be installed near the equipment and shall be easily accessible.</p>
	<p>European Union: Disposal Information.</p> <p>This symbol means that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product and/or its battery at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.</p>
<p>MADE IN CHINA</p>	

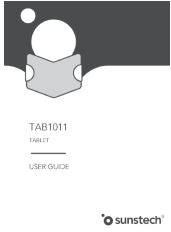 

[sunstech TAB1011 Tablet](#) [pdf] User Guide
TAB1011 Tablet, TAB1011, Tablet