

# Supabear C28s Rechargeable Handheld Fan User Manual

Home » Supabear » Supabear C28s Rechargeable Handheld Fan User Manual

#### **Contents**

- 1 Supabear C28s Rechargeable Handheld
- Fan
- **2 INTRODUCTION**
- **3 SPECIFICATIONS**
- **4 WHAT'S IN THE BOX**
- **5 FEATURES**
- **6 SETUP GUIDE**
- **7 CARE & MAINTENANCE**
- **8 TROUBLESHOOTING**
- 9 PROS & CONS
- **10 WARRANTY**
- 11 FREQUENTLY ASKED QUESTIONS
- 12 References
- 13 Related Posts



Supabear C28s Rechargeable Handheld Fan



#### **INTRODUCTION**

No matter where you are, the Supabear C28s Rechargeable Handheld Fan will help you stay cool and comfy. With the touch of a button, this fan can bring a cool breeze into any room. It's small, light, and easy to carry. You can change the airflow to fit your needs at two different speeds, so you can use it at your job, on the go, or while traveling. This fan has a portable design and is powered by a rechargeable 5V battery, so you can enjoy the breeze wherever you need it most. With its two blades, the fan creates a soft, quiet breeze while making very little noise (38 dB). The Supabear C28s costs \$9.99, which is a great deal for how well it works and how well it looks. This fan, which is made by Windmill, is a reliable and inexpensive choice for people who want to stay cool in hot weather.

#### **SPECIFICATIONS**

Brand Name	Supabear
Built-In Media	Cord
Model Number	C28s
Price	\$9.99
Voltage	5 Volts
Switch Type	Push Button
Indoor/Outdoor Usage	Indoor
Control Method	Touch
Connector Type	Micro USB
Is Product Cordless?	Yes
Is Electric?	Yes
Main Power Connector Type	Micro USB
Number of Speeds	2
Noise Level	38 dB
Wattage	5 watts
Number of Blades	2
Power Source	Battery Powered
Room Type	Office
Additional Features	Portable, Lightweight, Foldable
Recommended Uses For Product	Travel
Mounting Type	Freestanding
Controller Type	Button Control
Manufacturer	Windmill

# WHAT'S IN THE BOX

- Handheld Fan
- USB cable
- User Manual

## **FEATURES**

• **Upgraded Copper Motor**: It makes a strong wind and is very quiet (24 dB), so it can be used both inside and outside.

- Compact Folding Design: The fan can be folded up to 270°, which makes it easy to carry around as a hand fan or work fan.
- Mini Size and Very Lightweight: It's only 3.6 x 1.4 x 1.2 inches long and weighs 2 ounces, so it's small enough to fit in your pocket and easy to carry.



- Two Speed Modes: You can choose between high and low wind speeds to fit your wants and preferences.
- Chargeable via USB: It has a lithium battery built in that can be charged via USB for ease of use.
- Quick Charge Time: It takes about an hour to fully charge for practical use.
- Battery Life: In high-speed mode, it can be used for three hours, and in low-speed mode, it can be used for up to seven hours.
- Super Soft Blades with Auto-Stop: To keep you safe, the blades stop on their own if they are touched.

# **Automatic Stop Design**

Soft ABS material with upgraded copper motor No fear of accidental touch, safey and powerful



- Noise Level: It works quietly at 24 dB so it doesn't bother other people when you're using it.
- Energy-efficient: Only 5 watts of power are used, which means the battery lasts longer and the device is safe for the environment.
- Many Uses: Great for flying, commuting, applying makeup, camping, weddings, and more.
- Lightweight: It only weighs 2 ounces, so you can carry it around for long amounts of time without getting tired.
- Strong Construction: Made from ABS and TPE materials to last a long time and work well.
- **Portability**: It's small enough to fit in pockets or bags, which makes it a great item to bring with you to outdoor events or on trips.
- Safety: The fan has an auto-stop feature that keeps you from getting hurt if you touch the blades.

#### **SETUP GUIDE**

- **Unboxing**: Carefully take the fan out of the box, being careful not to damage it by handling it rough.
- First-Time Use: Make sure the fan is fully charged by charging it for one to two hours before using it for the first time.
- To charge the fan: Connect it to a power source (like a USB adapter or power bank) using the USB charging wire that came with it.



- Indicator Light: A red light means the fan is charging. When it's fully charged, the light will go out.
- Power On: Press the button to turn the fan on and choose the speed you want (low or high).
- Changing the Fan Angle: You can fold the fan into any position you want (up to 270°) so you can use it on your desk or in your hand.
- If you want to use the fan as a desk fan: Open it all the way up to 270° and set it down on a flat surface.
- **Portability**: The fan can be folded back into a small shape that makes it easy to store in a pocket, bag, or purse.
- Setting the Speed: To switch between low-speed and high-speed modes, press the power button twice.
- Charging for Travel: Make sure you fully charge the fan before putting it in your bag to make sure you have enough battery power.
- Taking care of the battery: The lithium battery doesn't store power, so you can charge it whenever you want.
- Safety Check: Before using the fan, always make sure that the blades are not broken.
- How to Carry the Fan: To make it easier to carry, fold the fan up and put it in your pocket or bag when not in use.
- Changing the Wind: The two-speed levels let you change the airflow to suit your needs and the weather.
- To turn off the fan and save battery life: Press and hold the power button for a few seconds.

- **Regular Charging**: Even when not in use for long periods of time, keep the fan charged to keep the battery healthy.
- Clean the Blades: Use a soft cloth to gently wipe the fan blades clean of dust and other things that are stuck on them.
- Avoid Water: Always keep the fan dry to keep the internal parts from getting damaged.
- Don't overcharge: Once the battery is fully charged, disconnect the fan so it doesn't have to work too hard.
- When not in use: Especially during the off-season, put the fan away in a cool, dry place.
- Replacement Battery: If the battery loses its charge or capacity, you should call the maker to find out how to get a new one.
- Check the Blades for Damage: Check the fan blades often for cracks or signs of wear, and replace them if necessary.
- Avoid Dropping: Be careful when handling the fan so that drops or hits don't damage the inside.
- Make sure the charging port is clean: Use a dry cloth to wipe the USB charging port clean so that the charging cable can connect properly.
- Use the Fan at the Suggested Speeds: To keep the battery life long, use the fan on low speed as much as possible, especially when using it for a long time.
- Avoid Blocking Airflow: To keep the fan's cooling working at its best, make sure nothing gets in the way of the airflow.
- Use a Soft Cloth: To keep the fan's outside from getting scratched, clean it with a microfiber cloth.
- Do Not Try to Open the Fan: If you want to fix the fan, don't open it because you could lose the warranty or damage the parts inside.
- Watch the Charging Time: To keep the battery lasting as long as possible, don't leave the fan plugged in for too long after it's fully charged.

#### **TROUBLESHOOTING**

Problem	Solution
The fan is not turning on.	Ensure the fan is fully charged. Check the power button.
The fan is making noise.	Check if the blades are obstructed or dirty. Clean them gently.
The fan speed is not adjustable.	Ensure the speed control button is functioning correctly.
The fan is not charging.	Verify the charging cable is securely connected to both fan and power sourc e.
The battery is not holding a char ge.	Replace the battery if it's no longer holding a charge after several uses.
The fan is overheating.	Turn the fan off and let it cool down for 10-15 minutes.
Battery life is too short.	Charge the fan fully and check if it's being used at the highest speed continu ously.
Fan blades are wobbling.	Make sure the blades are securely attached.
The fan is not blowing air.	Check for blockages on the fan blades or vents.
The charging light is not on.	Make sure the power source is functional and that the cable is not damaged.
The fan is vibrating.	Check the base and ensure it's resting on a flat, stable surface.
The fan isn't turning off.	Press and hold the power button for a few seconds to reset.
The fan feels weak.	Clean the fan to remove dust or debris from the blades.
The fan is too hot to touch.	Check if it's been running for an extended period. Turn it off and allow it to co ol down.
The fan's battery light flashes rap idly.	The battery may be faulty or needs a reset. Try charging again or replace the battery.

### **PROS & CONS**

#### PROS:

- Lightweight and portable, making it easy to carry and use on the go.
- Quiet operation with a noise level of just 38 dB.
- Rechargeable battery for cordless convenience.
- Adjustable speed settings to control airflow.
- Affordable price point at \$9.99.

#### CONS:

- Limited to only two-speed settings.
- Suitable mainly for indoor use, less effective outdoors.
- Shorter battery life at higher speed settings.
- Only two blades, may not provide as strong airflow as multi-blade fans.
- No additional cooling features such as misting.

#### WARRANTY

The Supabear C28s Rechargeable Handheld Fan comes with a **1-year limited warranty**. This warranty covers defects in materials and workmanship, but it does not cover damage due to misuse or accidents. For warranty service, you can contact the manufacturer, Windmill, or the retailer from whom the product was purchased. Be sure to keep the proof of purchase for warranty claims.

#### FREQUENTLY ASKED QUESTIONS

What is the brand of the Supabear C28s Rechargeable Handheld Fan?

The Supabear C28s Rechargeable Handheld Fan is manufactured by Supabear, a brand known for its portable cooling solutions.

What is the price of the Supabear C28s Rechargeable Handheld Fan?

The Supabear C28s Rechargeable Handheld Fan is priced at \$9.99, making it an affordable option for on-the-go cooling.

What is the voltage requirement for the Supabear C28s Rechargeable Handheld Fan?

The Supabear C28s Rechargeable Handheld Fan operates on 5 volts, compatible with most USB power sources.

What type of switch does the Supabear C28s Rechargeable Handheld Fan use?

The Supabear C28s Rechargeable Handheld Fan features a push button switch for easy and simple operation.

Can the Supabear C28s Rechargeable Handheld Fan be used outdoors?

The Supabear C28s Rechargeable Handheld Fan is designed for indoor usage, making it ideal for offices, homes, and other indoor environments.

What control method does the Supabear C28s Rechargeable Handheld Fan use?

The Supabear C28s Rechargeable Handheld Fan uses touch control, allowing you to adjust the fan settings with ease.

Does the Supabear C28s Rechargeable Handheld Fan have a micro USB connector?

Supabear C28s Rechargeable Handheld Fan uses a micro USB connector for charging, offering convenient recharging options.

What is the noise level of the Supabear C28s Rechargeable Handheld Fan?

The Supabear C28s Rechargeable Handheld Fan operates at a low 38 dB, ensuring a quiet and peaceful cooling experience.

How many speed settings does the Supabear C28s Rechargeable Handheld Fan have?

The Supabear C28s Rechargeable Handheld Fan has 2 speed settings, allowing you to adjust the airflow according to your needs.

What is the wattage of the Supabear C28s Rechargeable Handheld Fan?

The Supabear C28s Rechargeable Handheld Fan has a wattage of 5 watts, offering efficient and energy-saving performance.

How many blades does the Supabear C28s Rechargeable Handheld Fan have?

The Supabear C28s Rechargeable Handheld Fan has 2 blades, ensuring an adequate and effective airflow for its compact size.

What is the power source for the Supabear C28s Rechargeable Handheld Fan?

The Supabear C28s Rechargeable Handheld Fan is powered by a rechargeable battery, providing cordless convenience.

What controller type is used for the Supabear C28s Rechargeable Handheld Fan?

The Supabear C28s Rechargeable Handheld Fan features button control, providing a user-friendly interface to operate the fan.

What is the model number of the Supabear Rechargeable Handheld Fan?

The model number of the fan is C28s, from the Supabear brand.

Why isn't my Supabear C28s Rechargeable Handheld Fan turning on?

Ensure that the fan is fully charged. If the fan does not turn on, charge it for a few hours using the included cable and adapter. If the issue persists, check for any visible damage to the charging port or power button.

#### References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.