



super-b BM01 DISPLAY voltage charge level User Manual

[Home](#) » [SUPER-B](#) » super-b BM01 DISPLAY voltage charge level User Manual 

Contents


- 1 [super-b BM01 DISPLAY voltage charge level](#)
- 2 [CONNECTION TO EPSILON 12V90Ah](#)
- 3 [CONNECTION TO EPSILON 12V100Ah/12V150Ah](#)
- 4 [CONNECTION TO NOMIA SERIES](#)
- 5 [Documents / Resources](#)
 - 5.1 [References](#)
- 6 [Related Posts](#)





super-b BM01 DISPLAY voltage charge level




CONNECTION TO EPSILON 12V90Ah


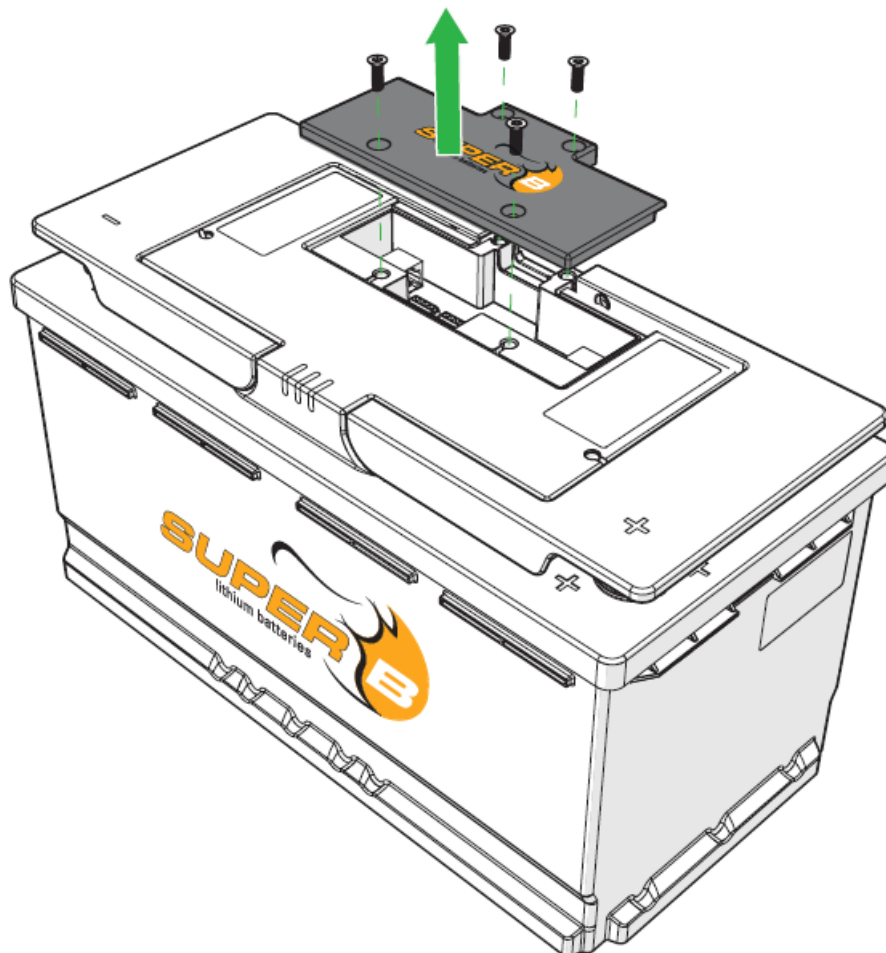


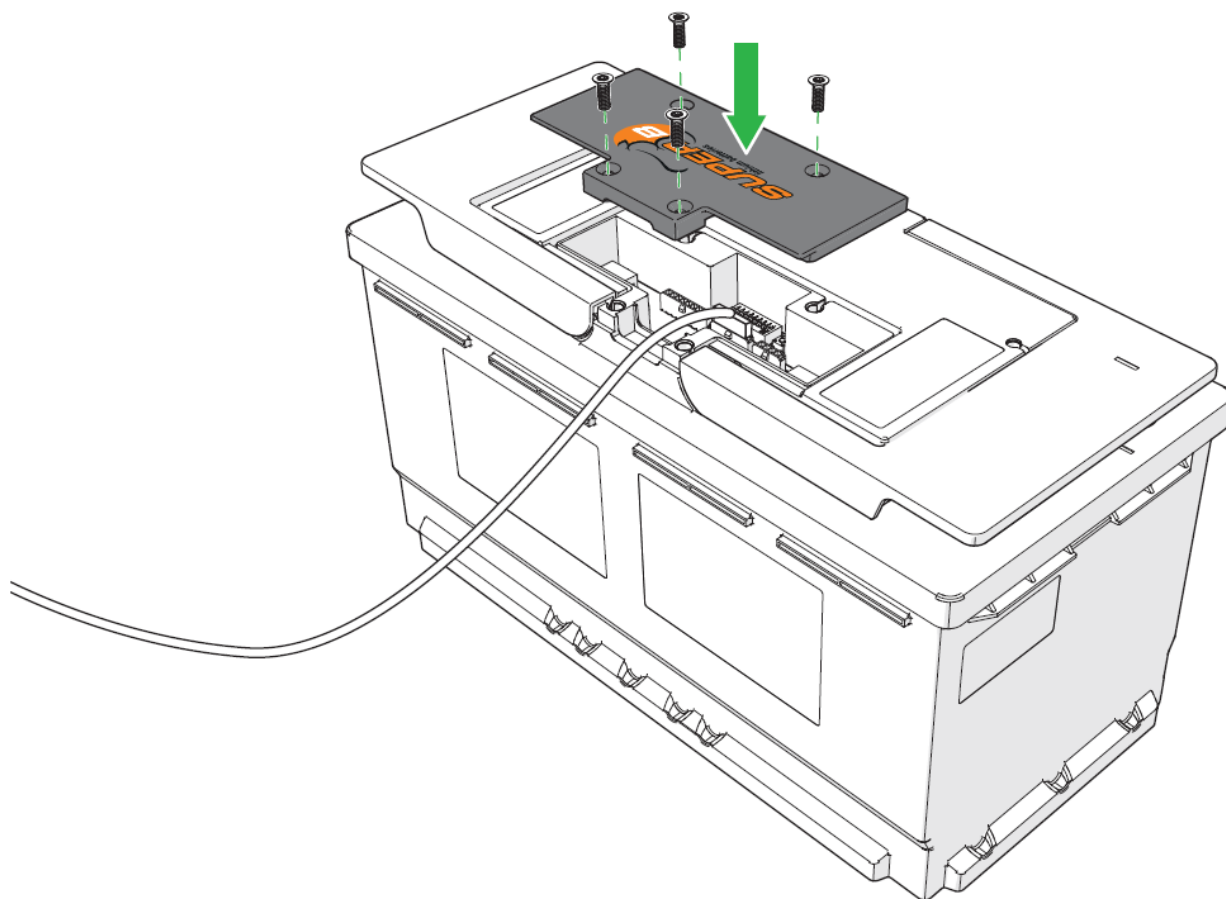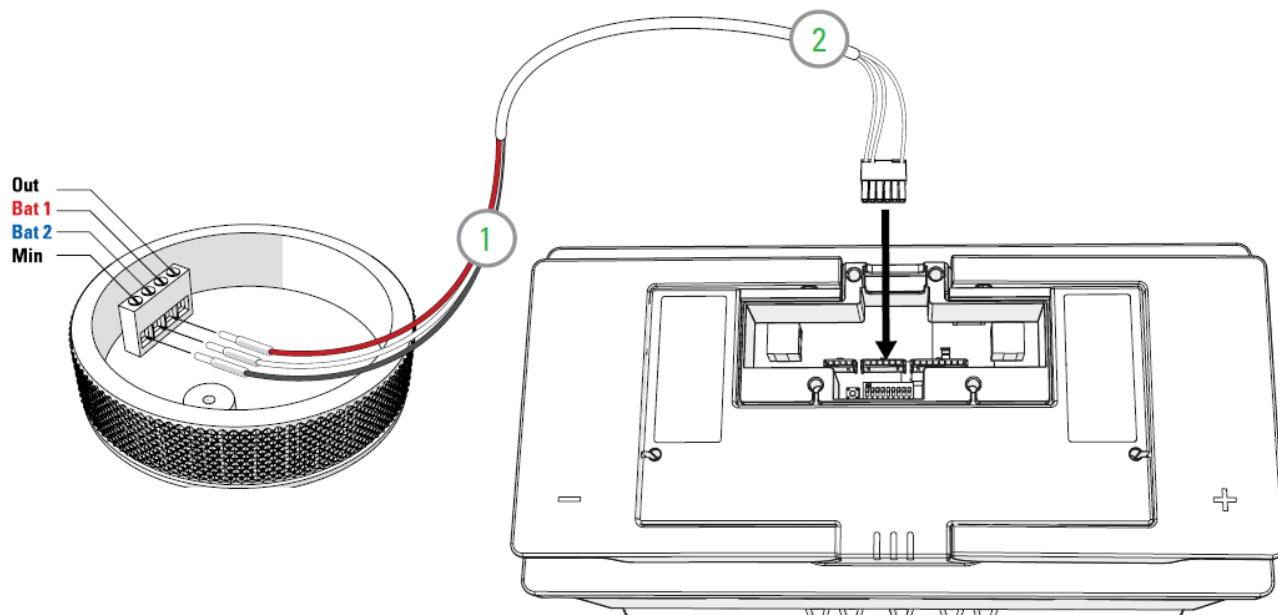

1

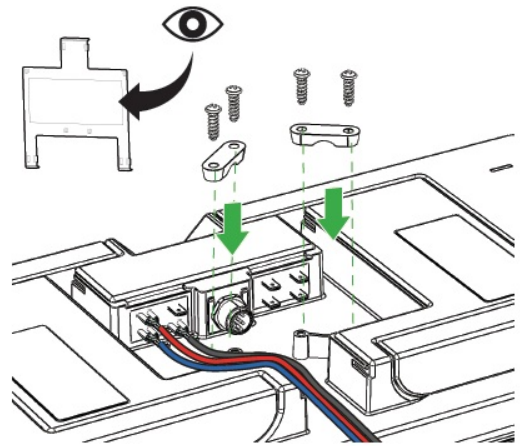


Out
Bat 1
Bat 2
Min

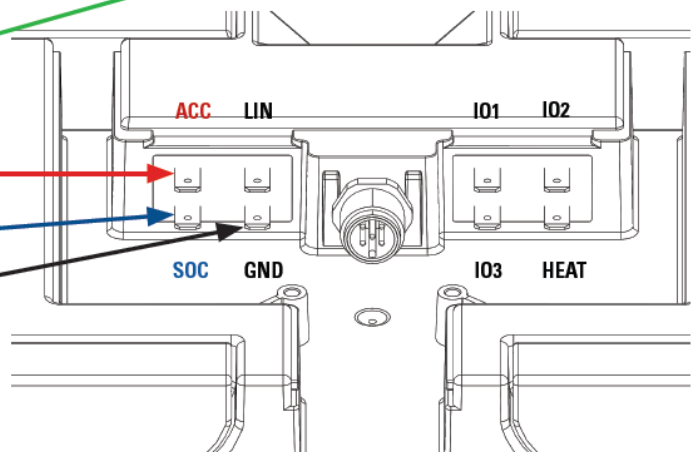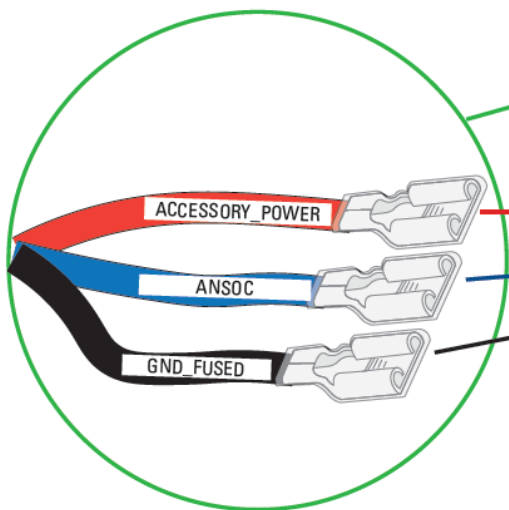

CONNECTION TO NOMIA SERIES

1

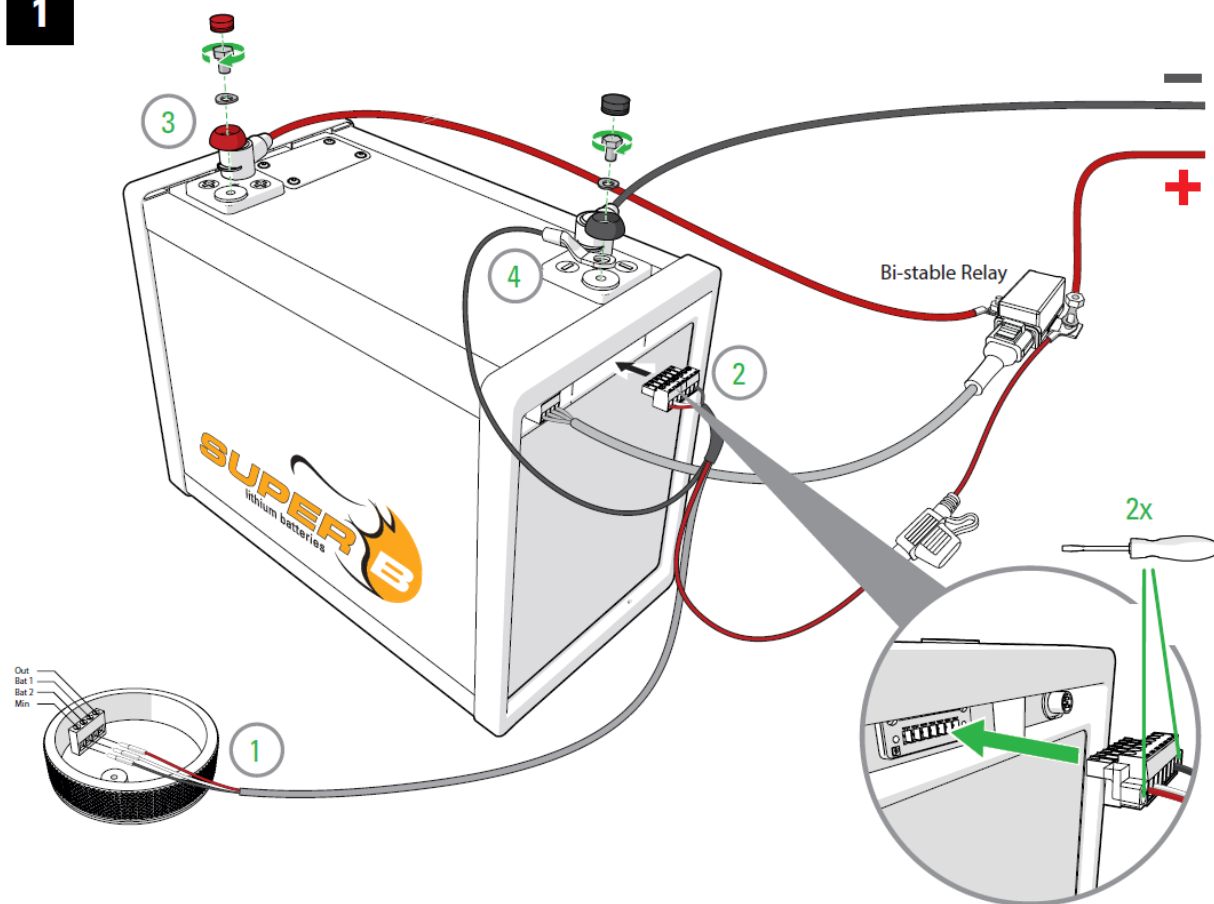


Europalaan 202 7559 SC Hengelo(Ov) The Netherlands T+31(0)88 00 76 000

Contact us: info@super-b.com

Visit our website www.super-b.com



Documents / Resources

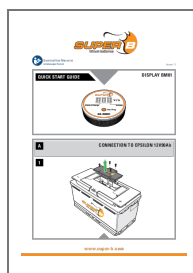

[super-b BM01 DISPLAY voltage charge level](#) [pdf] User Manual
BM01 DISPLAY voltage charge level, DISPLAY voltage charge level, charge level

References

-  [Lithium Iron Phosphate Batteries | Super B](#)

Manuals+.