

super bright LED HBR3-RM Remote for Dimmable Sensors Instructions

Home » super bright LED » super bright LED HBR3-RM Remote for Dimmable Sensors Instructions

Contents

- 1 super bright LED HBR3-RM Remote for Dimmable **Sensors**
- 2 Attention
- 3 Documents / Resources
- **4 Related Posts**



super bright LED HBR3-RM Remote for Dimmable Sensors



Attention

- 1. f you want to send a seting.it will only work if the remote control is on. if you don't press any button within 10 seconds, the indicator light will go out.
- 2. When using "ON/OFF" button, the rest buttons except the "ON/OFF", "BRIGHTNESS" and 'SEND" buttons will be disabled.
- 3. When using "TEST" button, the rest buttons except the "TEST, SENSITVITY 'and "SEND" buttons will be disabled,
- 4. Every change needs to press "SEND" button ,it will be saved.
- Because of the power supply DIMMING ratio difference, when using different power, "BRIGHTNESS" and STANDBY DIM adjust percentage of the power will have difference with the measured power.
- 6. Light control priority mode: the on offal amination values of each gear are 10bw/50k, 30bu/100bx, 50bW/150bx and 100bki200bx.
- 7. Light threshold mode: the on/off lamination values of each gear is 10k/30k50kl100x, when the light intensity is less than set value and the movement of someone or an object is induced, the light is timed on to the preset brightness.

Documents / Resources



<u>super bright LED HBR3-RM Remote for Dimmable Sensors</u> [pdf] Instructions HBR3-RM Remote for Dimmable Sensors, HBR3-RM, Remote for Dimmable Sensors, Dimmable Sensors, Sensors

Manuals+,