



# SUPER BRIGHT LEDS LDRF-RGBW6-MZ MiBoxer WiFi Smart Multi Zone RGBW Controller User Guide

[Home](#) » [super bright leds](#) » SUPER BRIGHT LEDS LDRF-RGBW6-MZ MiBoxer WiFi Smart Multi Zone RGBW Controller User Guide 

**superbrightleds.com**

## Supplemental Guide MiBoxer Remote Pairing


**Important: Read all instructions prior to installation/operation.**

### Contents

- [1 Pairing Procedure for MiBoxer Remotes](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

## Pairing Procedure for MiBoxer Remotes

1. Ensure all connections are secure and that the connected LEDs turn on when powered.
2. Disconnect supply power by disconnecting the controller's connection to the power supply, unplugging the power supply, or simply by turning of the wall switch or breaker the connected to the power supply.
3. With supply power off, verify the remote is functional by pressing any button. The indicator in the middle of the color wheel should light up. If it does not, check battery orientation and charge state.
4. Determine which zone to pair the LEDs to and begin repeatedly pressing the `|` button for that zone, then reapply supply power. Continue repeatedly pressing the `|` button after you restore power to the controller until the connected LEDs begin to flash.

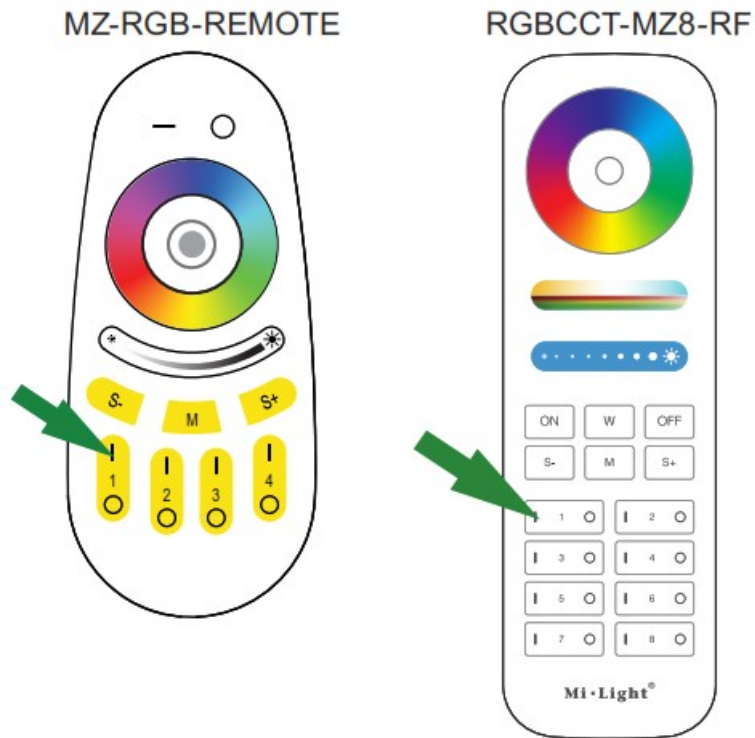

5. Once the LEDs stop flashing, this indicates pairing has been successful and the remote is ready to use.



Rev V2 04/20/2022  
 4400 Earth City Expy, St. Louis, MO 63045  
 866-590-3533  
[superbrightleds.com](http://superbrightleds.com)

## Documents / Resources

	<p><a href="#">SUPER BRIGHT LEDS LDRF-RGBW6-MZ MiBoxer WiFi Smart Multi Zone RGBW Controller [pdf] User Guide</a></p> <p>LDRF-RGBW6-MZ, MiBoxer WiFi Smart Multi Zone RGBW Controller</p>
--	---