




Super Lighting LED BC-204-DMX512 ArtNet-DMX Controller User Manual

[Home](#) » [Super Lighting LED](#) » Super Lighting LED BC-204-DMX512 ArtNet-DMX Controller User Manual 

Contents

- [1 Super Lighting LED BC-204-DMX512 ArtNet-DMX Controller](#)
- [2 Brief Introduction](#)
- [3 Specification](#)
- [4 Basic features](#)
- [5 Dimension](#)
- [6 Operating instructions](#)
- [7 DMX output setting](#)
- [8 Parameter Settings](#)
- [9 Test Mode Configuration](#)
- [10 Firmware Update](#)
- [11 Conjunction Diagram](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)



Super Lighting LED BC-204-DMX512 ArtNet-DMX Controller



Brief Introduction

This Ethernet-DMX controller is dedicated to converting the Ethernet signal into DMX signal, output DMX512 signal, built-in test mode, SD record/play function, timer, etc.

Specification

Model	ArtNet-DMX Controller
working voltage	DC9V (With adapter)
Input Ethernet control protocol	ArtNet
Output DMX512	4CH DMX512 signal
Working Temp	-20~55°C
Product dimension	L145×W78.4×H29.4(mm)
Weight	410g

Basic features


1. With LCD screen, easy to operate.
2. Support Ethernet DMX protocol ArtNet.
3. Support online firmware upgrade.
4. Built-in test mode, SD record/play function.
5. Support 8 timing play, 16 recording effects.
6. Support maximum capacity Micro SD8G memory card (equipped).
7. Use a DMX output with indicator, easy to operate.

Safety warning

1. Please don't install this controller in lightening, intense magnetic and high-voltage fields.
2. To reduce the risk of component damage and fire caused by short circuit, make sure correct connection.
3. Always be sure to mount this unit in an area that will allow proper ventilation to ensure a fitting temperature.
4. Check if the voltage and power adapter suit the controller.
5. Don't connect cables with power on, make sure a correct connection and no short circuit checked with instrument before power on.
6. Please don't repair without permission. Please contact supplier if problems occur.



The manual is only suitable for this model; any update is subject to change without prior notice.

Dimension

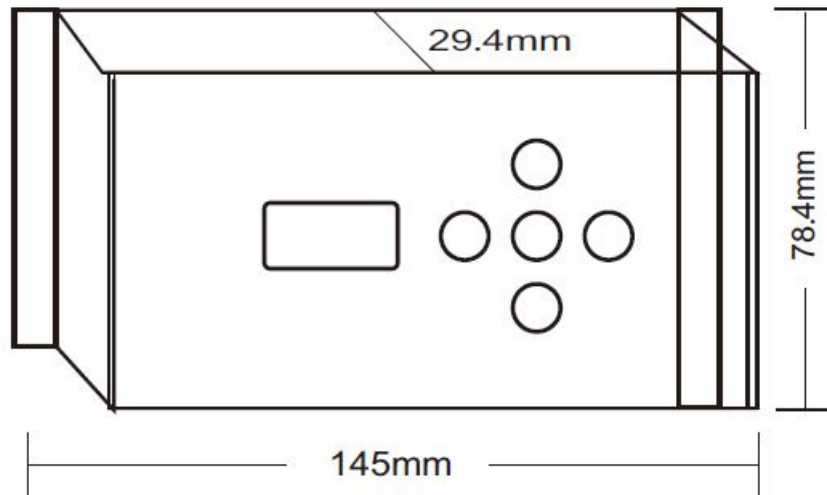

Operating instructions

1. Instruction of the interface and ports:

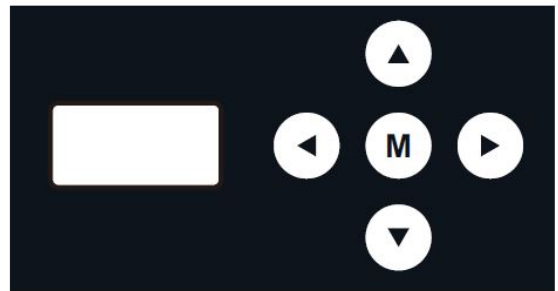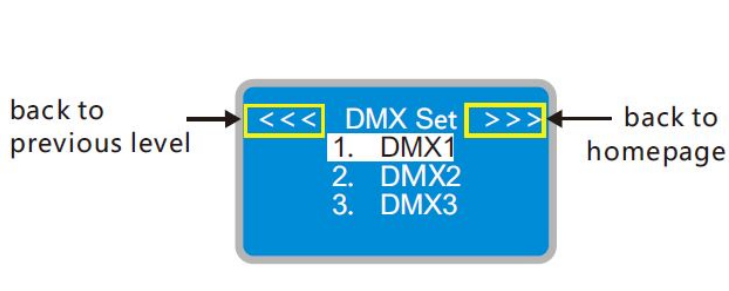

2. Key Description


Button	Short Press Function	Long Press unction
	Increase/move the cursor up	Rapid increase
	Decrease/move the cursor down	Rapid decrease
	Light up/move the cursor right	/
	Dim/move the cursor left	/
	Confirm Button	Unlock the screen

Back to previous level: using move to <<<, then press key

Back homepage: using move to >>>, then press key

3. Operating and setting instructions

Instruction of interface

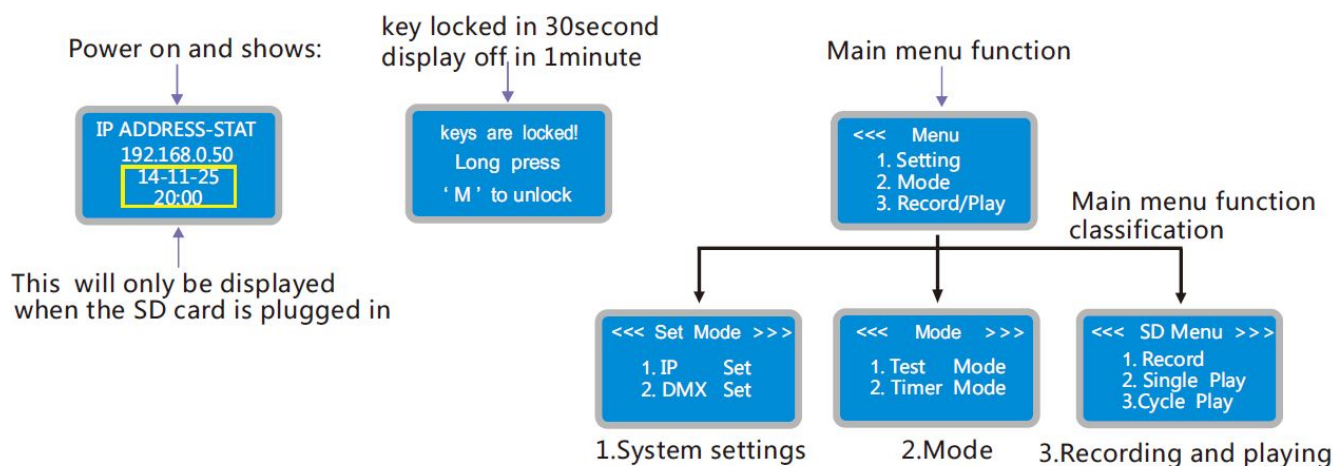


Menu function


Press M key to enter the Settings menu, Press the key move the cursor to the target position, tap the key to enter the corresponding setting page. The following table shows a brief introduction to the Settings menu

No	Setting	OLED display	Value
1	System setup	Setting	IP setting , DMX settings
	IP setup	IP Type	IP address type settings
		STATIC DHCP	STATIC IP address,DHCP IP address setting
		IP Address	Static IP(default):192.168.0.50 (default):255.255.255.0
	DMX output setup	DMX Set	DMX settings
		DMX 1	Outputs:1-4
		OUTPUT:ON	On : output OFF : no output
		UNIVERSE:256	Universe setting range: 1-256
2	Self-test mode and time setup Note: SD card is required in timer mode	Mode	Test mode and time setting
		Test Mode	Test mode,25 built-in test mode
		Timer Mode	Timer mode contains 8 timers and current time Settings
3	Play and record functions Note:need a SD card	Record/Play	Recording and play options
		Record	SD recording effect
		Single Play	single play
		Loop Play	Single mode loop play

4. Parameter Setting

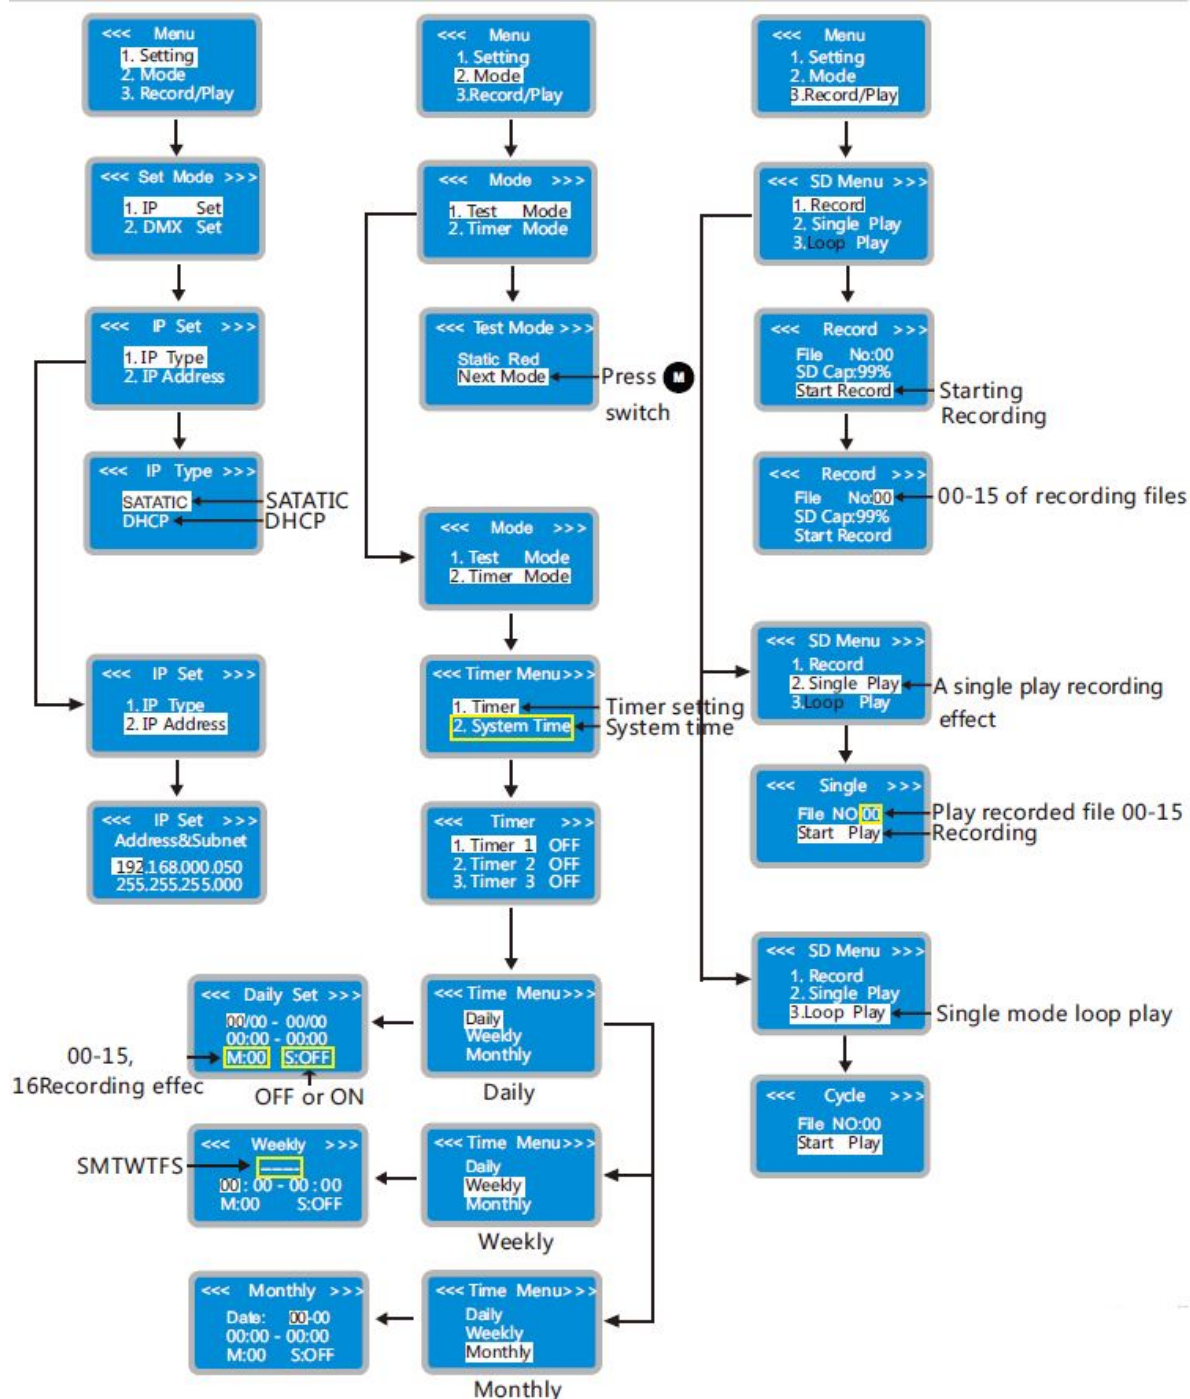

DMX output setting

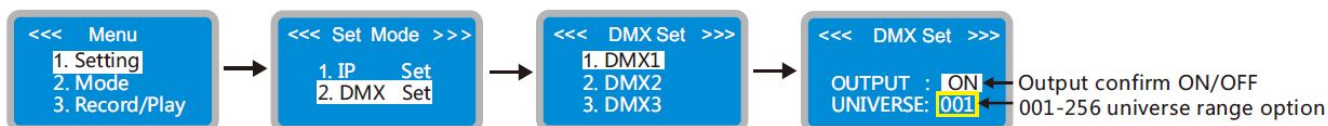

WEB setting, Firmware upgrading online

In addition to set parameters by keys, you can also set it through the Web browser of computer. The parameter settings between the two are the same; Open the web browser of the computer, which is in the same LAN with the controller, input the IP address (such as the default IP: 192.168.0.50), and press "Enter" to browse the controller's built-in website, as shown below:

User Login

Controller Name:

Password:

Note - Default Password: 12345

Parameter Settings

4 Port Ethernet to DMX Controller – IP Address 192.168.0.50

ABOUT

Device ID: 04294967

Device name:

Change Password

Current Password:

Enter New Password:

Confirm New Password:

password setting →

← Confirm

Notes: The maximum length of password is 5.

IP Address Assignment Method

Type of IP: ☐ DHCP (From Network DHCP Server) ☒ Static / Fixed (enter address below)

Static IP Address :

Static IP Address Subnet :

IP address setting confirm →

← Confirm

Notes: It is generally recommended to configure your controller with a static IP address as a DHCP assigned address can change over time. The Static IP address should not be the same IP address as your computer or any other device on your local network.

Test Mode Configuration

Test Mode Configuration

Mode Selection : Enabled: ☐ ← Select a good effect and turn it on

Test mode → ← Reconfirm

Notes: To turn on the test mode, the enable item must be selected.

E1.11 RS-485/DMX512 Output Configuration

Output 1 Enabled: ☒ DMX Universe:
 Output 2 Enabled: ☒ DMX Universe:
 Output 3 Enabled: ☒ DMX Universe:
 Output 4 Enabled: ☒ DMX Universe: ← select universe 1-256

DMX512 output mode → ← Final confirm

Select ON/OFF

Play

Play record effect → File No: Play type: ☒ Start ☐ Stop

System Time Setting

系统时间设置 → Date(YY/MM/DD): // Time(HH:MM): :

Timer1

Timer setting → First step: ON → ☒ ON: ☒ OFF: ☐ ← Second step: enter setup

Timer2

ON: ☐ OFF: ☒

Timer3

ON: ☐ OFF: ☒

Timer4

ON: ☐ OFF: ☒

Timer5

ON: ☐ OFF: ☒

Timer6

ON: ☐ OFF: ☒

Timer7

ON: ☐ OFF: ☒

Timer8

ON: ☐ OFF: ☒

Timer Setting

☒ Daily Start day(MM/DD): / End day(MM/DD): /
☐ Weekly Sun: ☐ Mon: ☐ Tue: ☐ Wed: ☐ Thu: ☐ Fri: ☐ Sat: ☐
☐ Monthly Start day: End day:
 Time(HH:MM): : - : File No:

Third step: Set parameters after pop-up setting page ← Final confirmation

Firmware Update

If you need a firmware update please contact the manufacturer to upgrade the firmware provided by the manufacturer

Firmware Update

Currently Installed Firmware Version: 1.00 / 01-Mar-2021

After downloading updated firmware to Computer – Click to Update Firmware

Note: If your controller is operating properly or have not been instructed by BINCOLOR to update the firmware, we recommend against updating the firmware.

← enter into firmware updating page

Please specify a binary file to update the firmware:

选择文件

未选择文件

Update

← Confirm the upgrade

Select File firmware upgrade file

Update Firmware
Press M Cancel

It displays the updated page

If not, please click on the "Back":

Back

← Return to the main page without upgrading or press the controller **M** key to cancel upgrading

Firmware Update

Currently Installed Firmware Version: 1.00 / 01-Mar-2021

After downloading updated firmware to Computer – Click to Update Firmware

Note: If your controller is operating properly or have not been instructed by BINCOLOR to update the firmware, we recommend against updating the firmware.

← enter into firmware updating page

Please specify a binary file to update the firmware:

选择文件

未选择文件

Update

← Confirm the upgrade

Select File firmware upgrade file

Update Firmware
Press M Cancel



It displays the updated page


If not, please click on the "Back":

Back

← Return to the main page without upgrading or press the controller **M** key to cancel upgrading


Load default

Press the  button at the same time, and power up the controller, and then release the  button when the recovery interface appears

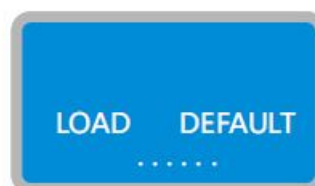


Restored interface

Conjunction Diagram

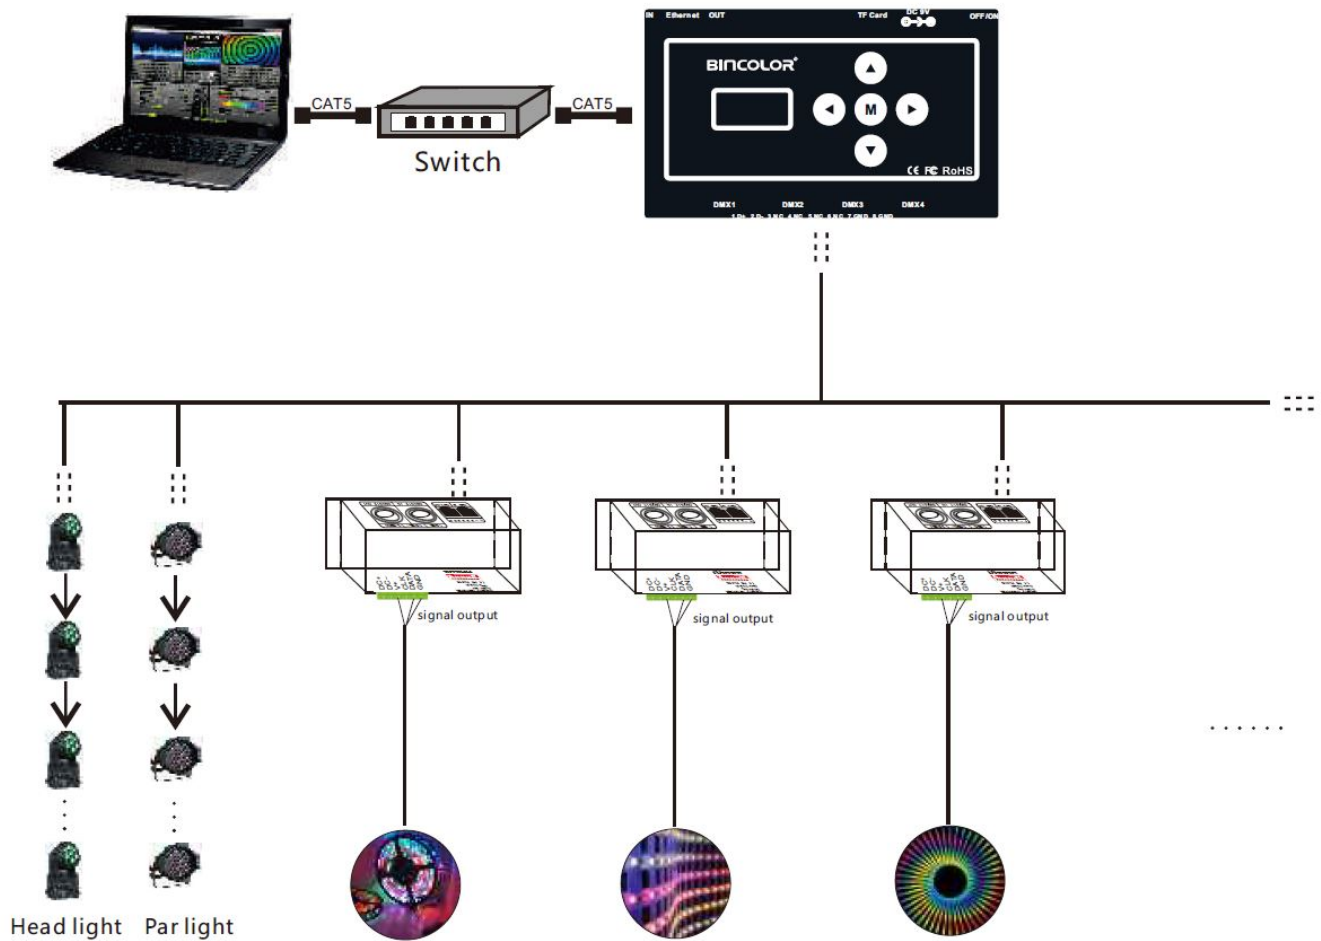

Documents / Resources

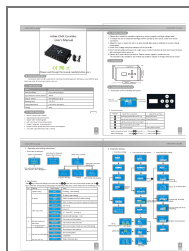

[Super Lighting LED BC-204-DMX512 ArtNet-DMX Controller](#) [pdf] User Manual
BC-204, ArtNet-DMX Controller, BC-204 ArtNet-DMX Controller, Controller, BC-204-DMX512 A
rtNet-DMX Controller, BC-204-DMX512, DMX512