

# Superbcco HW256 Wireless Keyboard and Mouse User Manual

Home » Superbcco » Superbcco HW256 Wireless Keyboard and Mouse User Manual



### Superbcco HW256 Wireless Keyboard and Mouse User Manual



Thank you for purchasing Superbcco 2.4Ghz Wireless Keyboard and Mouse. Each unit has been manufactured to ensure safety and reliability with life-time warranty. Before using for the first time, please read the instructions carefully and keep them for further reference.

#### **Contents**

- **1 PACKAGE CONTENTS**
- **2 HOW TO PAIR**
- **3 SETTING UP YOUR WIRELESS KEYBOARD AND MOUSE**
- **4 INDICATOR LIGHTS**
- **5 KEYBOARD SPECIFICATION**
- **6 FUNCTION KEYS**
- 7 TROUBLESHOOTING
- **8 TECHNICAL SPECIFICATION**
- **9 LIFE TIME WARRANTY**
- **10 CUSTOMER SUPPORT**
- 11 FCC Statement
- 12 Documents / Resources
- **13 Related Posts**

### PACKAGE CONTENTS

- 1 Wireless Keyboard and Mouse
- 1 USB Receiver (stored inside the keyboard; plug it into your computer)
- 2 AAA-Type Batteries for the Meuse (included)
- 2 AAA-Type Batteries for the Keyboard (included)
- 1 Environment-Friendly Transparent Silicone Keyboard Cover
- 1 User Manual

Note: for Macbook, 'Phone, 'Pad & Android phones, tablets, it can work via a USB dongle/OTG.

### **HOW TO PAIR**

Normally keyboard and mouse have already been paired before delivery. Please follow below steps in case they are disconnected. Keyboard Paring: Switch your keyboard off first, pluck the USB receiver out. and then turn your keyboard on and quickly press "Esc" + "k- or "Esc" + "q". Plug the USB receiver into your computer when the indicator starts flashing. Reconnection done when indicator light turns off (Please place keyboard close to USB receiver when paring). Mouse Paring: Switch your mouse off first. pluck the USB receiver out. and then replug it into your computer. Press and hold "Right Click" first and then keep pressing "Scroll Wheel", and switch the mouse on. Reconnection done after 3-5 seconds.

### SETTING UP YOUR WIRELESS KEYBOARD AND MOUSE

- 1. Install two AAA batteries in your keyboard and two AAA batteries in your mouse (Note: batteries+/-ends should follow those indicated on the battery compartment label)
- 2. Connect the 2.4 GHz USB receiver to the computer (Please note that this combo only needs one USB receiver for both keyboard and mouse; and the USB receiver is inserted inside keyboard not inside mouse). Warning: plug the USB receiver into USB 2.0 port (usually the black one) not USB 3.0 the blue one: this is due to USB 3.0 radio frequency interfere with 2.4GHz wireless device. and not properly plug-in may lead to mouse lagging or freezing problems. Sometimes the black one can also be USB 3.0.
- 3. Flip the power switches on (Note: keyboard and mouse has its own independent POWER ON/OFF switch, located on their back. Flipping them off for energy saving when not in use. The keyboard and mouse has already been successfully paired before delivery, and thus simply plug and play).

### **INDICATOR LIGHTS**

- 1. Low Power Alarm:
  - Flashing red for 3 times per second.
- 2. Indicate Whether Caps Lock Is On or Off:

Caps: Press Caps Lock once to type all letters as uppercase. Press Caps Lock again to turn it off.

3. Indicate Whether Num Lock Is On or Off:

**Num:** To use the numeric keypad to enter numbers, press Num Lock. When Num Lock is off, the numeric functions as a second set of navigation keys.

### **KEYBOARD SPECIFICATION**

Transmission Distance	10m/33ft	Keystroke Force	60±10g
Modulation Mode	GFSK	Keystroke Lifetime	3 Million
Working Current	3mA	Standby Current	0.3-1.5mA
Sleep Mode Current	<410pA	Battery	4 AAA (included)
Working Temperature	-10 — +55"C/-14 — +122-F		

### **FUNCTION KEYS**

FN + Page up one screen  FN + Page down one screen  Page down one screen	Key Icon	Windows System Function	Wins FN+Function Keys
F1 Mute  F2 d) F2 Volume Down  F3 Volume Up  F4 Previous Song  F5 DI F5 Play/Pause  F6 Next Song  F7 Brightness -  F8 Brightness +  F9 Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN + Page Down one screen  FN + Page Down one screen  FN + Page Down one screen  Move to the bottom of a webpage	Esc	ESC	Fn-Key Lock
F3 Volume Down  F3 Volume Up  F4 Previous Song  F5 Play/Pause  F6 Next Song  F7 Brightness -  F8 Brightness +  F9 P Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN + Pub Move to the top of a webpage  FN + Pub Move to the pottom of a webpage  FN + Pub Move to the bottom of a webpage  FN + Pub Move to the bottom of a webpage  FN + Pub Move to the bottom of a webpage	F1 dx	F1	Mute
F3 Volume Up  F4 Previous Song  F5 Play/Pause  F6 Next Song  F7 Brightness -  F8 Brightness +  F9 Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN + A Page up one screen  FN + Page down one screen  FN + Page down one screen  Move to the bottom of a webpage	(F2 d)	F2	Volume Down
F5 Play/Pause  F6 Next Song  F7 Brightness -  F8 Brightness +  F9 Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN + Poon A Page up one screen  FN + Poon A Page down one screen  FN + Poon A Move to the bottom of a webpage	F3 40	F3	Volume Up
F5 Play/Pause  F6 Next Song  F7 Brightness -  F8 Brightness +  F9 Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN + Page Up one screen	F4	F4	Previous Song
F6 Next Song  F7 Brightness -  F8 Brightness +  F9 Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN +   Next Song  F7 Brightness -  F8 Brightness +  F9 Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN +   Next Song  F8 Brightness -  F9 Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN +   Next Song  F9 Page uponesseen  FN +   Page uponesseen  FN +   Page down one screen  FN +   Next Song  F8 Brightness -  F9 Calculator  F10 Page upone screen  FN +   Page upone screen  FN +   Page down one screen	F5 M	F5	Play/Pause
F8 Brightness -  F8 Brightness +  F9 Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN +  Move to the top of a webpage  FN +  Page up one screen  FN +  Page up one screen  FN +  Page down one screen  FN +  Page down one screen	F6 N	F6	Next Song
F8  F9  F9  Calculator  F10  Search  F11  Setup  F12  F12  Device Sharing  FN +	F7 *	F7	Brightness -
F9 Calculator  F10 Search  F11 Setup  F12 Device Sharing  FN +	F8 ※	F8	Brightness +
F10  F11  Setup  F12  Device Sharing  FN + Home  FN + Pape  Page up one screen  FN + Pape  Move to the bottom of a webpa	F9	F9	Calculator
F11 Setup  F12 Device Sharing  FN +	F10 p	F10	Search
FN + A Page up one screen  FN + Page  When a Page down one screen  FN + Page  Move to the bottom of a webpage  Move to the bottom of a webpage	F11 0	F11	Setup
FN + Page up one screen  FN + Page down one screen  FN + Page down one screen  Move to the bottom of a webp.		F12	Device Sharing
FN + Page down one screen  FN + Page down one screen  Move to the bottom of a webp.	FN + Home	4	Move to the top of a webpage
EN + Move to the bottom of a webp	FN + A	<b>A</b>	Page up one screen
FN + Move to the bottom of a webp	FN + PgOn	▼	Page down one screen
	FN +	<b>&gt;</b>	Move to the bottom of a webpa

**DELETE Key**: please select the object first and then press delete to make the **DELETE key work**: Backspace key works as direct delete as well.

Screenshot for MAC:

Command Key=Win on this keyboard Full Screen Shot: Command+Shift+3 Area Screen Shot: Command+Shift+4

Common Symptoms	What You Experience	Possible Solutions
		Check if the batteries are inserted correctly (Batteries + and – ends should follow those indicated on the battery compartment label).
		Check if the keyboard or mouse's p ower switch is set to On.
Unable to use the keyboard/mouse	No response when operating your ke yboard <b>Of</b> mouse	
	, coa. a. ococ	Remove & reinstall batteries.
		Remove and reconnect the USB re ceiver on your computer.
		Restart your computer.
		Battery is out of power and please change the battery.
		Clean the surface of the mouse's s ensor.
Mouse problems	Mouse lagging or no response	Try it on another computer.

		Contact us for replacing another U     SB receiver. Sometimes lagging du     e to Win speed and specific computer.
--	--	--

## **TECHNICAL SPECIFICATION**

Item Name	Wireless Keyboard and M ouse Combo HW256	Battery	4 AAA Batteries (included )
Material	ABS	Number of Keys	96
Interface	USB 2.0	Hotkeys	12
Transmission Distance	10m/33ft	Features	Wireless. Ultra-Slim. Plug and Play
Operation Voltage	5V	Optical Resolution	800/1200/1600 DPI
Service Time	<20MA	Mouse Size	10.1cm x 7.5cm x 2.3 cm/ 2.4" x 4.2" x 0.9" (Approx.
Operation Current	23 Million Strikes	Keyboard Size	36cm x 12.1cm x 2.1 cm/ 14.2" x 4.8" x 0.8" (Appro x.)
Colors	Avocado Green/Baby Rn1uPearl White/Midnight Black		
Supported Operating Syst ems	Microsoft Windows 10/&7/XRVista/Server 2003/Server 2008 Server 2012, Ubuntu, Neokylin, Free DOS, Chrome and Android (for Mac, use a USB dongle to make it w ork)		

### **LIFE TIME WARRANTY**

Superbcco warrants this product to be free from manufacturing defects for life-time warranty from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not entend to consequential or incidental damage to other products that may be used with this unit.

### **CUSTOMER SUPPORT**

### **COMPANY ADDRESS**

### SHAANXI DEPIN TRADING CO., LTD

Room 705, Building No. 2. Internet Industry Land, Weibing South Road No. 1. Garden Road Zone, Qiaonan Street Work Station. Weibing District, Baoji City, Shaanxi Province 721000

#### **CONTACT US**

Official Website: www.de-pin.com

Email: info@de-pin.com

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**RF Exposure Information** The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### **Documents / Resources**



<u>Superbcco HW256 Wireless Keyboard and Mouse</u> [pdf] User Manual MOUSE, 2A4LM-MOUSE, 2A4LMMOUSE, HW256 Wireless Keyboard and Mouse, Wireless K eyboard and Mouse

Manuals+,