



Superbcco MK610 Typewriter Style Wireless Keyboard and Mouse User Manual

[Home](#) » [Superbcco](#) » Superbcco MK610 Typewriter Style Wireless Keyboard and Mouse User Manual 

Contents

- [1 Superbcco MK610 Typewriter Style Wireless Keyboard and Mouse](#)
- [2 PACKAGE CONTENTS](#)
- [3 SETTING UP YOUR WIRELESS KEYBOARD AND MOUSE](#)
- [4 FUNCTION KEYS](#)
- [5 FUNCTION KEYS](#)
- [6 TROUBLE SHOOTING](#)
- [7 TECHNICAL SPECIFICATIONS](#)
- [8 LIFE TIME WARRANTY](#)
- [9 FCC Statement](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

SUPERBCCO

Superbcco MK610 Typewriter Style Wireless Keyboard and Mouse



Thank you for purchasing Superbcco Typewriter Style Keyboard and Mouse. Each unit has been manufactured to ensure safety and reliability with life-time warranty. Before using for the first time, please read the instructions carefully and keep them for further reference.

 
PACKAGE CONTENTS

- 1 * Wireless Keyboard and Mouse
- 1 * USB Receiver (stored inside the mouse; withdraw the black unit inserted under the on/off button)
- 1 * User Manual
- 1 * AAA-Type Battery for the Mouse (included)
- 1 * AA-Type Battery for the Keyboard (included)

 
 
Note: MacBook, iPad, iPhone, Android Phone, Tablet, etc. Please use a USB dongle/OTG to make it work.

SETTING UP YOUR WIRELESS KEYBOARD AND MOUSE

1. Install one AA battery in your keyboard and one AAA battery in your mouse (Note: batteries+/-ends should follow those indicated on the battery compartment label).

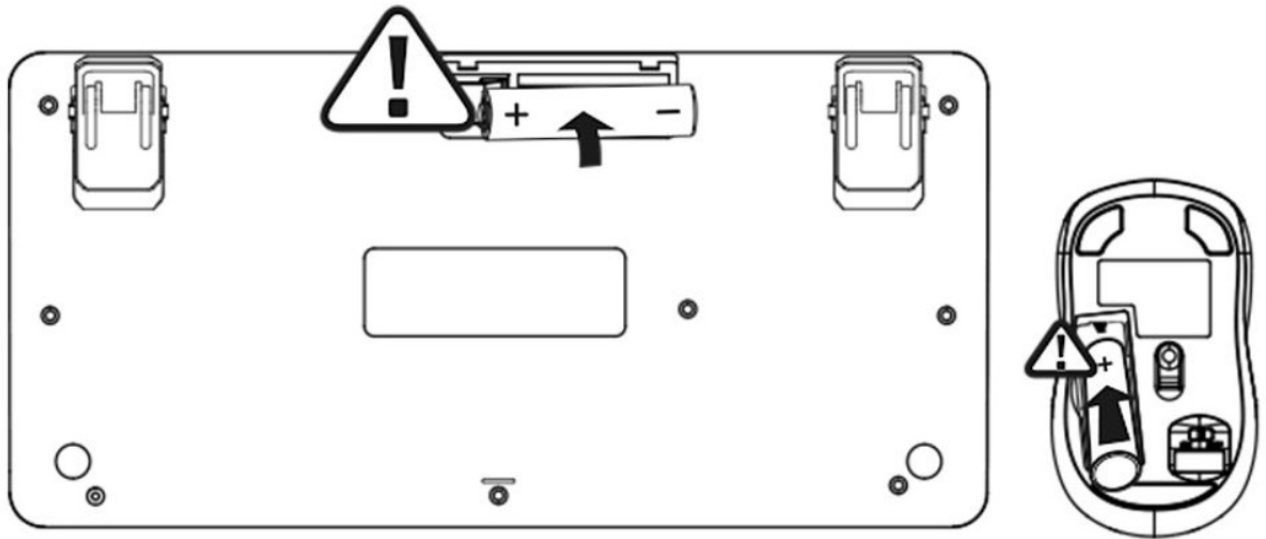



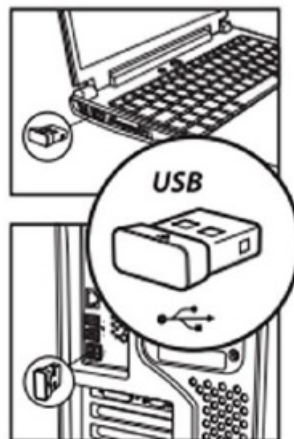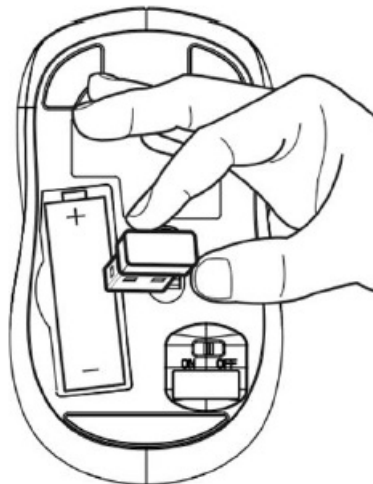


 

 







2. Connect the 2.4 GHz USB receiver to the computer (Please note that this combo only needs one USB receiver for both keyboard and mouse; and the USB receiver is inserted in the back of the mouse below the on/off power icon and please pull it out of the mouse). Warning: plug the USB receiver into USB 2.0 port (usually the black one) not USB 3.0 the blue one; this is due to USB 3.0 radio frequency interfere with 2.4GHz wireless device, and not properly plug-in may lead to mouse lagging or freezing problems. Sometimes the black one can also be USB 3.0.



3. Turn on your keyboard and mouse. Power on/off placed on the back of the mouse; the Battery icon indicator on keyboard doesn't turn on when connecting to computer, and the keyboard and mouse have already been successfully paired before delivery; the light on keyboard "A" turns on when you press CAPS LOCK).

FUNCTION KEYS

- When  is locked, press to activate F1~F12 functions keys;
- Hold down FN+  to unlock FN key and press the desired function key.

Key Icon	Windows	Key Icon	Windows
Esc	Home		Decrease Brightness
	Mute		Increase Brightness
	Decrease Volume		Calculator
	Increase Volume		Search
	Previous Track		Setup
	Play/Pause		Device Sharing
	Next Track		Fn-key Lock





 

DELETE Key: Please select the object first and then press delete to make the DELETE key work;



Backspace Key works as direct delete as well.

Correspond Keys on Win & Mac:

- Windows icon=Command
- Alt (Left)=Option
- Enter=Return
- Alt GR(Right)=Option+Control

FUNCTION KEYS

-  Under Chinese Input Mode+Shift
  Under English Input Mode+Shift|
-  Under Chinese Input Mode (No Need Other Operation)
-  Under English Input Mode (No Need Other Operation)
-  Under Chinese Input Mode+Shift
  Under English Input Mode+Shift

-  Directly Input
  Directly Input

TROUBLE SHOOTING

Common Symptoms					What You Experience	Possible Solutions		
Unable mouse	to	use	the	keyboard	No response when operating your keyboard or mouse	1. Check if the batteries are inserted correctly (Batteries + and – ends should follow those indicated on the battery compartment label)		
						2. Check if the mouse’s power switch is set to On .		
						3. Remove and	reinstall	the
						batteries.		
						4. Remove and USB receiver	reconnect on	the your
computer.								
5. Restart your computer								
Mouse lagging or no response					Mouse lagging or no response	6. Battery is out of power and please change the battery;		
						7. Clean the surface of the		

TECHNICAL SPECIFICATIONS

Item Name	Wireless Retro Typewriter Style Keyboard and Mouse Combo	Battery	2 AAA Batteries (included)
Material	Environment-Friendly ABS	Optical Resolution	1600 DPI
Interface	USB 2.0	Number of Keys	79
Transmission Distance	10m/33ft	Hotkeys	13
Operation Voltage	5V	Features	Wireless, Cute, Plug and Play
Operation Current	<20mA	Mouse Size	101mm x 75mm x 34mm/2.4" x 4.2" x 1.5" (Approx.)
Service Time	≥10 Million Strikes	Keyboard Size	30.9cm x 14.6cm x 2.9cm/12.2" x 5.8" x 0.9" (Approx.)
Colors	Midnight Black/ Crocodile Green/ Lemon Yellow/ Salmon Pink/ Pearl White		
Supported Operation Systems	Microsoft Windows 10/8/7/XP/Vista/Server 2003/Server 2008/Server 2012, Linux 6.x, Ubuntu, Neokylin, Free DOS, Chrome and Android		

LIFE TIME WARRANTY

Superbcco warrants this product to be free from manufacturing defects for life-time warranty from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit.

COMPANY ADDRESS

Shaanxi Depin Trading Co., Ltd Room 705, Building No. 2, Internet Industry Land, Weibing South Road No. 1, Garden Road Zone, Qiaonan Street Work Station, Weibing District, Baoji City, Shaanxi Province, 721000

CONTACT US

Official Website: www.de-pin.com

Tel: +01 (415) 326-9924

Email: info@de-pin.com

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Documents / Resources

	Superbcco MK610 Typewriter Style Wireless Keyboard and Mouse [pdf] User Manual MK610, 2A4LM-MK610, 2A4LMMK610, MK610, Typewriter Style Wireless Keyboard and Mouse, MK610 Typewriter Style Wireless Keyboard and Mouse, Wireless Keyboard and Mouse, Keyboard, Mouse
---	--

References

-  [The point where superior design meets precision manufacturing – Follow us @ \[www.linkedin.com/company/pinfixtures\]\(https://www.linkedin.com/company/pinfixtures\)](#)