



Superlighting V4-K 4 Knob RGBW LED RF Controller User Manual

[Home](#) » [SuperLightingLED](#) » Superlighting V4-K 4 Knob RGBW LED RF Controller User Manual 



4 Knob RGBW LED RF Controller
Model No.: V4-K

4 Channel RGBW/Wireless remote control/Four PWM frequency/Linear or logarithmic dimming/Numeric display



FC  CE RoHS  LVD RED

Contents

[1 Features](#)

[2 Technical Parameters](#)

[3 Mechanical Structures and Installations](#)

[4 Wiring Diagram](#)

[5 Operation](#)

[6 Dimming curve setting](#)

[7 Documents / Resources](#)

[8 Related Posts](#)

Features

- RGBW constant voltage LED RF controller, can also be used as a RGBW RF remote.
- 4 knob dimming, digital numeric display and easy key operation.
- Match with RF 2.4G single zone or multiple zone RGBW remote control optional.
- 256 levels 0-100% dimming smoothly without any flash.
- Built in 10 dynamic mode, include jump or gradual change style.
- PWM frequency 1000/2000/4000/8000Hz selectable.
- Logarithmic or linear dimming curve selectable.

Technical Parameters

Input and Output	
Input voltage	12-24VDC
Input current	16.5A
Output voltage	4 x (12-24)VDC
Output current	4CH,4A/CH
Output power	4 x (48-96)W
Output type	Constant voltage


Environment	
Operation temperature	Ta: -30 OC ~ +55 OC
Case temperature (Max.)	T c: +85OC
IP rating	IP20

Warranty and Protection	
Warranty	5 years
Protection	Reverse polarity

Dimming data	
Input signal	Knob + Key + RF 2.4GHz
Control distance	30m(Barrier-free space)
Dimming gray scale	256 levels
Dimming range	0 -100%
Dimming curve	Logarithmic or linear
PWM Frequency	1000/2000/4000/8000Hz


Safety and EMC	
EMC standard (EMC)	EN301 489,EN 62479
Safety standard(LVD)	EN60950
Radio Equipment(RED)	EN300 328
Certification	CE,EMC,LVD,RED

Mechanical Structures and Installations

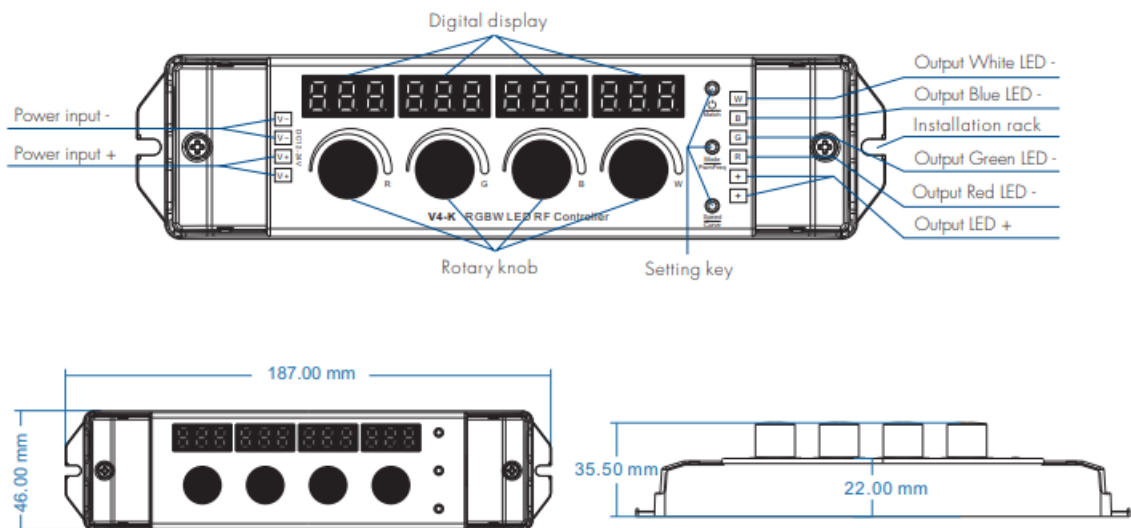


Wiring Diagram

- Work as RGBW LED controller

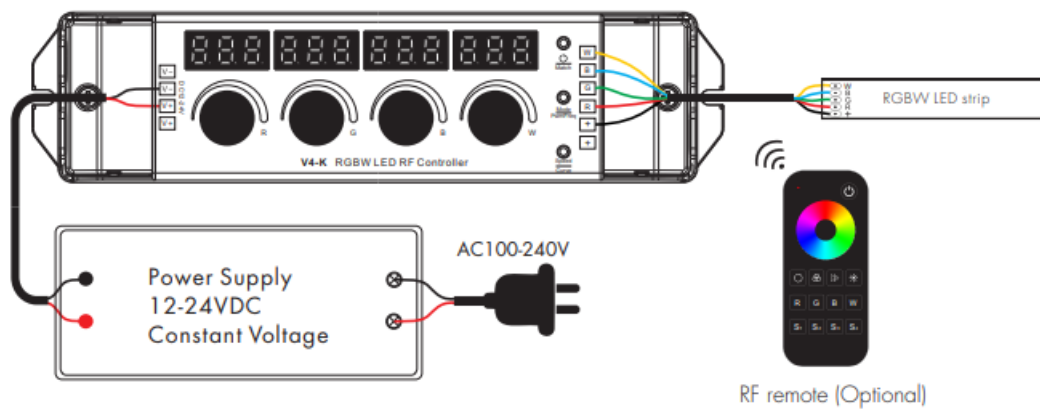

- Work as RGBW RF remote

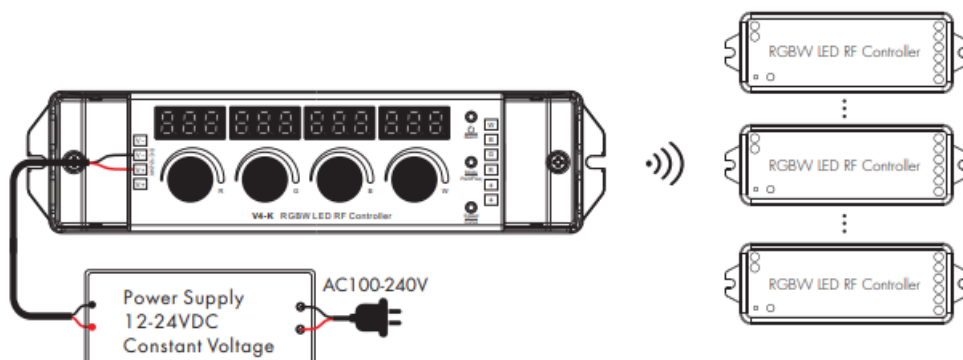

Operation

4 knob dimming



3 key setting



Match

Short press: Turn on or turn off the light. When light is off, display "OFF". Long press 5s: Enter RF remote matching state, display "RLS", within 5s, press on/off key or zone key of the RGBW RF remote, display "RLO", match is successful, Long press 10s: Until display "RLE", delete all matched RF remote. Long press 15s: Restore factory default parameter, display "RES".



Mode
PwmFreq

Short press: Switch between 10 dynamic change mode (P01~P10). Long press 5s: Prepare for setup output PWM frequency, then short press mode key to switch between 1000Hz("F10"), 2000Hz("F20"), 4000Hz("F40") or 8000Hz("F80"). Higher PWM frequency, will cause lower output current, higher power noise, but more suitable for camera (No flickers for video). Long press Mode key for 2s or timeout 10s, quit output PWM frequency setting.

Short press: Set mode speed, switch between 1-10 level speed (S-1, S-9, S-F).



Speed
Curve

Long press 5s: Prepare for setup output brightness curve, then short press speed key to switch between linear curve("C-L") or logarithmic curve("C-E"). Long press Speed key for 2s or timeout 10s, quit output brightness curve setting.

RGBW dynamic mode list

No.	Name	No.	Name
P01	RGB jump	P06	RGB fade in and out
P02	RGB smooth	P07	Red fade in and out
P03	6 color jump	P08	Green fade in and out
P04	6 color smooth	P09	Blue fade in and out
P05	Yellow cyan purple smooth	P10	White fade in and out

4 Knob Controller Work as RGBW RF remote

This 4 knob controller work as RGBW RF remote can match with one or multiple RGBW LED RF controller. End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key of receiver, immediately press on/off key on the knob controller. The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key of the receiver for 5s to delete all match, The LED indicator fast flash a few times means all matched RF remotes were deleted.

Use Power Restart

Match:


Switch off the power of the receiver, then switch on power again, immediately short press on/off key 3 times on the knob controller. The light blinks 3 times means match is successful.

.Delete:


Switch off the power of the receiver, then switch on power again, immediately short press on/off key 5 times on the knob controller. The light blinks 5 times means all matched remotes were deleted.

Dimming curve setting

Linear dimming curve

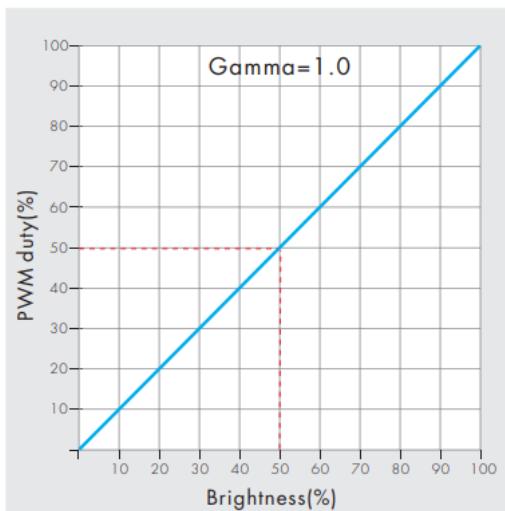


Logarithmic dimming curve

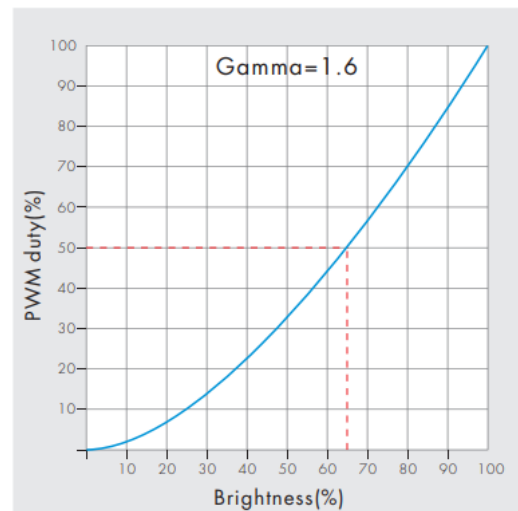

User Manual Ver 1.0.1

Documents / Resources

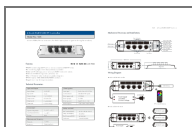

[Superlightingled V4-K 4 Knob RGBW LED RF Controller](#) [pdf] User Manual
V4-K 4 Knob RGBW LED RF Controller, V4-K, 4 Knob RGBW LED RF Controller, RGBW LED RF Controller, LED RF Controller, RF Controller, Controller