



superlightingled wb5 WiFi&BT 5-in-1 LED Strip Controller Instruction Manual

[Home](#) » [SuperLightingLED](#) » superlightingled wb5 WiFi&BT 5-in-1 LED Strip Controller Instruction Manual 



wb5 WiFi&BT 5-in-1 LED Strip Controller Instruction Manual



WiFi&BT 5-in-1 LED Strip Controller
Model No.: WB5



















Please read the instructions carefully before using the controller.

Contents

- [1 Features](#)
- [2 Parameters](#)
- [3 Indicating light instruction:](#)
- [4 Auto-transmitting Diagram](#)
- [5 Connect to the LED strip](#)
- [6 Remote Controller](#)
- [7 Bluetooth control instructions](#)
- [8 Connect to Smartphone](#)
- [9 APP Control](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

Features

 
The controller is adopted by the most advanced PWM control technology, and has a memory function (The light status will keep the same as the status before you turn on the light) ; Wireless and 4G are controlled by Tuya Smart Life APP.

	16 Million colors to choose		WiFi wireless control
	Color temperature 2700K-6500K		Smartphone APP control
	Dim brightness/saturation		Support third-party voice control
	Support music rhythm		Support remote control (control distance 30 m)
	Support scene customization		Device sharing
	Timing setting/countdown turn on /off LED light		Group control
	Bluetooth wireless control		2.4G wireless transmission technology
	Tap-to-Run & automation		Auto-transmitting & Synchronization
	Free screw when connecting to LED strip		Link/Unlink/Reset Button on the controller


Parameters

RF: 2.4GHz Weight: 65g

Different controllers can work synchronously when they are started at different times, controlled by the same remote, under the same dynamic mode, and with the same speed.

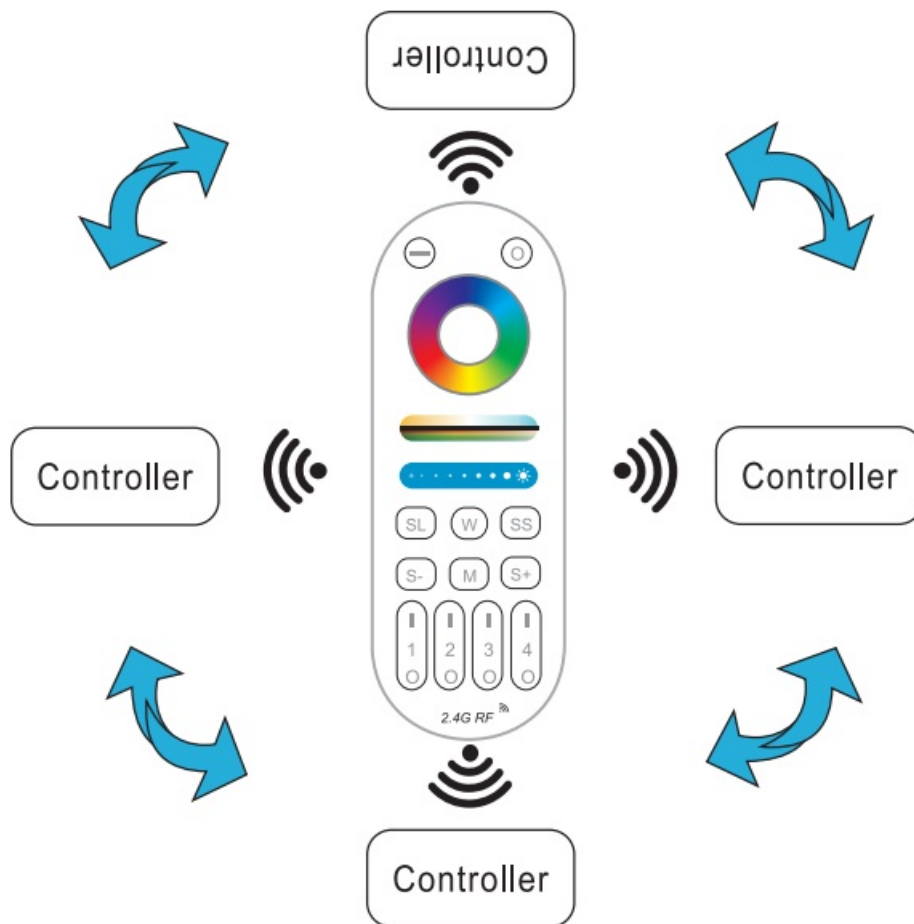


Remark:

1.  Indicating Auto-transmitting.
2. The controller will be auto-synchronizing in the same dynamic modes and within 30m controlling distance.

Auto-transmitting Diagram

 One strip controller can transmit the signals from the remote control to another controller within 30m, as long as there is a strip controller within 30m, the remote control distance can be limitless.

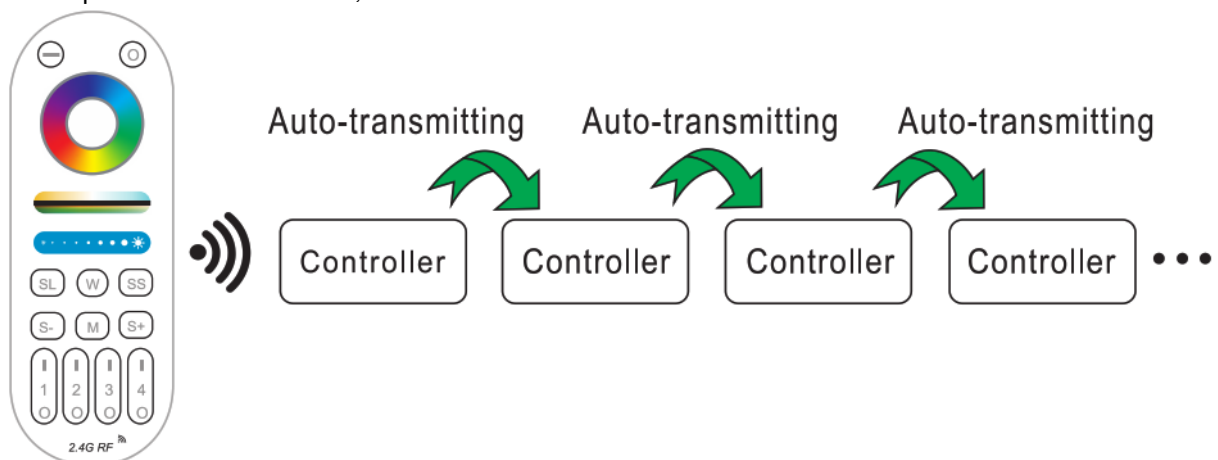


Connect to the LED strip




Controller input voltage must be in accordance with the required voltage of LED Strips.

Input voltage=Output Voltage

 
Connect to Single Color LED strip diagram

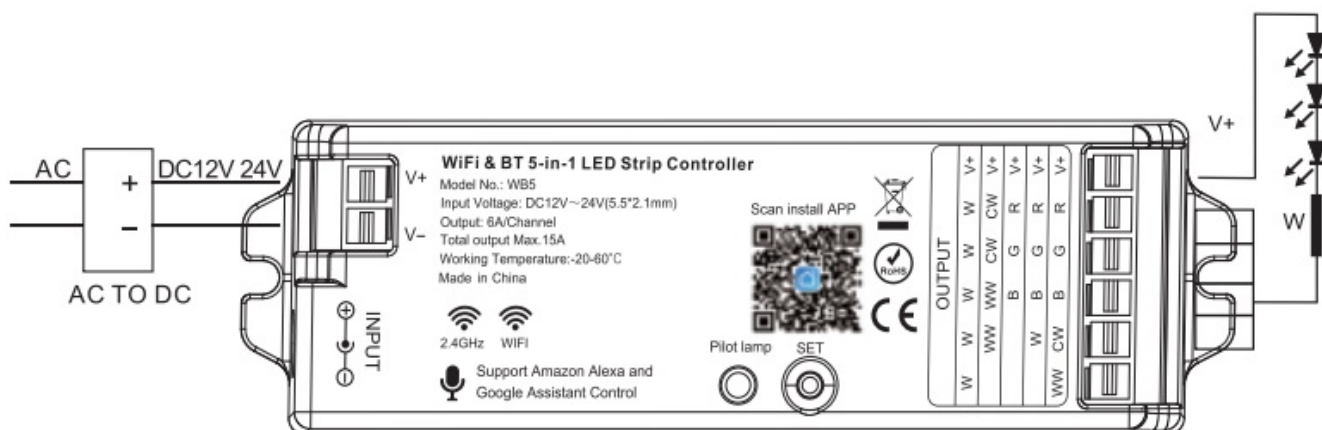


Connect to RGBW LED strip diagram

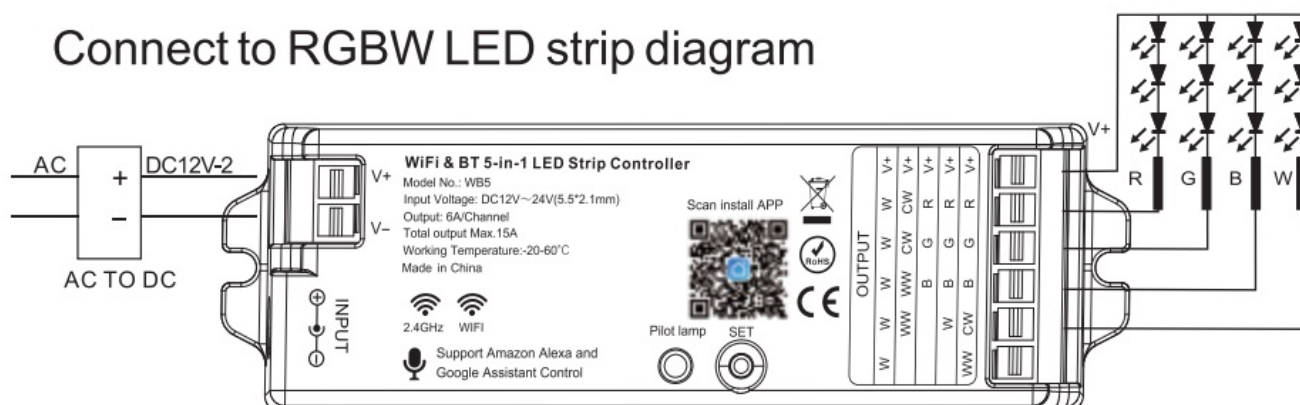 


Connect to RGB+CCT LED strip diagram

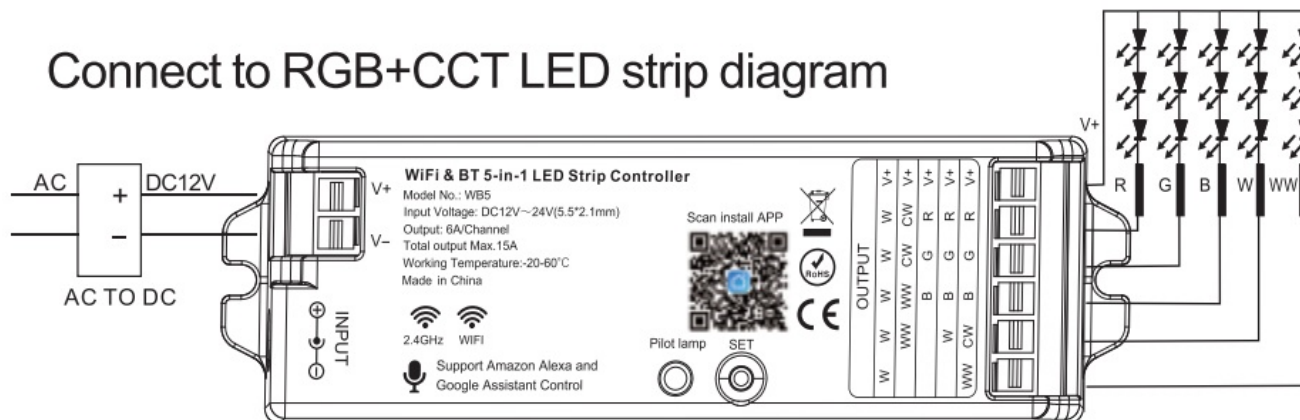 

Connect to CCT LED strip diagram

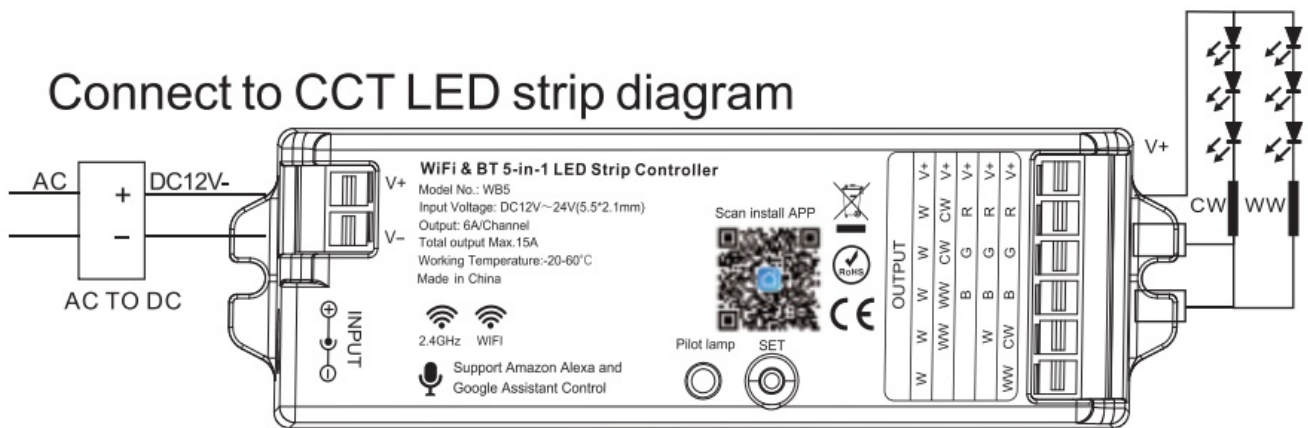 

Connect to RGB LED strip diagram

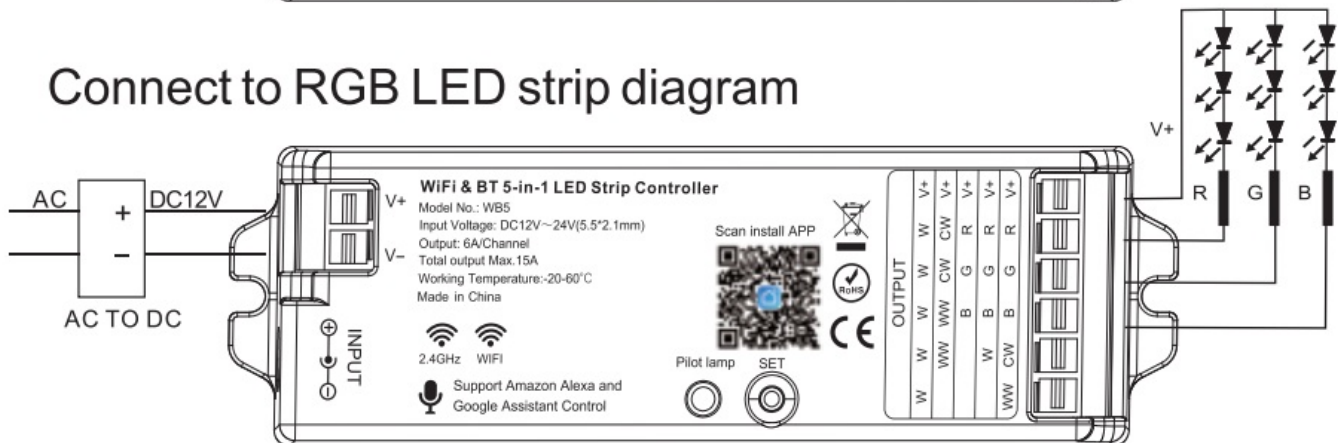 

Remote Controller


Compatible with these remote controls (Purchased separately). For more details, please read the remote instruction.



FUT096



 091

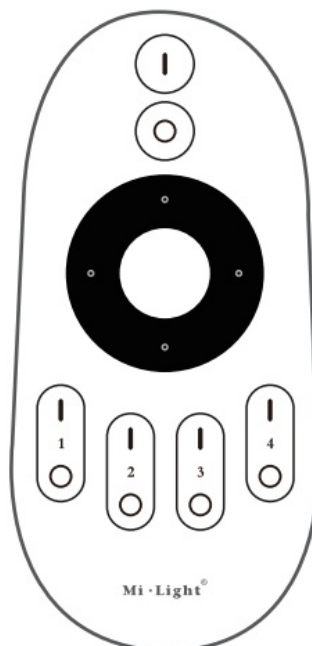

FUT007

 
Bluetooth control instructions

When the router is disconnected, you can turn on the Bluetooth of your smartphone and connect the directly controlled device at a short distance.

Switching Bluetooth control steps:

1. Complete the network distribution of the equipment.
2. Power off the router used for network configuration, turn off WiFi on the mobile phone, turn on Bluetooth, and wait for about 3-5 minutes to control.

Free screw when connecting to LED strip

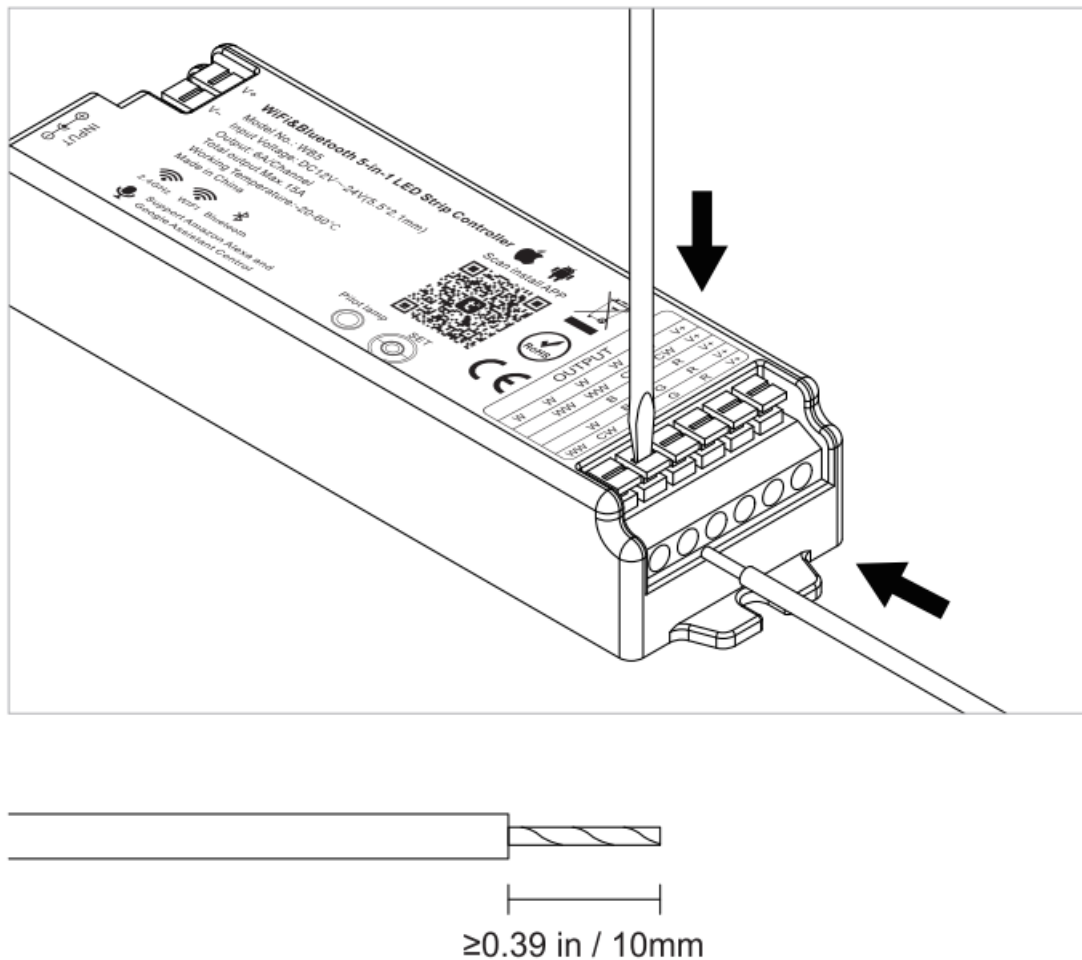

Tuya Smart Life APP WiFi Control Instruction:


1, Download and install [Tuy a Smart] APP or [Smart Life] APP

Search for [Smart Life] in Apple or Google store or scan the following QR code to download and install the app. Please click the "Register" button to create an account while using it in the first time, log in directly if you already had an account.

	
https://smartapp.tuya.com/tuyasmart	https://smartapp.tuya.com/smartlife

Connect to Smartphone

 1. Connect controller with power supply.
2. Confirm Pilot lamp is flashing quickly (2 flashes per second) If the Pilot lamp isn't in fast flashing state, there are two ways to enter:
 - Long press the "SET" key until the Pilot lamp flashes quickly.
 - Power OFF and ON once, long press Zone ON button of linked remote until the LED strip blinking 3 times. (available remote model: LM091)
3. Connect the phone with the home WiFi network at the 2.4GHz frequency.
4. Open the homepage of the APP and click the "+" button at the upper right corner of the page. If the pilot lamp is flashing red, it will find the new device automatically.
- 5.

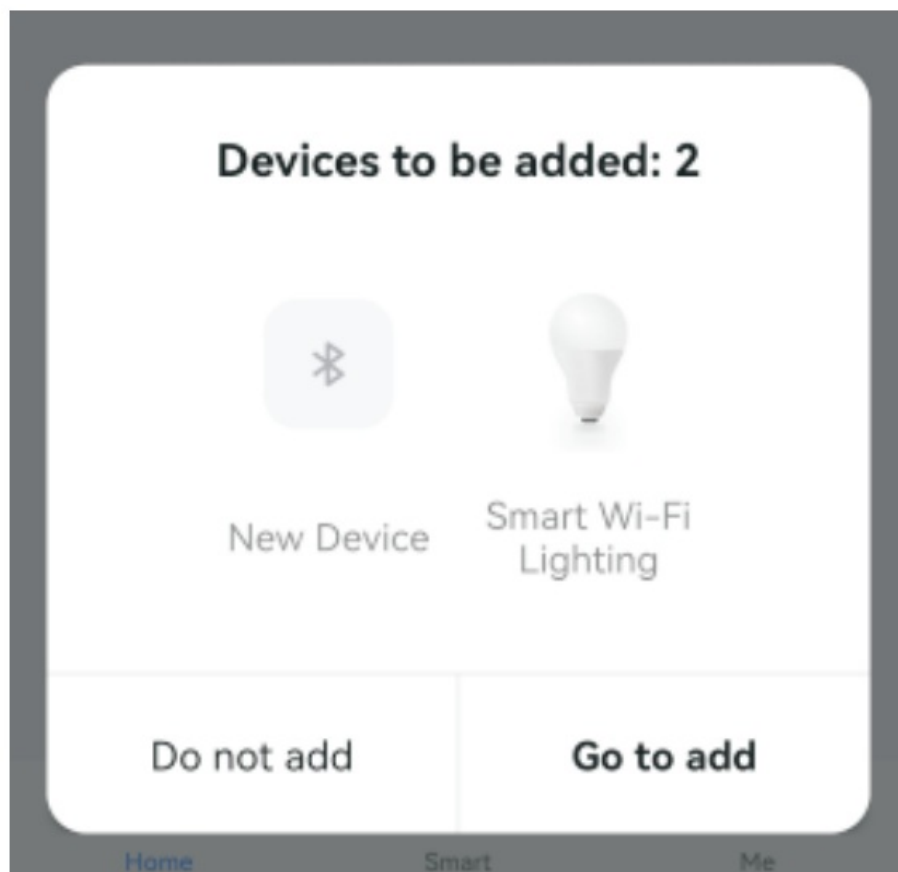

Added devices will be displayed on the home page after network configuration is successful.

 
6. Click the device you want to control to enter the control interface.



APP Control

1. Click "device" or "group" you want to control on the homepage to enter the control page, where you can control color, saturation, brightness, color temperature, and scene.
2. Click music sync to enter music rhythm mode, light will change with the rhythm of the music.


Note: Music rhythm mode requires phone keep on this page

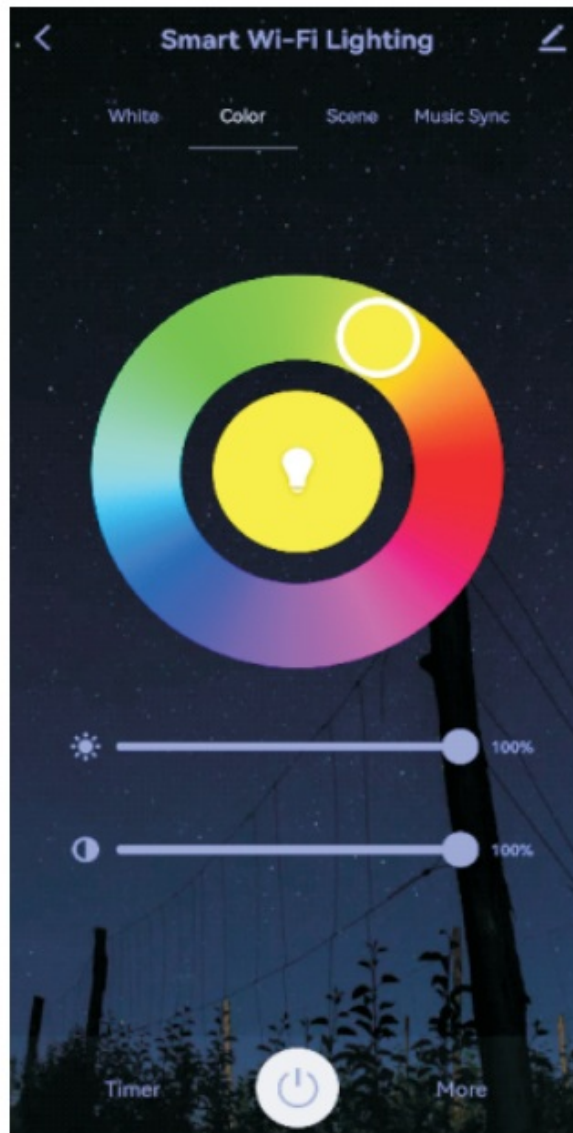

3. Click More on the right bottom, you can choose more settings, including Plan, Schedule, Biorhythm and Power-on behavior.


For detailed settings, please read the below links:
 
<https://developer.tuya.com/en/docs/iot/product-panel-configuration?id=K9s9rhj417z8b#title-11-1>

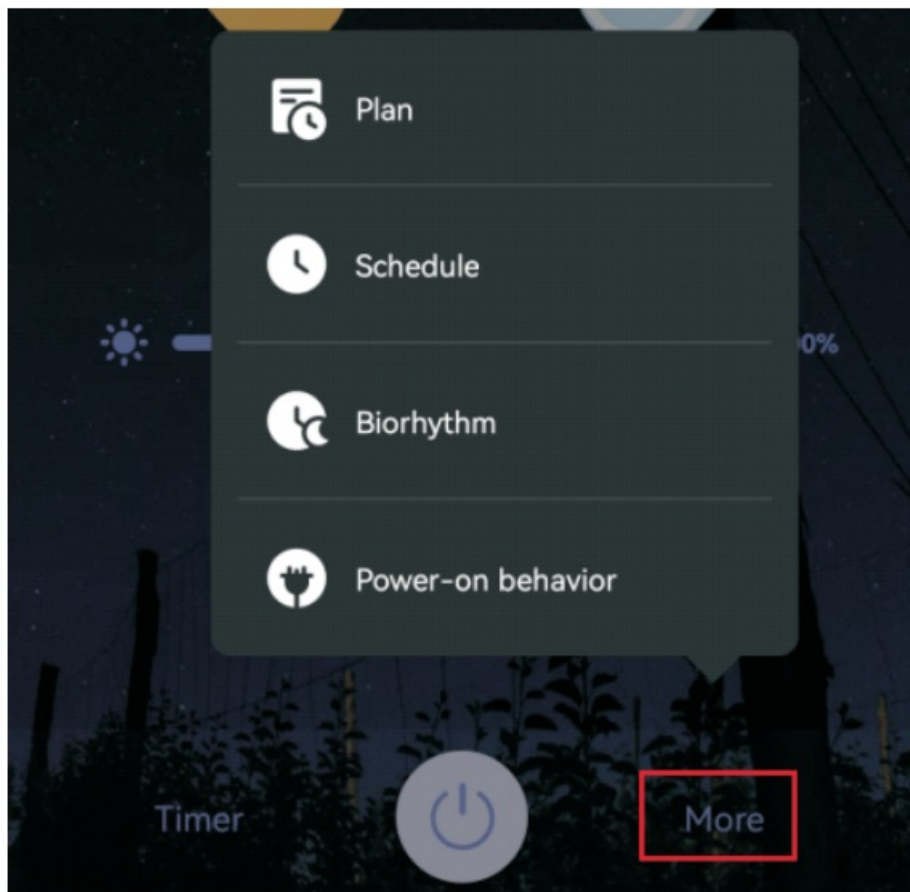


Device name editing, third-party control, device sharing  soup control.

 1. Click " " on the upper right corner of the control page to enter the edit page, where you can modify device name, icon, etc.
2. Click the icon under third-party control to view a detailed description of third-party control.
3. Click " Share Device " to share the device with family and friends.
4. Click " Create Group " and follow the APP prompt after the setting is completed, the device can be controlled by the group.

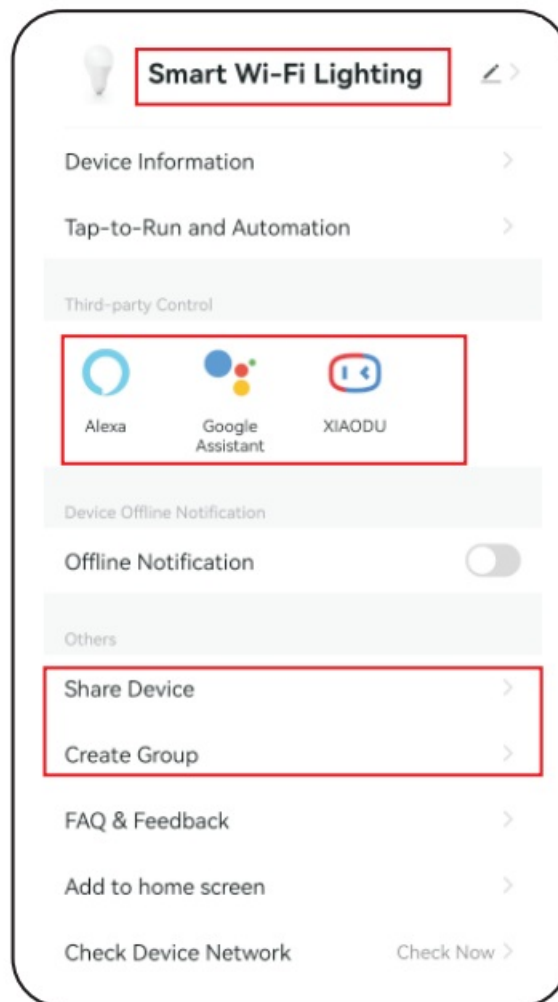


5 Intelligent control

 1. Click " Smart " at the bottom.
2. Click " + " in the upper right corner to create intelligent control.

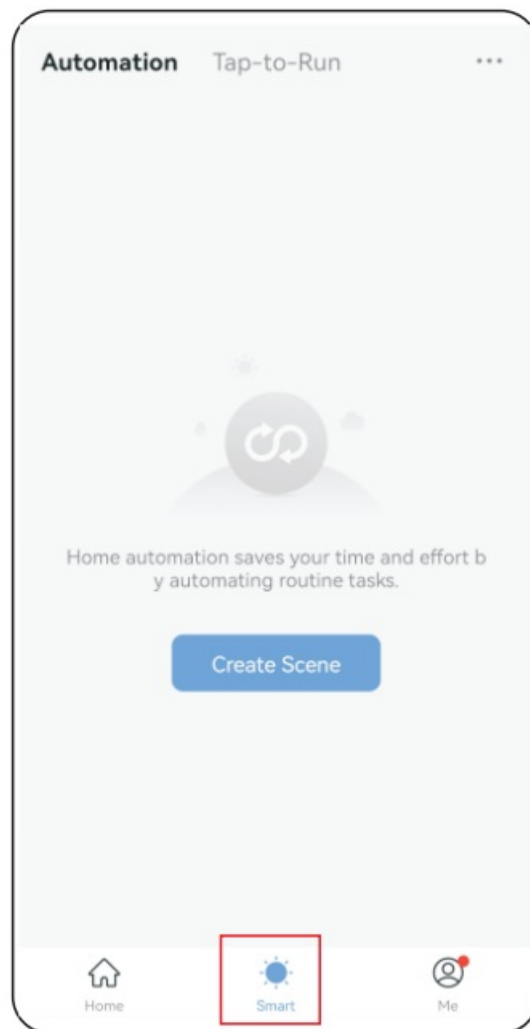

 (3) In the page of creating smart, you can set a command to be executed under the specified conditions (such as: turn on or turn off light, color, brightness, mode, etc.)

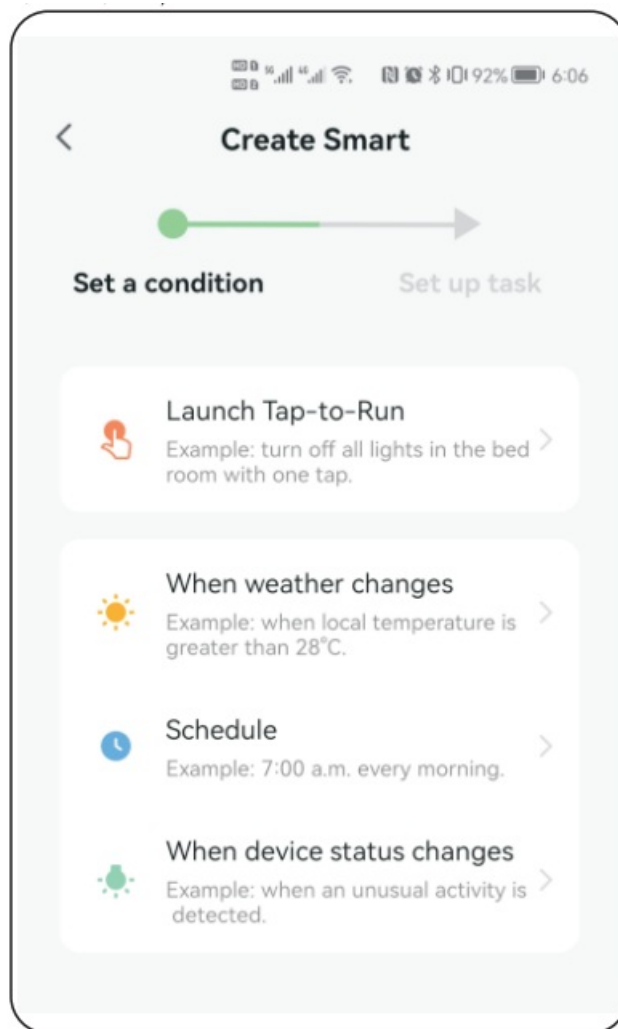

Attention

 
1. Please check whether the input voltage of the constant voltage power supply is in accordance with the controller, and please check the connection of both the cathode and anode.
2. The working Voltage is DC12-24V, the controller will be broken if the voltage is higher than 24V.
3. Non-professional users cannot dismantle the controller directly, otherwise, it may cause fire and electric shock.
4. The working temperature is -20-60°C; Do not use the device to direct sunlight, moisture, and another high-temperature area.
5. Please do not use a controller around the mental area and high magnetic field, otherwise, it will badly affect the control distance.
6. When the device load to 15A, the wire diameter must be over 1.5mm



Controller can not
use in humid area



Documents / Resources

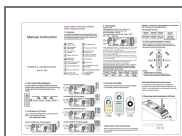

[superlightingled wb5 WiFi&BT 5-in-1 LED Strip Controller](#) [pdf] Instruction Manual
wb5 WiFi BT 5-in-1 LED Strip Controller, wb5, WiFi BT 5-in-1 LED Strip Controller, wb5 5-in-1 L
ED Strip Controller, wb5 LED Strip Controller, wb5 Controller

[Manuals+.](#)