

[Skip to content](#)

Manuals+

User Manuals Simplified.



SUPERSONIC SC-3075K Bluetooth Speaker With Microphone User Manual

[Home](#) » [Supersonic](#) » SUPERSONIC SC-3075K
Bluetooth Speaker With Microphone User Manual

**SUPERSONIC SC-3075K Bluetooth Speaker With
Microphone User Manual**



Contents [hide](#)

[1 OPERATING INSTRUCTION](#)

[2 PACKING LIST](#)

[3 DESCRIPTION](#)

[4 Button Function](#)

[5 Instructions for use](#)

[6 Singing instruction](#)

[7 Product parameters](#)

[8 Warranty](#)

[9 FCC STATEMENT](#)

[10 Documents / Resources](#)

[11 Related Posts](#)

OPERATING INSTRUCTION

All the instructions should be read carefully before operation and follow the instructions.

- The speaker should be situated away from heat sources such as radiators, and not exposed to moist air or water.
- Place the unit on a stable place to prevent it from being fallen down.
- The speaker should be only connected to a power supply described in the operating instructions.
- The user should not attempt to repair the speaker if you are not professional .
- Disconnect the power cable from the outlet & switch off before cleaning the unit. Please only use soft cloth,no harsh abrasives or chemicals to clean, as they will damage the appearance.

- The power cable of the speaker should be unplugged from the outlet and power switch should be off when left unused for a long period of time.

PACKING LIST

1. **Speaker:** 1pc



2. **Microphone:** 2pcs



3. **User Manual:** 1pc



4. **Stereo Audio:** 1pc




5. **USB Charging Cable:** 1pc



DESCRIPTION

Schematic diagram

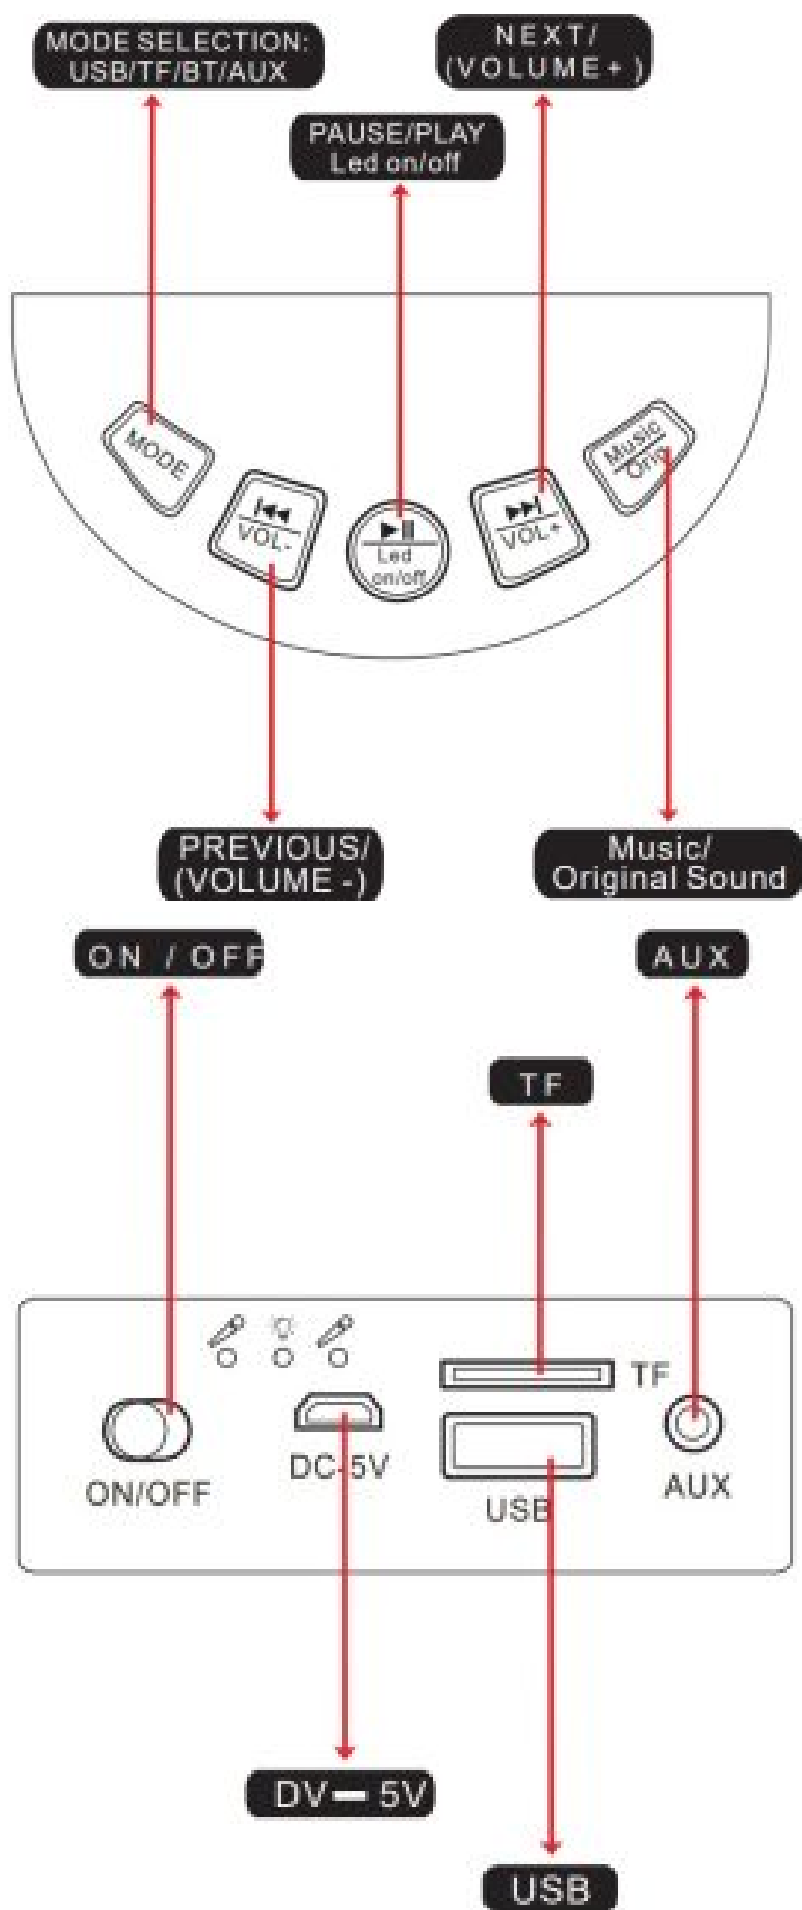










OFF/ON

1. "OFF" means Power off , "ON" means Power on,speaker will enter into the play mode which same as last time.
2. Charging:Insert out power to "DC 5.0V",then the built-in battery can be charged.

Play Mode

1. Insert the audio equipment to the "AUX", and the speaker can play music from mobile phone, MP3, computer and other audios.
2. **MP3 function**
TF card/U disk: Insert TF card to "TF", it will play music from TF card. Insert U disk, it will play music from U disk.

Button Function

1. **MODE:**
MODE button is the mode conversion (Bluetooth, TF card, U disk, AUX).
2.  / **VOL-** :
Short press " / VOL-", it will be PREVIOUS song ; Long press " / VOL-" to volume down.
3.  / **Led on/off** :
Short press the " / Led on/off " button to pause and play music, Long press the " / Led on/off " button to turn on the colorful neon lights, allowing you to sing at home and enjoy the KTV atmosphere.
4.  / **VOL+** :
Short press " / VOL+ ", it will be NEXT song; Long press " / VOL+ " to volume down.
5. **Music/Orig:**
Short press the Music Original button is to cancel the original singer's voice.

Instructions for use

As you power on, Bluetooth mode is the default. You could search for the bluetooth device named "SC-3075K" on your phone for connection. It will be converted to TF card mode when you insert the TF card. It will be converted to USB mode when you insert the U disk. It will be converted to AUX mode when you insert the 3.5MM audio cable. When insert the TF card and USB at the same time, press the MODE button to convert the mode.

Singing instruction

When the speaker is turned on, the wireless microphone is connected to the speaker by default after turning it on. Just turn on the wireless microphone power switch "ON / OFF" and you can sing in any mode of the speaker. When you sing, you can adjust the reverb effect through the "ECH" button of the wireless microphone and adjust the voice volume through the "VOL" button. The volume is adjusted according to your personal preference to achieve the desired singing effect.

When the blue light of the wireless microphone is flashing, it means the microphone battery is too low and needs to be charged.

Note

1. Please use the 5V/2A charger to charge, do not play music while charging.
2. When the microphone is turned on, Do not point the microphone straight to the speaker to avoid howling.

Product parameters

Power output: 10W+10W

Frequency: 100HZ—18KHZ

Drive Unit: 3IN*2

S/N : ≥ 80db

Lithium battery: 7.4V / 1 500 mAh

Materials: Plastic

Color box size: 280*175*230mm

USB port : Support 4G – 32G

USB version : Support 2.0/3.0 File Format : MP3/WMA)

Warranty

Basic Warranty Statement

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit <http://www.supersonicinc.com/warranty> for additional information.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Documents / Resources



[SUPERSONIC SC-3075K Bluetooth Speaker With Microphone](#) [pdf] User Manual
SC-3075K, SC3075K, 2AMD8-SC-3075K, 2AMD8SC3075K, SC-3075K, Bluetooth Speaker With Microphone

[Manuals+](#),

- [home](#)
- [privacy](#)