

suprema SIO2-V2 Secure I/O 2 Single Door Module Installation Guide

Home » suprema » suprema SIO2-V2 Secure I/O 2 Single Door Module Installation Guide



Contents

- 1 suprema SIO2-V2 Secure I/O 2 Single Door
- 2 Safety information
- 3 Installation
- 4 Operation
- 5 Installation
- **6 Operation**
- 7 Introduction
- **8 Connections**
- 9 Relay
- **10 Product Specifications**
- 11 FCC compliance information
- 12 Appendices
- 13 Documents / Resources
 - 13.1 References
- **14 Related Posts**



suprema SIO2-V2 Secure I/O 2 Single Door Module



Safety information

Please read this safety instructions before you use the product to prevent injury to yourself and others and to prevent property damage. The term 'product' in this manual refers to the product and any items provided with the product.

Instructional icons

Warning: This symbol indicates situations that could result in death or severe injury.

Caution: This symbol indicates situations that may result in moderate injury or property damage.

Note: This symbol indicates notes or additional information.

Warning

Installation

Do not install or repair the product arbitrarily.

- This may result in electric shock, fire, or product damage.
- Damages caused by any modifications or failure to follow installation instructions can void the manufacturer's warranty.

Do not install the product in a place with direct sunlight, moisture, dust, soot, or a gas leak.

This may result in electric shock or fire.

| Do not install the product in a location with heat from an electric heater. | | | |
|---|--|--|--|
| This may result in fire due to overheating. Install the product in a dry location. | | | |
| Humidity and liquids may result in electric shock or product damage. | | | |
| Do not install the product in a location where it will be affected by radio frequencies. | | | |
| Do not install the product in a location where it will be affected by radio frequencies. | | | |
| Operation | | | |
| Keep the product dry. | | | |
| Humidity and liquids may result in electric shock, fire, or product damage. | | | |
| Do not use damaged power supply adaptors, plugs, or loose electrical sockets. | | | |
| Unsecured connections may cause electric shock or fire. | | | |
| Do not bend or damage the power cord. | | | |
| This may result in electric shock or fire. | | | |
| Installation | | | |
| Do not install the power supply cable in a location where people pass by. | | | |
| This may result in injury or product damage. | | | |
| Do not install the product near magnetic objects, such as a magnet, TV, monitor (especially CRT), or speaker. | | | |
| The product may malfunction. | | | |
| Secure I/O 2, the electrical locking device and access controller must use independent power source. | | | |
| Operation | | | |
| Do not drop the product or cause impacts to the product. | | | |
| The product may malfunction. | | | |
| Do not press buttons on the product by force or do not press them with a sharp tool. | | | |
| The product may malfunction. | | | |

When cleaning the product, mind the following.


- · Wipe the product with a clean and dry towel.
- If you need to sanitize the product, moisten the cloth or the wipe with a proper amount of rubbing alcohol and gently clean all exposed surfaces including the fingerprint sensor. Use rubbing alcohol (containing 70% Isopropyl alcohol) and a clean, non-abrasive cloth like lens wipe.
- Do not apply liquid directly to the surface of the product.

Do not use the product for anything other than its intended use.


The product may malfunction.


Introduction

Components

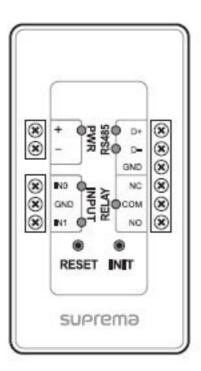


Secure I/O 2

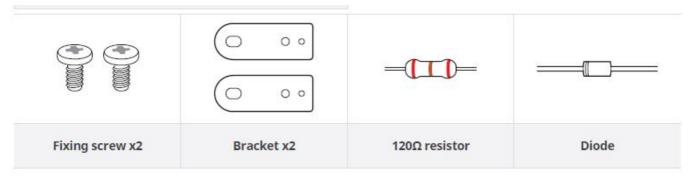

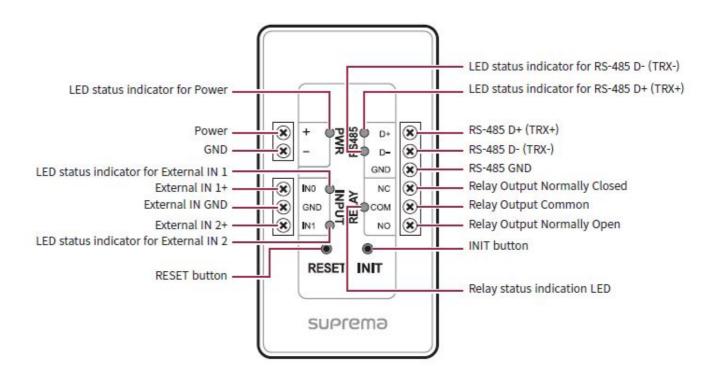

Installation Example

Secure I/O 2 is connected with RS-485 and can be installed anywhere due to its small size. It can be installed with a junction box or onto a wall control box already installed. It can be installed at the rear side of an Exit button.

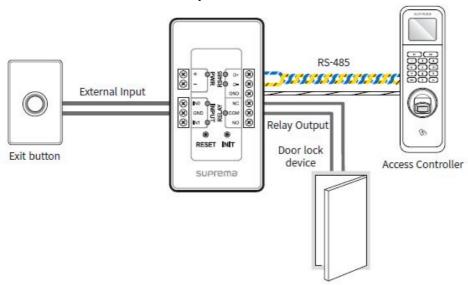


Connections


- Cable should be AWG22~AWG16.
- To connect the cable to Secure I/O 2, strip off approximately 5~6 mm of the end of the cable and connect them.

Power

- Do not share the power with the access controller.
- If the power is shared by other devices, it should provide 9–18V and a minimum of 500 mA.
- When using a power adapter, it should have IEC/EN 62368-1 certification.

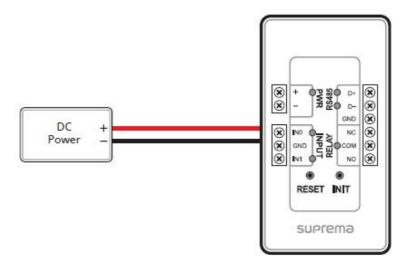

- •RS-485 should be twisted pair, and maximum length is 1.2 km.
- Connect a termination resistor (120Ω) to both ends of a RS-485 daisy chain connection. It should be installed at both ends of the daisy chain. If it is installed in the middle of the chain, the performance in communicating will deteriorate because it reduces the signal level.

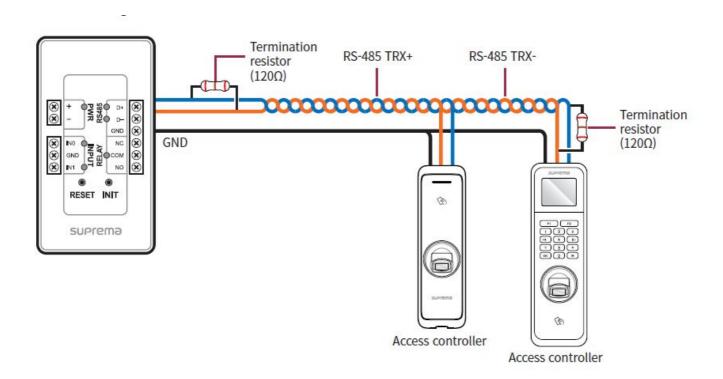


Relay

Fail Safe Lock

In order to use the Fail Safe Lock, connect the N/C relay as shown in the figure below. There is normally a current flowing through the relay for the Fail Safe Lock. When the relay is activated, blocking the current flow, the door will open. If the power supply to the product is cut off due to a power failure or an external factor, the door will open.

Connect a diode to both ends of the power input as shown in the figure below when installing a deadbolt or a door strike. Make sure to connect the Cathode (direction to the stripe) to the + part of the power while paying attention


to the direction of the diode.

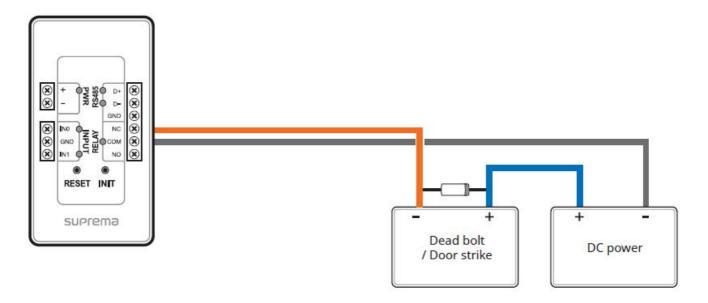


Fail Secure Lock

In order to use the Fail Secure Lock, connect N/O relay as shown in the figure below. There is normally no current flowing through the relay for the Fail Secure Lock. When the current flow is activated by the relay, the door will open. If the power supply to the product is cut off due to a power failure or an external factor, the door will lock.


Connect a diode to both ends of the power input as shown in the figure below when installing a deadbolt or a door strike. Make sure to connect the Cathode (direction to the stripe) to the + part of the power while paying attention to the direction of diode.

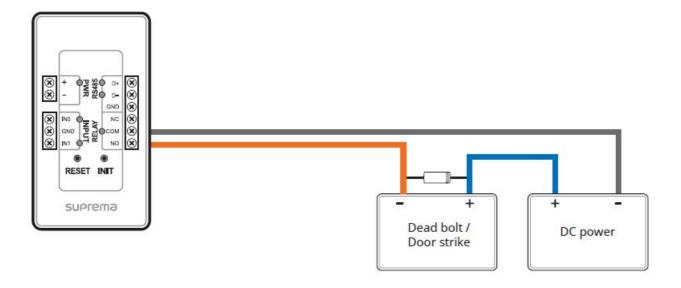

Door button

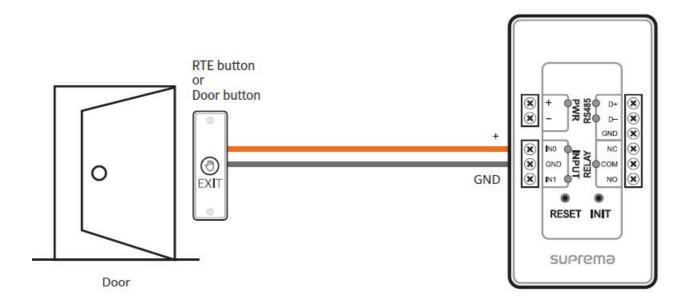

Door sensor

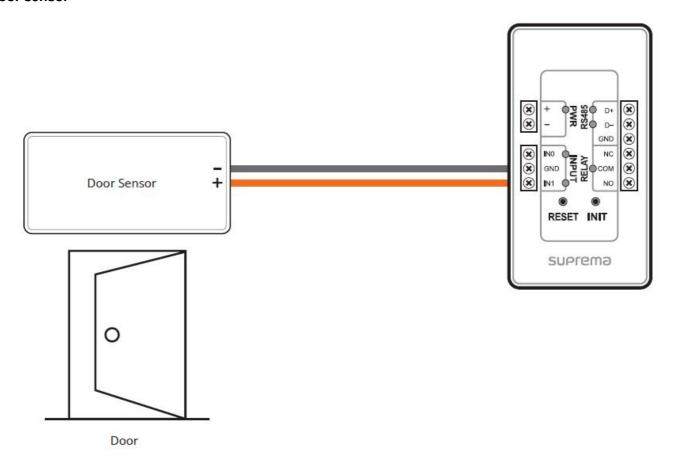

Product Specifications

| Category | Feature | Specification |
|----------|---------|---------------|
| | | |

| General | Model | SIO2 |
|---------|-----------------------|--|
| | CPU | Cortex M3 72 MHz |
| | Memory | 128 KB Flash + 20 KB RAM |
| | LED | Multi-color PWR RS-485 TX/RX IN1/IN2 RELAY |
| | Operating temperature | -20°C ~ 50°C |
| | Storage temperature | -40°C ~ 70°C |
| | Operating humidity | 0% ~ 80%, non-condensing |
| | Storage humidity | 0% ~ 90%, non-condensing |
| | Dimension (W x H x D) | 36 mm x 65 mm x 18 mm |
| | Weight | 37 g |
| | | |

| | Certificates | CE, FCC, KC, RoHS |
|------------|--------------|---|
| | RS-485 | 1 ch |
| Interface | TTL Input | 2 ch |
| | Relay | 1 relay |
| Electrical | Power | Recommended: 9 VDC (130 mA), 12 VDC (100 mA), 18 VDC (70 mA) Maximum: 18 VDC (200 mA) Current: Maximum 200 mA |
| | Relay | 2 A@ 30 VDC Resistive load 1 A@ 30 VDC Inductive load |

FCC compliance information

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.
 - This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.
 - Modifications: Any modifications made to this device that are not approved by Suprema Inc. may void the authority granted to the user by the FCC to operate this equipment.

Appendices

Disclaimers

- Information in this document is provided in connection with Suprema products.
- The right to use is acknowledged only for Suprema products included in the terms and conditions of use or sale for such products guaranteed by Suprema. No license, express or implied, by estoppel or otherwise, to any intellectual property is granted by this document.
- Except as expressly stated in an agreement between you and Suprema, Suprema assumes no liability whatsoever, and Suprema disclaims all warranties, express or implied including, without limitation, relating to fitness for a particular purpose, merchantability, or noninfringement.
- All warranties are VOID if Suprema products have been: 1) improperly installed or where the serial numbers, warranty date or quality assurance decals on the hardware are altered or removed; 2) used in a manner other than as authorized by Suprema; 3) modified, altered, or repaired by a party other than Suprema or a party authorized by Suprema; or 4) operated or maintained in unsuitable environmental conditions.
- Suprema products are not intended for use in medical, lifesaving, life-sustaining applications, or other applications in which the failure of the Suprema product could create a situation where personal injury or death may occur. Should you purchase or use Suprema products for any such unintended or unauthorized application, you shall indemnify and hold Suprema and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Suprema was negligent regarding the design or manufacture of the part.
- Suprema reserves the right to make changes to specifications and product descriptions at any time without notice to improve reliability, function, or design.
- Personal information, in the form of authentication messages and other relative information, may be stored
 within Suprema products during usage. Suprema does not take responsibility for any information, including
 personal information, stored within Suprema's products that are not within Suprema's direct control or as
 stated by the relevant terms and conditions. When any stored information, including personal information, is
 used, it is the responsibility of the product users to comply with national legislation (such as GDPR) and to
 ensure proper handling and processing.
- You must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Suprema reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.
- Except as expressly set forth herein, to the maximum extent permitted by law, the Suprema products are sold "as is".
- Contact your local Suprema sales office or your distributor to obtain the latest specifications and before placing your product order.

Copyright Notice

Suprema has the copyright of this document. The rights of other product names, brands, and trademarks belong to individuals or organizations who own them..

information about Suprema's global branch offices, visit the webpage below by scanning the QR code. http://www.supremainc.com/en/about/contact-us.asp © 2021 Suprema Inc. Suprema and identifying product names and numbers herein are registered trade marks of Suprema, Inc. All non-Suprema brands and product names are trademarks or registered trademarks of their respective companies.

Product appearance, build status and/or specifications are subject to change without notice.

Documents / Resources



suprema SIO2-V2 Secure I/O 2 Single Door Module [pdf] Installation Guide SIO2-V2, Secure I 2 Single Door Module, Secure O 2 Single Door Module

References

• Suprema | Security & Biometrics

Manuals+,