




Sur La Table SLT-3208 2-Slice Touchscreen Toaster User Manual

[Home](#) » [Sur La Table](#) » Sur La Table SLT-3208 2-Slice Touchscreen Toaster User Manual 

Contents

- [1 Sur La Table SLT-3208 2-Slice Touchscreen Toaster](#)
- [2 IMPORTANT SAFEGUARDS](#)
- [3 Power Cord Instructions](#)
- [4 GETTING TO KNOW YOUR](#)
- [5 USING YOUR TOASTER](#)
- [6 CLEANING AND MAINTENANCE](#)
- [7 1 YEAR LIMITED WARRANTY](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Sur la table

Sur La Table SLT-3208 2-Slice Touchscreen Toaster



Congratulations!

You now own an incredibly versatile, convenient, and modern 2-slice toaster. To get the most out of your new 2-slice toaster, please read the manual carefully before use, and keep this manual for easy reference. Enjoy

This manual is only applicable to SLT-3208. All the contents in the manual are for reference only during the user's use and maintenance. The pictures are for reference only. *All the contents in the manual have been carefully checked. If there are any printing errors or misunderstandings in the contents, the company reserves the right to interpret.

IMPORTANT SAFEGUARDS

1. Read all instructions before use.
2. Do not let the cord hang over the edge of the table or countertop.
3. Do not use the toaster for anything other than its intended use.
4. Always operate the toaster from a power source of the same voltage, frequency, and rating as indicated on the product rating plate.
5. Close supervision is necessary when the toaster is used by or near children or incapacitated persons. Do not let children use it as a toy.
6. Do not operate toaster with a damaged cord or plug, or if the appliance is damaged in any manner.
7. Do not immerse the toaster under water or any other liquid.
8. Do not operate the toaster in the presence of explosives and/or flammable fumes.
9. Do not pull on the cord when unplugging it from the outlet.
10. Do not place the toaster on or near a hot burner or in a heated oven.
11. Do not use toaster over a stove or other heat source.
12. Do not use outdoors.
13. Do not leave toaster unattended.
14. Turn off and unplug from outlet while not in use. Remove by grasping the plug. Do not pull on the cord.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

Power Cord Instructions

A short power-supply cord or detachable power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a long detachable power-supply cord or extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
- The cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally; and
- If the appliance is of the grounded type, the cord set or extension cord should be grounding type 3-wire cord.

Do not pull, twist or otherwise abuse the power cord.

NOTICES

1. Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your toaster to prevent possible damage to the surface.
2. During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not occur after a few uses.

GETTING TO KNOW YOUR

2-SLICE TOUCHSCREEN TOASTER



1. Bread Slots
2. Digital Countdown Timer
3. Toast Lift Lever
4. Removable Crumb Tray (at rear)
5. Toast Shade Selection
6. Toast Type Options
7. Toast Shade Selection Button
8. Toast Type Selection Button
9. Defrost Function
10. Reheat Function
11. Single Slice Function
12. Power

USING YOUR TOASTER

1. Plug the toaster into the power outlet.
2. The power button will illuminate. Press the POWER button to turn the toaster on.
3. Insert the item you would like to toast into the vertical slots.
4. Select Program. Choose among: Bread (Slices of White, Wheat, Multigrain, Sourdough), Bagel, Waffle (Fresh or Frozen), Pastry (Croissant, Fruit-Filled Toaster Pastry) or English Muffin (or Biscuit).
5. Select the toast shade setting using the 1-7 button.
 - 1-2 Light Toast
 - 3-4 Medium Toast
 - 6-7 Dark Toast
6. Select DEFROST, REHEAT, or SINGLE buttons if desired.
7. To begin toasting, lower the lever to the down position until it locks in place.
8. When toasting is complete, the toast lift lever will return to the up position. If you would like to stop the cycle before it is finished, simply touch the POWER button to cancel. Do not attempt to lift the toast lever during the toasting cycle.

Countdown Timer

The countdown timer is a visual representation of the cycle time for the selected shade and toast type. If during the toasting cycle you select a different setting, the smart timer will automatically adjust the remaining time to match the new setting.

Toast Shade Setting

The toast shade setting regulates how much the bread is toasted. Shade 1 offers the lightest toast and shade 7 offers the darkest toast. When selecting the toast shade, please remember that dry or thin slices of bread toast faster, so a lower toast shade setting may be appropriate. Thick or moist bread types will require a higher shade setting.

Toast Type Setting

The type setting allows you to select from the 5 different types of toast available.

Defrost

The defrost function allows you to toast any of the five toast type selections straight from the freezer.

Reheat

The reheat button is a quick toasting cycle to warm up your toasted food.

Single

The single function heats up the bread slot on the right. You may notice some residual heat in the second slot when toasting.

Cancel

Simply press the POWER button if you would like to stop the toast cycle at any point during the process.

CAUTION

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, press POWER to stop the toasting process immediately.
3. Avoid toasting food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. In order to achieve uniform color we recommend that you wait a minimum of 30 seconds between each toasting so that the color control can reset automatically.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug toaster and let the toaster cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. Pull out crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use, the power cord may be wound under the bottom of toaster.
5. Any other servicing should be performed by an authorized service representative.

TIP: Your toaster has been designed for optimum toast balance. Some elements on the inside of the toaster may glow more brightly than others when in use. This is part of normal toaster operation.

To remove food jammed in the bread slots



Unplug the toaster and remove the food once the toaster has cooled down.
Do not place food on top of toaster while it is warming.

WARNING! Empty the Crumb Tray frequently. Crumbs will accumulate in the Crumb Tray and could catch fire if not emptied periodically.

1 YEAR LIMITED WARRANTY

Customer Service: (877) 246-0990 ApplianceSupport@monchateau.us

Documents / Resources

	<p>Sur La Table SLT-3208 2-Slice Touchscreen Toaster [pdf] User Manual SLT-3208 2-Slice Touchscreen Toaster, SLT-3208, 2-Slice Touchscreen Toaster, Touchscreen T oaster, Toaster</p>
	<p>Sur La Table SLT-3208 2 Slice Touchscreen Toaster [pdf] User Manual SLT-3208, 2 Slice Touchscreen Toaster, SLT-3208 2 Slice Touchscreen Toaster, Touchscreen T oaster, Toaster</p>

References

-  [Sur la Table – 50 Years of Quality](#)