



# SVEN KB-C3100W Keyboard Plus Mouse Wireless Combo Set User Manual

[Home](#) » [SVEN](#) » SVEN KB-C3100W Keyboard Plus Mouse Wireless Combo Set User Manual 

## SVEN KB-C3100W Keyboard Plus Mouse Wireless Combo Set



### Contents

- [1 Congratulations](#)
- [2 SPECIAL FEATURES](#)
- [3 PACKAGE CONTENTS](#)
- [4 SYSTEM REQUIREMENTS](#)
- [5 INSTALLATION](#)
- [6 CONNECTION](#)
- [7 TROUBLESHOOTING](#)
- [8 TECHNICAL SPECIFICATIONS](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

## Congratulations

**Congratulations on your purchase of the Sven Keyboard + Mouse Wireless Combo Set!**

Please read this User's Manual before using the unit and retain this User's Manual in a safe place for future reference.

**COPYRIGHT**

## **TRADEMARKS**

All trademarks are the property of their legal holders.

## **NOTICE OF RESPONSIBILITY RESTRICTION**

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on 'as is' terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

## **BUYER RECOMMENDATIONS**

- Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.
- Shipping and transportation equipment is permitted only in the original container
- Does not require special conditions for realization.
- Dispose of in accordance with regulations for the disposal of household and computer equipment.

## **SPECIAL FEATURES**

- Classic fullsize layout
- Waterproof design
- 12 Fn shortcut keys
- Long life battery-fed operation
- Coverage range up to 10 m
- Automatic detection, no need to match the receiver with the pointing device

## **PACKAGE CONTENTS**

 
- Wireless keyboard — 1 pc
- Wireless mouse — 1 pc
- 2.4 GHz USB nano receiver — 1 pc
- AAA batteries — 2 pcs
- AA battery — 1 pc
- User's Manual — 1 pc
- Warranty card — 1 pc

## **SYSTEM REQUIREMENTS**

- Windows XP/Vista/7/8/10.
- Free USB port.

 
## **INSTALLATION**

- Open the cover of the mouse battery compartment, insert 2 AAA batteries into the battery compartment matching the polarity, and close the cover of the battery compartment (Fig. 1).

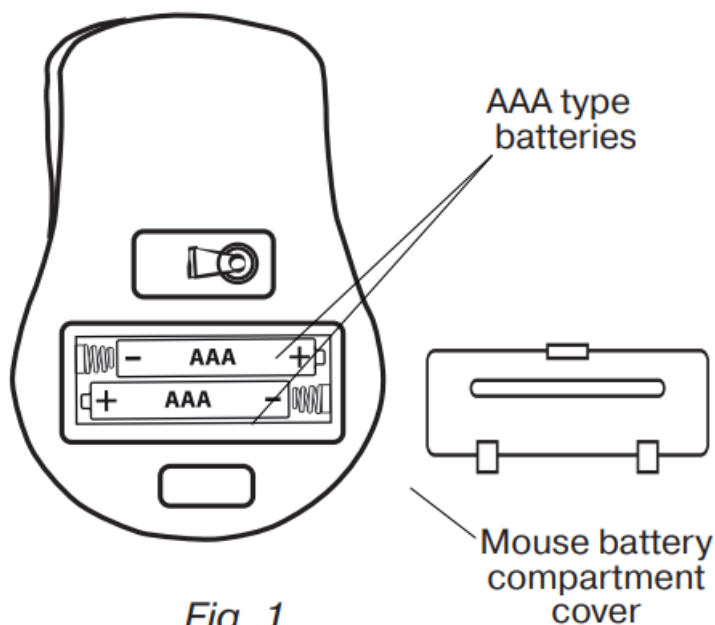



*Fig. 1*

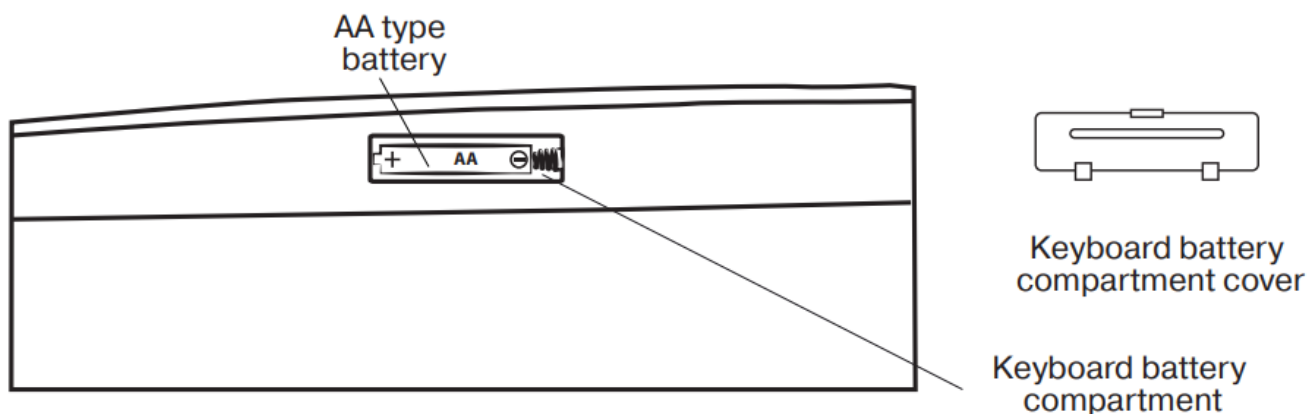- Open the cover of the battery compartment of the keyboard, insert AA battery matching the polarity, and close the cover of the battery compartment (see Fig. 2).



*Fig. 2*

 Please match the polarity when installing the batteries. Incorrect polarity can cause malfunction of the device, which gives no claims for warranty servicing.

 It is necessary to always install only the same type of batteries, because installation of different types of batteries with different levels of charging can cause leaking of one of the batteries, which can damage the device.

## CONNECTION

- Connect the 2.4 GHz USB nano receiver to a free USB port of your PC.
- To activate the set, press any button of the mouse or turn the scroll wheel. If the connection is correct, the set will turn on automatically.
- After finishing your work, you can pull out the receiver from the PC USB port and insert it into the mouse as shown in Fig. 4.
- If the mouse or keyboard don't work, connect them to the nano receiver again.

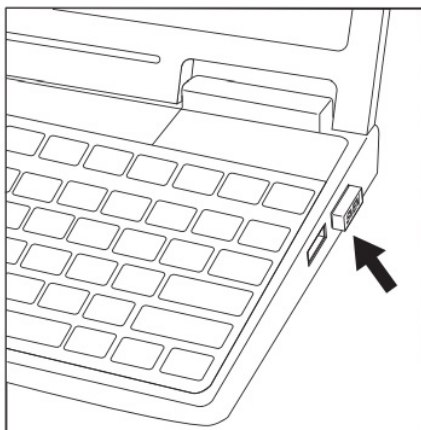 


Fig. 3. Receiver connection

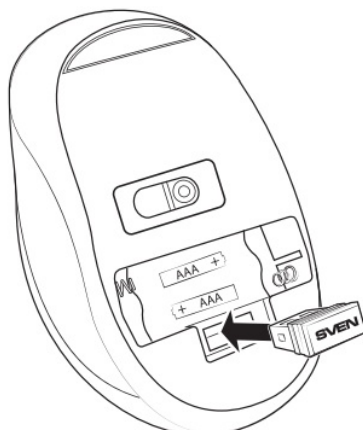 


Fig. 4

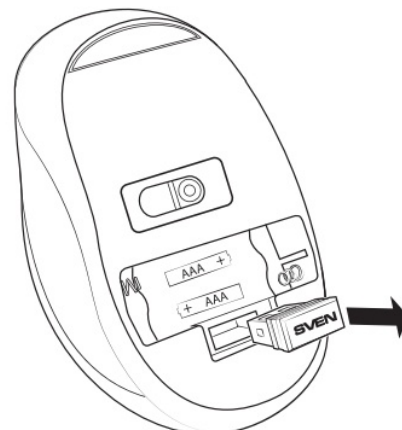 


Fig. 5

#### Notes:

- Do not place the receiver into a confined metal space (table drawer, box, safe), as a metal screen does not transmit radio signals.
- If batteries run down, there are «lapses» in operation of the mouse or keyboard. In such a case replace the batteries with new ones.
- If there is a long pause in operation of the mouse or keyboard, they enter the Sleep mode. To enter the working mode just press any button.

## TROUBLESHOOTING

| Problem                             | Solution  |
|-------------------------------------|---|
| The keyboard/mouse is not working . | <ol style="list-style-type: none"> <li>1. Check whether the batteries have been installed correctly. If necessary, replace the batteries with new ones matching the polarity.</li> <li>2. Pull out the USB receiver and insert it back, make sure that it is not damaged.</li> <li>3. We recommend that you address your nearest service center.</li> </ol> |

If none of the above methods can solve the problem, please seek professional advice at your nearest service center. Never attempt to repair the product yourself.

## TECHNICAL SPECIFICATIONS


| Parameter, measurement unit         | Value                        |
|-------------------------------------|------------------------------|
| Q-ty of keyboard keys               | 104                          |
| Q-ty of keyboard shortcut keys      | 12 Fn                        |
| Q-ty of mouse buttons               | 2 + 1 (scroll wheel)         |
| Keyboard layout                     | Rus/Ukr/Eng                  |
| OS compatibility                    | Windows XP/Vista/7/8/10      |
| Interface                           | USB                          |
| Extrapolated mean life              | more than 20 000 000 strokes |
| Coverage range, m                   | up to 10                     |
| Mouse resolution, dpi               | 1000                         |
| Frequency, GHz                      | 2,4                          |
| Keyboard dimensions (W × H × L), mm | 447 × 159 × 24               |
| Mouse dimensions (W × H × L), mm    | 65 × 38 × 103                |
| Weight (keyboard + mouse), g        | 430 and 80                   |

**Notes:**

- Technical specifications given in this table are supplemental information and cannot give occasion to claims.
- Technical specifications are subject to change without notice due to the improvement of SVEN production.



**Documents / Resources**

|  |  |
|--|--|
|  The image shows the retail box for the SVEN KB-C3100W Keyboard Plus Mouse Wireless Combo Set. The box is primarily black and white. It features the SVEN logo at the top left, the Russian text "Руководство пользователя" (User Manual) in the top right, and a photograph of the black keyboard and mouse in the center. The model number "KB-C3100W" is printed at the bottom left. | <p><a href="#">SVEN KB-C3100W Keyboard Plus Mouse Wireless Combo Set</a> [pdf] User Manual</p> <p>KB-C3100W Keyboard Plus Mouse Wireless Combo Set, KB-C3100W, Keyboard Plus Mouse Wireless Combo Set, Plus Mouse Wireless Combo Set, Mouse Wireless Combo Set, Wireless Combo Set, Combo Set, Set</p> |
|--|--|

Manuals+