

**SVEN**  
RX-550SW Wireless  
Computer Mouse



## SVEN RX-550SW Wireless Computer Mouse User Manual

[Home](#) » [SVEN](#) » SVEN RX-550SW Wireless Computer Mouse User Manual 

### Contents

- [1 SVEN RX-550SW Wireless Computer Mouse](#)
- [2 Specifications](#)
- [3 Product Information](#)
- [4 Product Usage Instructions](#)
- [5 Troubleshooting](#)
- [6 PACKAGE CONTENTS](#)
- [7 SPECIAL FEATURES](#)
- [8 SYSTEM REQUIREMENTS](#)
- [9 SAFETY PRECAUTIONS](#)
- [10 TROUBLESHOOTING](#)
- [11 WARRANTY CARD](#)
- [12 FAQ](#)
- [13 Documents / Resources](#)
  - [13.1 References](#)

# SVEN

**SVEN RX-550SW Wireless Computer Mouse**



## Specifications

- **Model:** RX-550SW
- **Connectivity:** 2.4GHz and Bluetooth
- **Input Device Type:** Mouse

## Product Information

Congratulations on purchasing the SVEN mouse! The RX-550SW is an input device designed for entering information into the computer and operating it. It offers the flexibility to switch between 2.4GHz and Bluetooth connectivity modes.

For technical support, visit [www.sven.fi](http://www.sven.fi).

## Product Usage Instructions

### Switching Between Modes:

To switch between 2.4GHz and Bluetooth modes:

1. Ensure the mouse is disconnected from your PC.
2. Toggle the switch to select the desired mode (2.4GHz or Bluetooth).
3. Reconnect the mouse to your PC.

## Troubleshooting

If you encounter issues with the mouse not working:

- Disconnect the mouse from your PC and check the connector pins for damage.
- If no external damage is found, reconnect the mouse to your PC.
- If the problem persists, contact your nearest authorized service center.

Congratulations on purchasing the SVEN mouse!

Please read this User Manual before using the unit and retain this User Manual in a safe place for future reference.

## COPYRIGHT

SVEN PTE. LTD. Version 1.1 (17.07.2024). This Manual and the information contained in it are copyrighted. All rights

## TRADEMARKS

All trademarks are the property of their legal holders.

## NOTICE OF RESPONSIBILITY RESTRICTION

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on «as is» terms.

The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained

- Shipping and transportation equipment is permitted only in the original container.
- Does not require special conditions for realization.
- Dispose of in accordance with regulations for the disposal of household and computer equipment.
- Do not use gasoline, spirit or other dissolvents for cleaning. This may cause damage to the surface. Clean the device with soft cloth.
- Do not attempt to disassemble or repair your device.
- Protect the device against powerful shocks and falls — they may damage the internal electronics.

## APPOINTMENT

RX-550SW is an input device. It should be used for input (entering) information into the computer and operation on it.

## PACKAGE CONTENTS

- Wireless mouse — 1 pc
- 2.4 GHz receiver — 1 pc
- User manual — 1 pc

## SPECIAL FEATURES

- 60° vertical angle for comfortable wrist posture
- Dual wireless connection modes (Blue-tooth/receiver)

- Connection up to 3 devices
- Silent buttons
- Built-in 700 mAh battery
- Dynamic RGB backlight (for switching off press and hold the DPI button)
- Adjustable resolution up to 2400 DPI
- Scroll wheel with rubber protector
- Mouse power switch

## SYSTEM REQUIREMENTS

- Windows
- Free USB port

## SAFETY PRECAUTIONS

Protect your mouse from high humidity, dust or high temperatures.

### SWITCH BETWEEN MODES 2.4GHZ AND BLUETOOTH

The mouse has 3 connection modes: 2,4 GHz and 2 Bluetooth channels. For using 2,4 GHz mode make the following:

- Move the switch to |"ON" position.
- Press mode button on the mouse bottom until green light will blink slowly.
- Insert the dongle into a PC USB port. The mouse will connect to your PC in several seconds. For using Bluetooth mode, make the following:
  - Press mode button on the mouse bottom until blue light will blink slowly.
  - Press and hold mode button until blue light will blink fast. It mean Bluetooth pairing mode was activated.
  - Choose on your PC "Bluetooth devices".
  - Click "Add or delete Bluetooth devices".
  - As soon as PC will detect new device, click "Pairing (add new device)", mouse is ready to work.
  - For switching to another Bluetooth channel repeat above actions.

## TROUBLESHOOTING

Problem	Solution
The mouse is not working.	1. Disconnect the mouse from your PC and check the connector pins for possible damage. If there is no external damage found and the connector pins are OK, connect the mouse to your PC again. 2. Address your nearest authorized service center.

If none of the above mentioned solutions removes the problem, please consult the nearest authorized service center. Never try to repair the device on your own.


## WARRANTY CARD

<b>Model.</b>	
<b>Serial number.</b>	
<b>Date of Sale/</b>	
<b>Seller/</b>	
<b>Stamp of the Seller/</b>	

## FAQ

- **Q: What should I do if the mouse is not working?**
  - **Problem:** The mouse is not working.
  - **Solution:**
    - Disconnect the mouse from your PC and check for connector pin damage. If no damage is found, reconnect the mouse.
    - If the issue persists, contact an authorized service center for assistance. Do not attempt to repair the device yourself.

## Documents / Resources

	<p><a href="#">SVEN RX-550SW Wireless Computer Mouse</a> [pdf] User Manual  RX-550SW Wireless Computer Mouse, RX-550SW, Wireless Computer Mouse, Computer Mouse, Mouse</p>
---	--

## References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.