 




SWA CONNECT Android Technology Platform Software User Guide

[Home](#) » [SWA CONNECT](#) » SWA CONNECT Android Technology Platform Software User Guide 

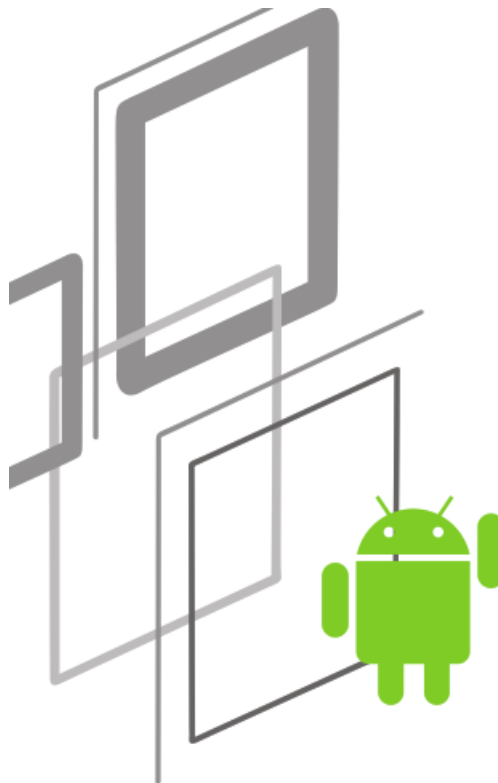

Contents

- 1 Android Technology Platform Software
- 2 Desk
- 3 First use
- 4 Equipment operation interface
- 5 Equipment basic set
- 6 Apps Install and manage
- 7 Problem solution
- 8 Basic Functions
- 9 Documents / Resources
- 10 Related Posts

Android Technology Platform Software

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device

- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows dosed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge In the following condition,
 - A. The battery power ICONS shows have no power
 - B. The system automatically shut off, startup after power off soon
 - C. Operation buttons no response
 - D. The machine that the top right corner show red icons
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol. Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street,
- USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

[Remark] All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

Desk



1.1 Touch panel

Capacitive touch panel: In The Operation, to click,dragging on the touch panel

1.2 POWER

startup: Long Press and hold the power button, the system will enter the main interface shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint “power off” option, Clিকে”ok”. you can safely shut down.

Lock screen: Short press Power button to lock screen or unlock screen. Remark 1.When power is empty,system will shut down automatically. 2.11legal turn off the device,restart will scan and restore the disk,it may take longer time to enter into system

1.3 BACK

Short Press BACK button will return the last interface,

1.4 MIC

Recording 1.5 Volume +, Volume-the buttons on top Volume +, Volume-achieve changes in the volume.

1.6 earphone jack

3.5 mm standard earphone jack

1.7 TF card

TF-CARD solt: external T-FLASH card

1.8 Mini USB

MiniUSB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

1.9 DC Adapter

For charging. your tablet battery

1.10 Recovery

When the Tablet under the condition of the crash, upgrade firmware.

First use

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge. (Remark : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110-240V 50/60Hz Max: 180MA.. Output: DC5.0-5.5V/1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger During the charging, the battery icon will scroll When finished charging, battery icon will become green and stop rolling In order to prolong the service life of the machine, suggest use out battery power before charge it (Remark] :

 
1. If you long time don't to use this Tablet, in order to avoid power consumption caused damage,pls charge/play the battery once a month.
2. After ow battery shut down,connect DC adaptor,device will remind low battery,charging,need to wait some time

until the battery is enough power to enter into main menu.

3. Device charging should be in standby status for reach normal charging time. Because with device and screen consumption,it may cause longer charging time.

2.2 Connection with PC

U Use USB cable to connect device to PC,device will pop up the USB connection window,click Turn on USB storage to connect to PC

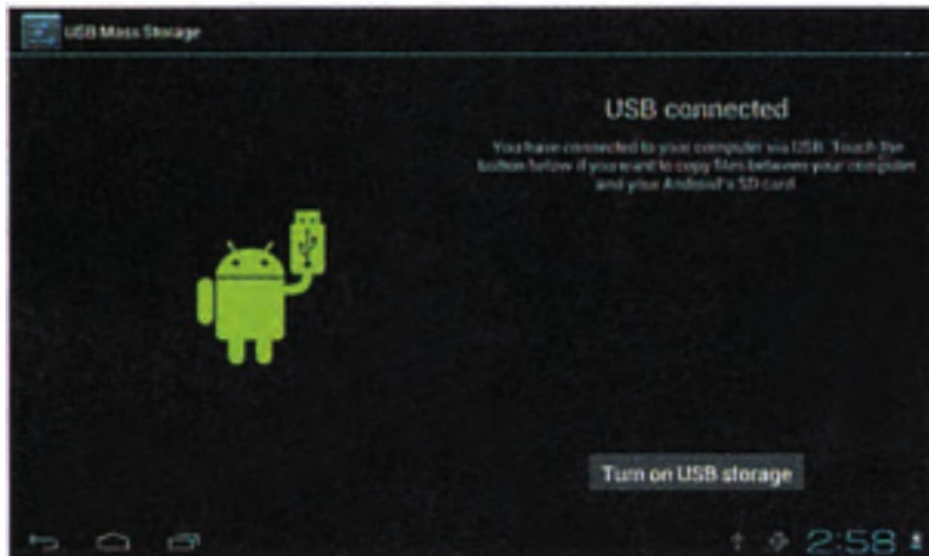


Into the load mode, you can copy, delete the file on the device and the file on the memory card.

Equipment operation interface

3.1 Main interface describe

 After startup will enter the main interface

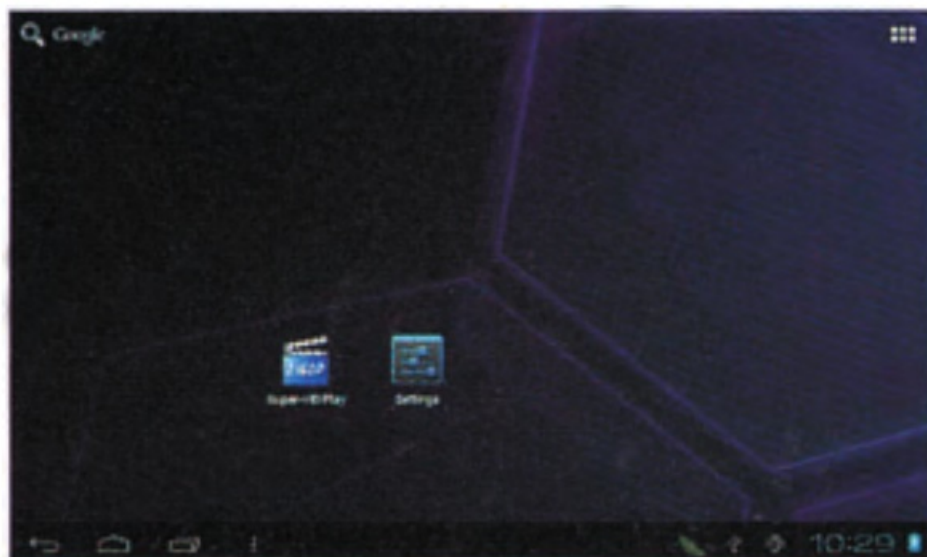


In the main interface, you can :

Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.



Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

 You touch the screen keep a time, appear the dialog box "Add yo Home screen" as shown below:

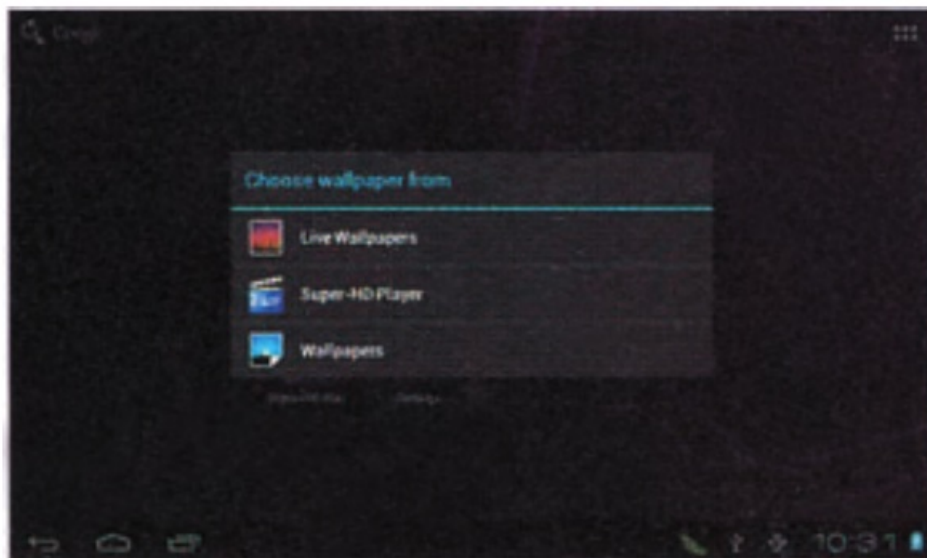


3.2 status bar describe




- The status bar above of the screen Top left display main interface software, T-Flash card, USB connection status and so on Top right display the battery, battery charge icons, current time, set time, Settings Menu, ESC button.

 
3.3 Use touch panel


Device equipped with a touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the bottom right corner of the main screen.

(Attention) The main screen soft key  functions as the machine back key 

In different applications, by tapping the back soft key  on the bottom right corner on the touch screen, you can return to its interface on the upfloor. In different applications, by tapping the menu key on the upper right corner of touch screen, the screen will appear the operation setting interface as follows.

 Remark : The main screen soft key functions as the machine manu 

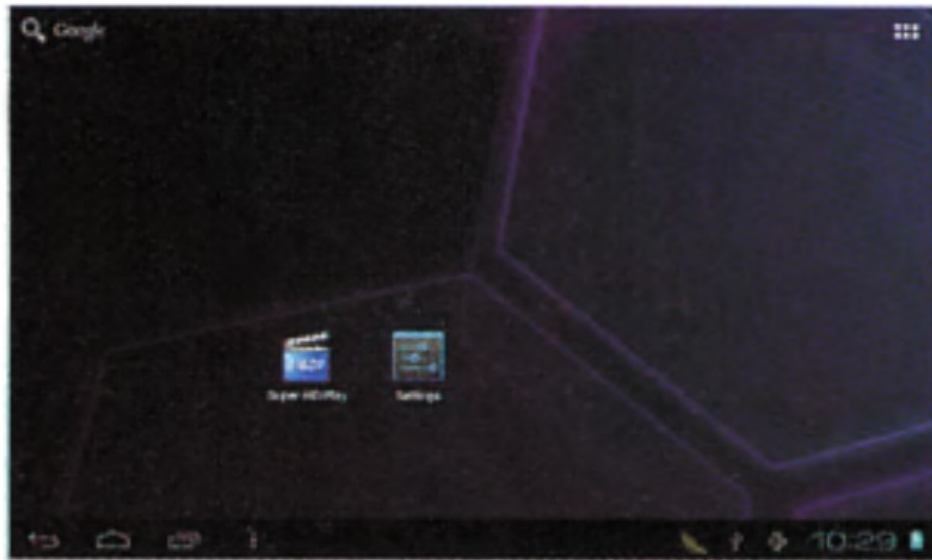


In the main interface, you can touch the icon to open the APPs In different browser(file, music, video, pictures), You shift and drag the scroll bar, so that the file list can up or down to roll.



Equipment basic set



 Setting: Click setting icons enter setting interface

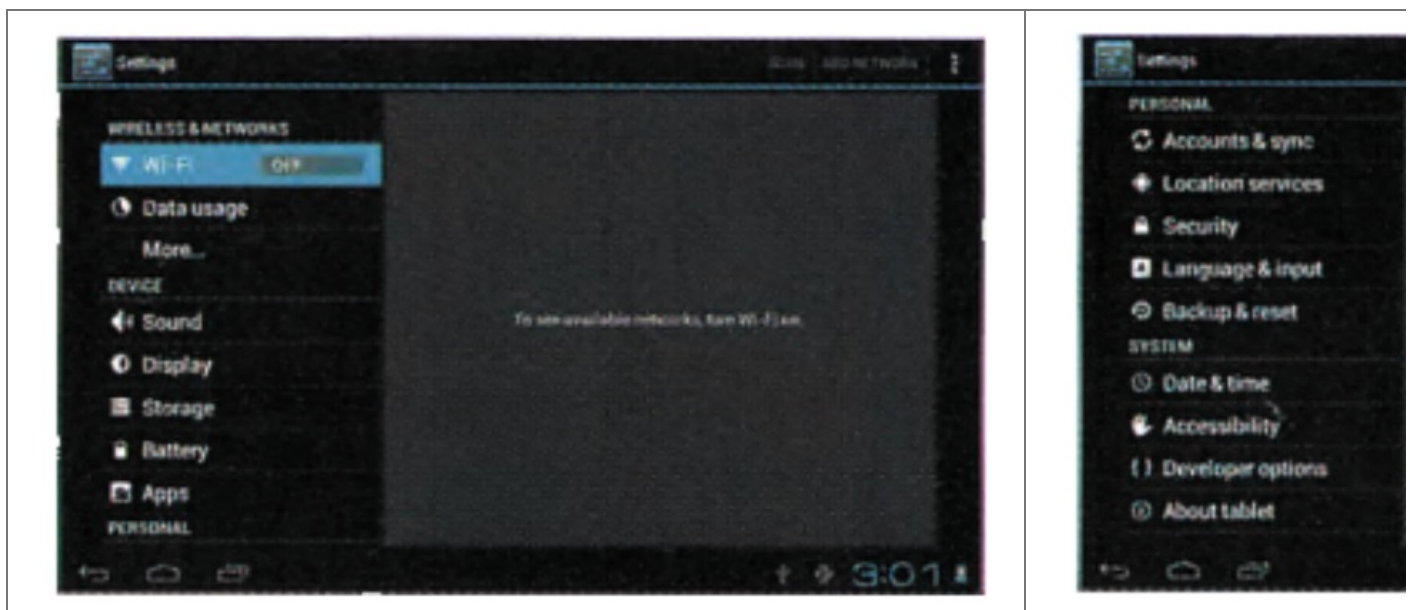


  4.1 Silent mode,Volume,Notifcation ringtone,Audible selection,Screen lock sounds

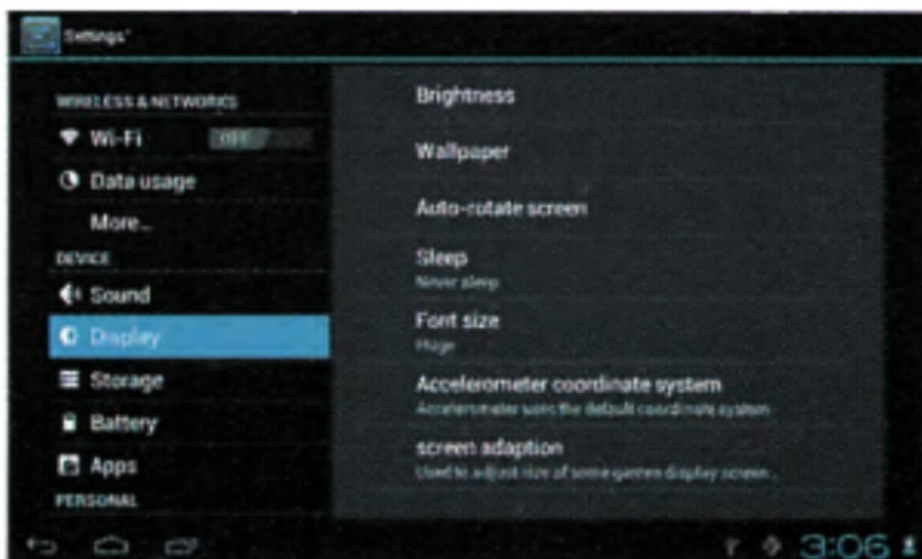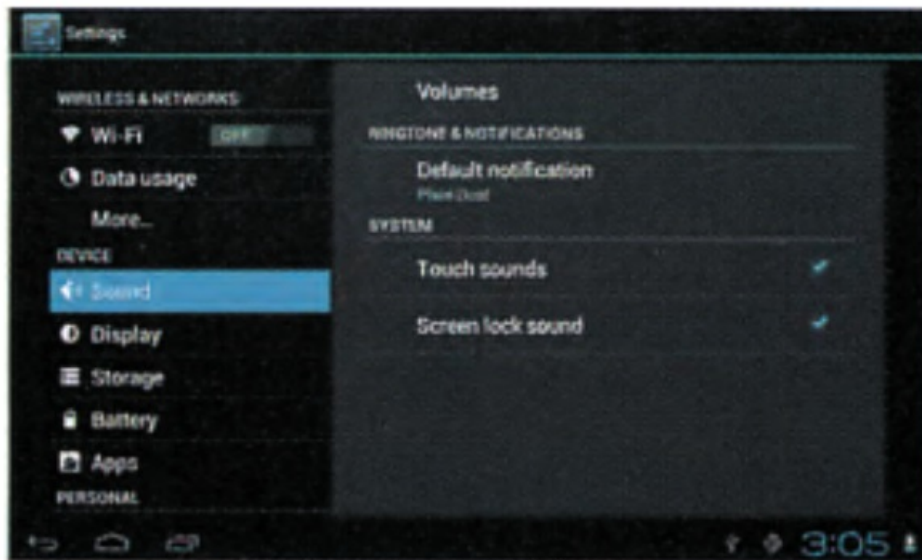

4.2 Application

 
Manage applications

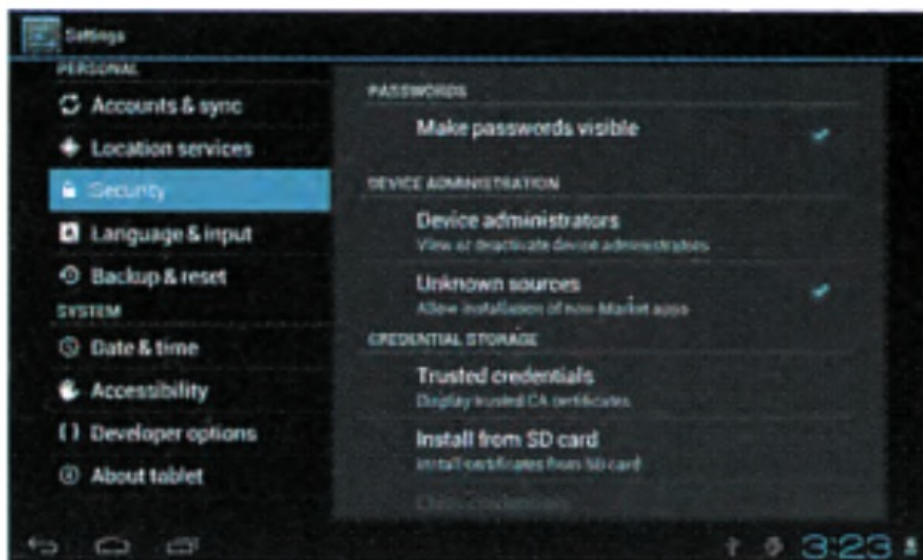


Unknown sources: Click "Unknown Sources", then click "OK"
 Manage application: manager and uninstall Application

Remark : when you Firmware Upgrade, pls close the USB connect


How touWstall?

 1. enter  "setting">"Application">"Manage application" And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, then you can felete the application

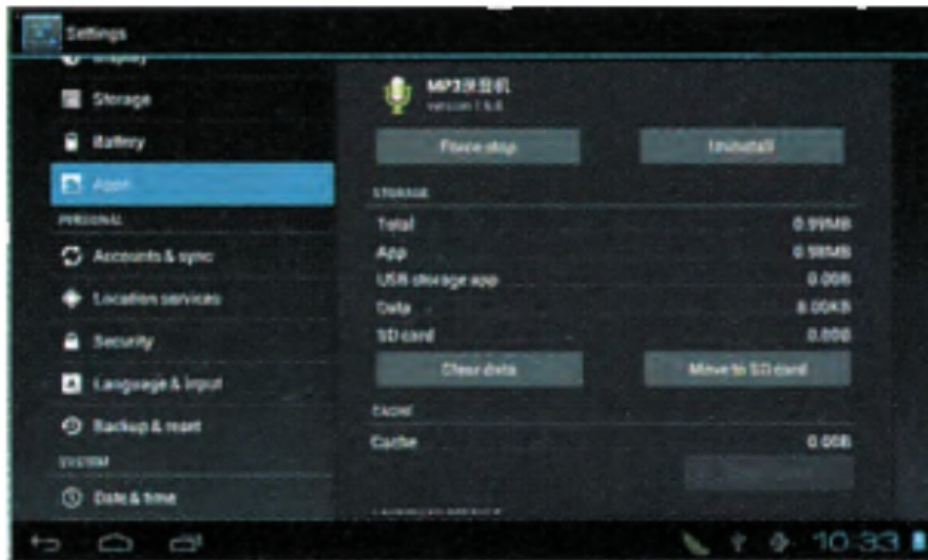


4.3 Privacy

 Factory data reset

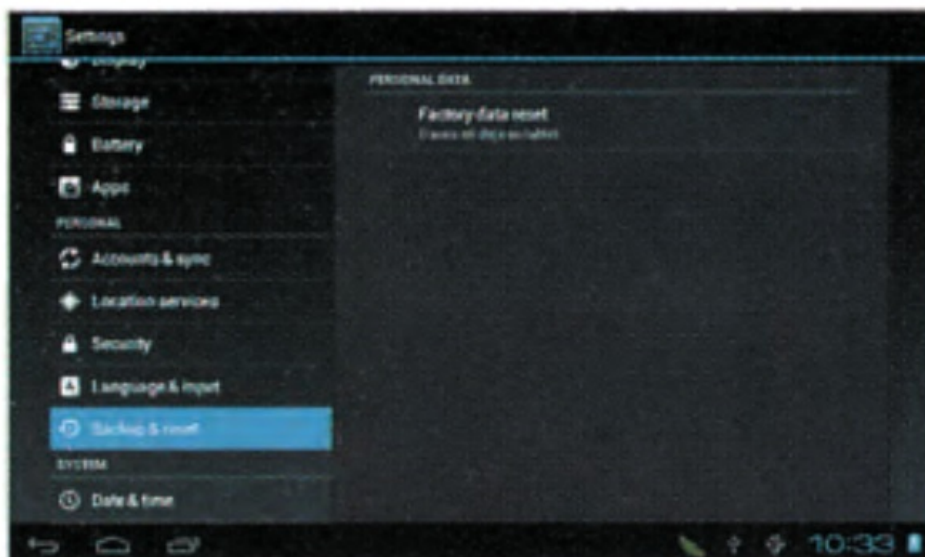

4.4 Storage

 Remove 7F card, view of the available storage space

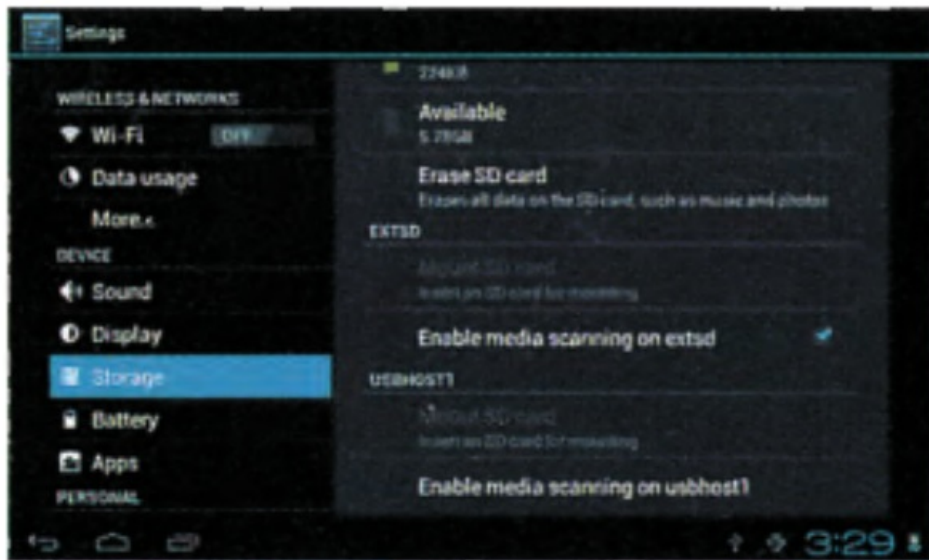

[Remark] : pls touch option "delete SD card", so that can safely remove SD card

4.5. Language & keyboard

Setting: (Language), text input and automatic error correction options;



Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now menu interface just support 14 language,

Android keyboard: Android keyboard setting

 
Sound on Key-press

Auto-capitalisation

Show suggestions: Display suggested words while typing Auto-complete: Spacebar and punctuation automatically insert highlighted word


4.6. Date & time setting

Set date, set time, Select time zone and select date format

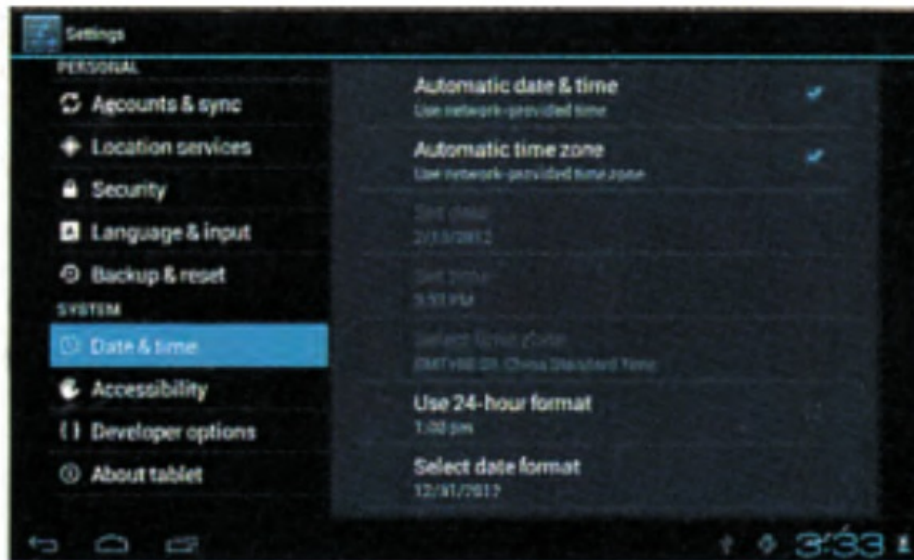


4.7 Developer options

 Choose USB work pattern: OTG/HOST/SLAVE

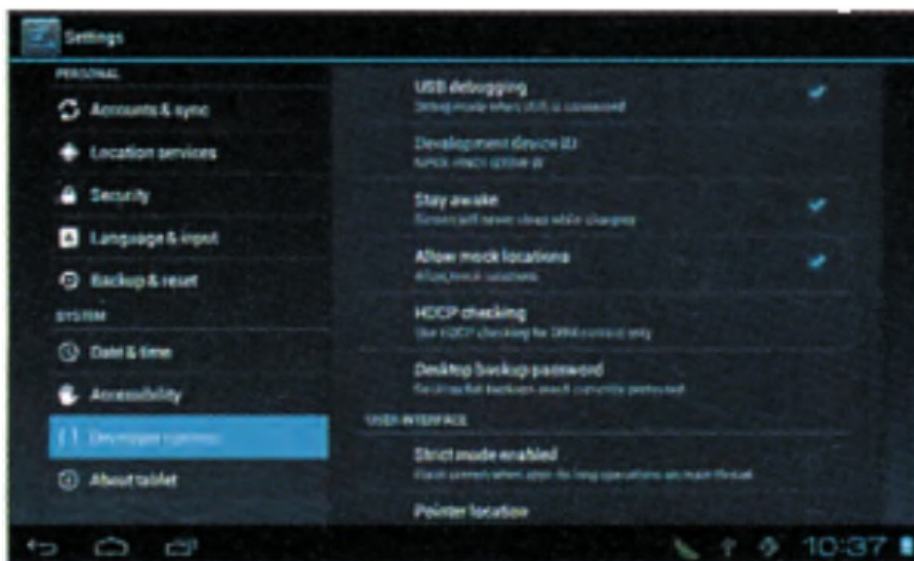

 4.8 About tablet

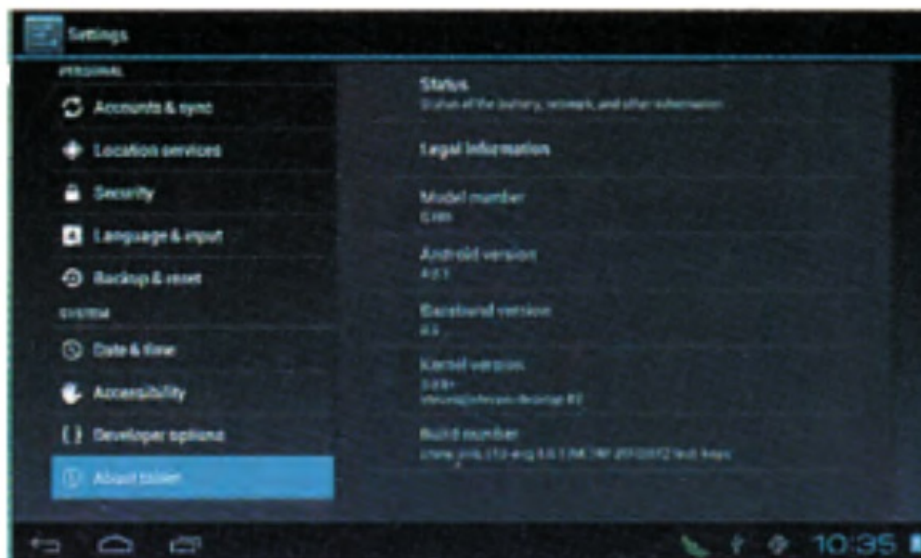

Apps Install and manage

5.1 App installer

This Tablet can support Android APP in market by third party, most Apps can install in the network, can copy to NAND FLASH or SD card. Click Appinstaller icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk. Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some APP must install properly by memory card, downloaded 3rd party app may not install properly on device.

Manage: click manage, enter third party interface Click install icon, will enter Action interface

Problem solution

6.1 Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contact' with the supplier

6.2 After startup the screen or the opening picture has been appear, the the device appear shutdown

1. Power is not enough, please charge Headset can't hear the voice
2. Pls check the volume whether set to 0
3. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

6.3 Can copy file or party music and so on

1. Pls check between computer and device is correct connection
2. check the memory storage space is already full
3. check the USB cable is good or not
4. USB connection is disconnected

Basic Functions

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Specific absorption rate (SAR):

This Tablet PC meets the government's requirements for exposure to radio waves. The guidelines are based on standards developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a margin of safety designed to ensure the safety of all people regardless of their age or health.

The FCC Statement of Exposure to RF and the SAR limit for the United States (FCC) is 1.6 W/kg average for each gram of tissue. This device was tested for typical operations of use on the body, with the back of the Tablet PC at 0mm from the body.

To maintain compliance with FCC RF exposure requirements, use accessories that maintain a distance of 0mm between the user's body and the back of the Tablet PC. The use of belt clips, covers and similar accessories must not contain metallic components in their assembly. The use of accessories that do not meet these requirements may not meet

FCC RF exposure requirements and should be avoided.

Functioning in the body

This device was tested for typical operations of use in the body. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the telephone, including the antenna. Thirdparty accessories such as belt clips, covers and similar accessories used with this device should not contain metallic components, accessories that do not meet these RF exposure requirements and should be avoided from use on the body. Use only the supplied antenna or an approved antenna.



Documents / Resources

A small thumbnail image showing the cover of the user guide document, which includes a grid of icons and text.	<p>SWA CONNECT Android Technology Platform Software [pdf] User Guide TK-X20L, TKX20L, 2A8K6-TK-X20L, 2A8K6TKX20L, Android Technology Platform Software, Technology Platform Software, Software</p>
--	--