

SWAGTEK MT6739 Media Tek Instruction Manual

Contents

- [1 SWAGTEK MT6739 Media Tek](#)
- [2 INTRODUCTION](#)
- [3 Safety](#)
- [4 Using your phone safety](#)
- [5 Understanding your Phone](#)
- [6 Screenshot](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

SWAGTEK MT6739 Media Tek

INTRODUCTION

Thanks for choosing the B7 Pro, Dual SIM Android, 4G smartphone based on a 1.3GHz Quad Core Processor. This smartphone is running on Android 12 OS. If you" 'd like your phone to live a long and fruitful life, please read this guide carefully and keep it for future reference. You never know when you might need it. And don't worry if the pictures we use to demonstrate your phone"s functions look a little different from what you see on its screen. It"s the functions that matter.

Safety

Safety Precautions

Please read through the following briefings carefully and act following these rules, to prevent causing any danger or violating any law.

Using your phone safety

On The Road

Using a phone while driving is illegal in many countries. Please follow local laws and drive safely at all times.

Near Sensitive Electronics

Don't use your phone near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic control equipment. For more information about how your phone affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor. Your phone may cause interference when used near TVs, radios, or automated office equipment.

While Flying

Your phone can cause interference with aircraft equipment. So it"s essential you follow airline regulations. And if airline personnel ask you to switch off your phone, or disable its wireless functions, please do as they say.

In Hospital

Your phone may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.

At a Petrol Station

Don't use your phone at petrol stations. It's always best to switch off whenever you're near fuels, chemicals, or explosives.

Around Water

Keep your phone away from water (or any other liquid). It's not a waterproof model.

Making Repairs

Never take your phone apart. Please leave that to the professionals. Unauthorized repairs could break the terms of your warranty.

Broken Antenna

Don't use your phone if the antenna is damaged, as it could cause injury.

Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.

Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile phones, or even cause injury.

Near Explosives

Turn off your phone in or near areas where explosive materials are used. Always obey local laws and turn off your phone when requested.

Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press „send“. Explain exactly where you are and don't hang up until help has arrived.

Working Temperature

The working temperature for the phone is between 0 Degrees and 40 Degrees Celcius. Please don't use the phone outside the range. Using the phone under too high or too low a temperature might cause problems. At very high volumes, prolonged listening to a mobile phone can damage your hearing.

Understanding your Phone

Your Phone

Description Icons

Keys	Functions
Hang up key	<p>I Press this button to return home from any application or interface.</p> <p>I Short press while on the homepage to turn off the screen.</p> <p>I You can press it to reject the call or hang up during an incoming call or call.</p> <p>I Long press it to open the phone's menu then you could choose to restart phone or turn off the phone.</p>
Menu key	<p>I In some application interfaces, you can click on it to bring up the application menu.</p> <p>I In the application interface that supports the mouse, you can control whether to use the mouse function by long pressing.</p> <p>I In the application interface that uses mouse mode, pressing the mouse can switch between mouse mode or scroll mode.</p> <p>I On the lock screen interface, briefly press this button to unlock the screen.</p>
Back key	<p>I Press it to return to the previous interface or to close dialog</p>

	<p>box ,options,menu notification panel.</p> <p>I In the editing interface, you can delete characters by clickingthis button.</p> <p>ILong press it to open recently opened Memory cleaner.</p>
Answering key	<p>I Press this button to Phone from any application or interface.</p> <p>I After entering the number on the dial pad, click on it to call this number.</p>
Up key	<p>I When using mouse mode, you can move the mouse position by short-pressing it or long-pressing it.</p> <p>I When the mouse mode is turned off, you can move the cursor position by short-pressing it or long-pressing it.</p>
Down key	<p>I When using mouse mode, you can move the mouse position by short-pressing it or long-pressing it.</p> <p>I When the mouse mode is turned off, you can move the cursor position by short-pressing it or long-pressing it.</p> <p>I When on the homepage, you can bring up the notification bar by long pressing it.</p>

Left key	<p>I When using mouse mode, you can move the mouse position by short-pressing it or long-pressing it.</p> <p>I When the mouse mode is turned off, you can move the cursor position by short-pressing it or long-pressing it.</p>
Right key	<p>I When using mouse mode, you can move the mouse position by short-pressing it or long-pressing it.</p> <p>I When the mouse mode is turned off, you can move the cursor position by short-pressing it or long-pressing it.</p>
OK key	<p>I The cursor selects the menu or the mouse selects the menu, you can click OK to confirm.</p> <p>I When the confirmation menu is not displayed, you can also click OK to confirm.</p>
Numeric keyboard (0~9, *, #)	<p>I You can enter characters through the numeric keyboard in the editing interface or the dial interface.</p> <p>I You can quickly enter the dial pad through the numeric keyboard on the homepage.</p> <p>I Some characters (for example: 0, *, #) have special usage in some scenes, please continue to check this description</p>

	for detailed usage.
Flashlights key	I Short press this button to quickly turn on or off the flashlight.
YouTube key	I Short press this button to quickly open a YouTube web.
Music key	I Short press this button to quickly open the music player.
Calendar key	I Short press this button to quickly open the calendar.

Charging the battery

The rechargeable Li-ion battery that comes with your phone is ready to be used but is not charged fully. It is easy to do & can be done in 3 simple steps below:

1. Connect the charger to your phone, and plug it into a socket.
2. The battery in the corner of the screen will display charging.
3. When fully charged, disconnect the charger from your mobile, and unplug.

Power ON/OFF

Long press the hang-up key to power ON/OFF the phone. When you turn your phone on, it will automatically check the SIM and show the following information on the screen:

Input SIM PIN: If you've set a PIN for your SIM.

Note

The PIN is supplied with your SIM. Please replace it with your PIN code as soon as possible. Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it.

Enter Main Menu

After powering on and unlocking the screen, the main menu is displayed by default and all your apps will be displayed here.

Enter the application

Once at the main menu, click the icon to select the submenu, and press the Back key to return to the previous menu, and press the Hang up key to return to the home screen.

Use Notification Panel

As a new notification appears in the notification area, to return to the homepage, long press the Down key to view the notifications. If you are using the mouse function, you can move the mouse to the top of the screen and click the status bar to view the notifications.

Memory cleaner

On any interface, long press Back key to access the Memory Cleaner, view all the recent tasks & click the Menu key to clear all applications. Use the Left key and Right key to switch applications, and click the OK key to enter the application.

Adjust the volume

1. We can adjust the volume of each type through Settings -> Sound.
2. In multimedia playback interfaces such as video or music playback, we can use the Numeric key * to decrease the media volume, and the Numeric key # to increase the media volume.
3. In the call interface, we can use the Numeric key * to lower the call volume, and the Numeric key # to increase the call volume.

Flashlight

1. When your screen is displayed on the homepage, you can long-press the Down key to open the notification bar, select the flashlight menu, and turn on the flashlight.
2. When your screen is displayed on the homepage, you can turn on the flashlight function by long pressing the Numeric key 0.
3. Short press the Flashlights key to quickly turn on or off the flashlight.

Screenshot

Sometimes, we may need to intercept some information on the screen. At this time, we can obtain screenshots by doing the following.

1. We can press the Numeric key * and the numeric key # at the same time to achieve.

Input

In the editing interface, you can enter characters by pressing the Numeric keyboard.

1. Short press the Numeric key *, and you can call the special character panel, and you can select special characters to input.
2. Long press the Numeric key *, and you can switch the input method language.
3. Long press the Numeric key #, and you can switch the input mode, and switch between "123, ABC, Abc, ABC, T12abc, T12Abc, T12ABC, Emoticons".
4. Click on the OK key to enter the line break character.
5. Click the Back key to delete the entered characters.

Install APK through File Manager

APK is a supported file format for the Android mobile operating system.

1. Please copy the downloaded APK file into the SD card, and then insert the SD card into the phone.
2. In Idle mode, click "File Manager" to enter the directory of the SD card.
3. Click the APK file you wish to install, and follow the installation wizard.
4. To uninstall an application, you can select the application you want to uninstall from the desktop, long-press the

Menu key, and then click Uninstall.

Gestures

Support: Double-tap the screen to wake up Slide up to return to the desktop Swipe left to return to the previous screen. You can turn on or off related functions in System Settings – System – Gestures.

Profile

When on the desktop, long press the Numeric key # to quickly switch between vibration modes. Do Not Disturb Mode and normal mode.

NFC

Support NFC function, go to Settings ->Connected devices ->Connection preferences ->NFC, turn the NFC function on or off.

Emergency rescue

Support the emergency rescue function,

1. Go to Settings ->Safety & Emergency, turn on the emergency function, set Call the emergency contact number, Edit emergency messages, and Emergency contacts.
2. On any interface, press and hold the Numeric key 5 and the emergency program will execute in 3 seconds.

Using your Phone

Main Menu & Its Functions

Select to enter the main menu.

Allows you to view a list of features available on your phone.

Phone

Allow you to make quick outgoing calls. Voicemail: Go to Phone ->Settings ->Voicemail, set the voice mailbox number. When on the desktop, long press and hold the Numeric key 1 to quickly dial the voice mailbox number.

Call History

View your call history.

Contacts

To see your list of Contacts. Access the phonebook through this function.

Messaging

Allow you to view messages sent & received as a thread.

Music

View the list of songs available on your phone. Your music files are classified according to the following four categories Artists, albums, songs, and playlists. Touch one of these categories; you can view the list inside.

Browse

Browse the internet.

Camera

Allows you to click pictures& videos anytime you want. The camera opens in capture mode. Frame your picture within the screen and hold the phone steady. Touch the Camera button to capture. Click the preview box to browse the picture, share (via a compatible application), or delete a picture.

Number key 1: Switch between front and rear cameras.

Number key 2: Switch flashlight mode.

Number key 3: Go to camera settings.

Gallery

Allows you to view photos & videos in folders.

Settings

Modify settings under the following:

- Network & internet
- Connected devices
- Battery
- Sound
- Display
- Accessibility
- Security
- Location
- Safety & Emergency
- System
- About phone

Clock

After entering Clock, move right to set Alarm.

Calculator

This function can turn your phone into a calculator it can do some simple calculations.

SIM Toolkit

This service is provided by the operator. It provides many types of personalized message services.

Sound Recorder

Allows you to record sounds.

FM Radio

Can listen to various radio stations.

Calendar

View the calendar.

File Manager

You can view your files.

Wi-Fi

B7 supports Wi-Fi which allows you to connect with a Wireless connection. This is useful for surfing the internet on a phone. Enter the "Settings" interface & search WIRELESS & NETWORKS. Select the network you want to connect to. Use a dry soft cloth to wipe general dirt. Do not use a hard cloth, benzene, or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of color.

Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperatures. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use indoor chargers.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following.

Two conditions

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of this Device B7 Pro (FCC ID: O552402723) has been tested against this SAR limit. SAR information on this can be viewed online at <http://www.fcc.gov/oet/ea/fccid/>. Please use the device's FCC ID number for the search. This device was tested for typical operations 10mm from the body. To maintain compliance with FCC RF exposure requirements, a 10mm separation distance should be maintained to the user's bodies

NOTE


This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to Try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The WLAN function for this device is restricted to indoor use only when operating in the 5150 to 5250 MHz frequency range.

Documents / Resources

	<p>SWAGTEK MT6739 Media Tek [pdf] Instruction Manual 2402723, O552402723, MT6739 Media Tek, MT6739, Media Tek, Tek</p>
---	--

References

- [User Manual](#)

[Manuals+](#). [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.