



## Swan ST14610 Nordic 4 Slice Toaster Instruction Manual

[Home](#) » [Swan](#) » Swan ST14610 Nordic 4 Slice Toaster Instruction Manual 

### Swan ST14610 Nordic 4 Slice Toaster

#### Contents

- [1 IMPORTANT INFORMATION – RETAIN FOR FUTURE USE](#)
- [2 TECHNICAL DATA](#)
- [3 HOW TO USE](#)
- [4 CLEANING & MAINTENANCE](#)
- [5 WARRANTY](#)
- [6 BS PLUG](#)
- [7 DISPOSAL OF UNIT](#)
- [8 SWAN BRAND HERITAGE](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)




## **IMPORTANT INFORMATION – RETAIN FOR FUTURE USE**

**When using any electrical appliance, basic safety precautions should always be followed including the following:**

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains;
- Pull the mains plug out of the mains power supply socket and allow the unit to cool down completely before you clean the unit.
- Only use a slightly damp cloth to clean the outside of the unit. Do not use abrasive or aggressive cleaners. Click to preopen the crumb tray, then pull it out, remove any crumbs of bread and put the tray back in.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.

- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- CLEAN THE TOASTER AFTER EACH USE. NOT DOING SO POSES A FIRE RISK
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

## TECHNICAL DATA

Two Slice Toaster	Four Slice Toaster
<b>Model:</b> ST14610 (all colours) Input <b>Voltage:</b> 220-240V <b>Frequency:</b> 50Hz <b>Power consumption:</b> 900 Watts	<b>Model:</b> ST14620 (all colours) Input <b>Voltage:</b> 220-240V <b>Frequency:</b> 50Hz Power <b>consumption:</b> 1500 Watts
	



**CAUTION:** SURFACES BECOME HOT DURING USE

## HOW TO USE

**Before first use,** unpack the toaster and remove all packaging materials etc.

- Place the toaster on a suitable, level surface. Set the browning dial to 3 or 4.
- Place one or two slices of bread into the toaster slots
- Connect the product to the mains supply and press down the carriage lever.

**NOTE:** The carriage lever will only stay down if the product is connected to the mains supply. You can press the cancel button at any time to cancel the toasting process. The toast will pop up when it is ready

## THINGS TO NOTE:

On first use, you may notice a slight odour. This is caused by the evaporation of light oils used in manufacture. This only occurs on the first use and does not affect the taste of your toast.

## OTHER FUNCTIONS:

The **DEFROST bread setting** is perfect for defrosting and toasting frozen bread. To use this function, press the carriage lever down then press the Frozen Bread button.

The **REHEAT setting** is good for reheating toast that may have gone cold. Press the carriage lever down then press the Reheat button.

**EXTRA LIFT** feature assists in removing toast that may be a little shorter than the depth of the carriage. Simply lift the carriage lever upward.

## FOUR SLICE MODELS.

Operation is the same as above, except there are two independent carriages, controls and crumb trays.

NEVER PUT METAL IMPLEMENTS IN THE TOASTER TO REMOVE STUCK BREAD. DOING SO POSES A SHOCK OR FIRE RISK

## CLEANING & MAINTENANCE

- UNPLUG AND ALLOW TO COOL FULLY BEFORE CLEANING
- Empty the crumb tray and ensure the carriage is clear of bread pieces after\ each use.
- For cleaning external surfaces, a soft cloth moistened with a mild detergent solution is all that is required.
- DO NOT USE ABRASIVE OR STRONG CHEMICAL CLEANERS DO NOT IMMERSE ANY PART OF THE PRODUCT IN WATER

## WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

### The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only

## BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE
GREEN/YELLOW	EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or (earth symbol) and is coloured GREEN or GREEN/YELLOW.

**WARNING:** THIS APPLIANCE MUST BE EARTHED

## DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.

## SWAN BRAND HERITAGE



**Did you know...**

In 1933 Swan were the first to develop an electric heating element that could be immersed in water. This led to the Swan kettle range that could boil up to six pints of water in just over nine minutes – pretty hot for the time! These days it takes about two minutes for a Swan kettle to boil.

[www.swan-brand.co.uk](http://www.swan-brand.co.uk)

Scan this QR code to hear about our story.



We love what we do



we're proud of our quality.



Find us on Facebook



\* on selected products

**Copyright** © Swan Products Ltd.  
PO Box 3117, Stoke-on-Trent ST4 9GD






---

## Documents / Resources



[Swan ST14610 Nordic 4 Slice Toaster](#) [pdf] Instruction Manual  
ST14610, ST14620, ST14610 Nordic 4 Slice Toaster, ST14610, Nordic 4 Slice Toaster, Slice Toaster, Toaster

## References

-  [Everything you need to know to Recycle More](#)
-  [Index of /](#)
-  [WEEE Ireland Waste Electrical and Electronic Equipment Recycling](#)
- [User Manual](#)

## **Manuals+. Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.