



## Swan TRIBECA 2 and 4 Slice Toasters User Guide

[Home](#) » [Swan](#) » Swan TRIBECA 2 and 4 Slice Toasters User Guide 

Swan TRIBECA 2 and 4 Slice Toasters



## Contents

- 1 **IMPORTANT INFORMATION**
  - 1.1 **RETAIN FOR FUTURE USE**
- 2 **TECHNICAL DATA**
- 3 **HOW TO USE**
- 4 **CLEANING AND MAINTENANCE**
- 5 **WARRANTY**
- 6 **BS PLUG**
- 7 **DISPOSAL OF UNIT**
- 8 **Documents / Resources**
  - 8.1 **References**
- 9 **Related Posts**

## IMPORTANT INFORMATION

### RETAIN FOR FUTURE USE

**WARNING!** When using any electrical appliance, basic safety precautions should always be followed including the following:



- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.  
Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.  
Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug.  
Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use.  
Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentioned precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system.
- **CLEAN THE TOASTER AFTER EACH USE. NOT DOING SO POSES A FIRE RISK.**
- This appliance is intended to be used in households and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential

type environments; bed and breakfast type environments.

## TECHNICAL DATA

<b>Tribeca Two Slice Toaster</b>	
<b>Model:</b>	ST42010WHTN/BLKN
<b>Input Voltage:</b>	220-240V
<b>Frequency:</b>	50-60Hz
<b>Power Consumption:</b>	730-870W
<b>Tribeca Two Slice Toaster</b>	
<b>Model:</b>	ST42010WHTN/BLKN
<b>Input Voltage:</b>	220-240V
<b>Frequency:</b>	50-60Hz
<b>Power Consumption:</b>	1460-1750W



	<p><b>CAUTION!</b> Do not immerse in water</p>
	<p><b>CAUTION!</b> <b>SURFACES BECOME HOT DURING USE!</b></p>

## HOW TO USE

**Before first use, unpack the toaster and remove all packaging materials etc.**

- Place the toaster on a suitable, level surface. Set the browning dial to 3 or 4.
- Place one to four slices of bread into the toaster slots.
- Connect the product to the mains supply and press down one or both the carriage levers. NOTE: The carriage lever will only stay down if the product is connected to the mains supply. You can press the cancel button at any time to cancel the toasting process. The toast will pop up when it is ready. The two carriages can operate independently on the four slice version.

**Please note:** on first use, you may notice a slight odour.

This is caused by the evaporation of light oils used in manufacture. This only occurs on the first use and does not affect the taste of your toast

### OTHER FUNCTIONS:

The DEFROST bread setting is perfect for defrosting and toasting frozen bread. To use this function, press the carriage lever down then press the frozen bread button.

The REHEAT setting is good for reheating toast that may have gone cold. Press the carriage lever down then press the reheat button.

The BREAD LIFT feature assists in removing toast that may be a little shorter than the depth of the carriage. Simply lift the carriage lever upward.

**NEVER PUT METAL IMPLEMENTS IN THE TOASTER TO REMOVE STUCK BREAD. DOING SO POSES A SHOCK OR FIRE RISK!**

## CLEANING AND MAINTENANCE

**UNPLUG AND ALLOW TO COOL FULLY BEFORE CLEANING!**

- Empty the crumb tray and ensure the carriage is clear of bread pieces after each use.
- For cleaning external surfaces, a soft cloth moistened with a mild detergent solution is all that is required.
- **DO NOT USE ABRASIVE OR STRONG CHEMICAL CLEANERS.**
- **DO NOT IMMERSE ANY PART OF THE PRODUCT IN WATER.**

## WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

### The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only

Help line **0333 220 6050**

## BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

<b>BLUE</b>	<b>NEUTRAL</b>
<b>BROWN</b>	<b>LIVE</b>
<b>GREEN/YELLOW</b>	<b>EARTH</b>

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or (earth symbol) and is coloured GREEN or GREEN/YELLOW.

**WARNING! THIS APPLIANCE MUST BE EARTHED**

## DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for

recycling, once it has reached the end of its life.



Follow us online





[www.swan-brand.co.uk](http://www.swan-brand.co.uk)



## Documents / Resources

 The image shows the front cover of a user guide for Swan Tribeca toasters. It features the Swan logo, the product name 'TRIBECA TOASTERS', and a photograph of the toasters. At the bottom, it lists the models: 'Models: ST42010WHTN, ST42010BLKN & ST42020WHTN, ST42020BLKN' and the website 'www.swanbrand.co.uk'. There is also a small 'v1.2' label.	<p><a href="#">Swan TRIBECA 2 and 4 Slice Toasters</a> [pdf] User Guide</p> <p>TRIBECA 2 and 4 Slice Toasters, TRIBECA, 2 and 4 Slice Toasters, Slice Toasters, Toasters, S T42010WHTN, ST42010BLKN, ST42020WHTN, ST42020BLKN</p>
---	---

## References

-  [Everything you need to know to Recycle More](#)
-  [Swan - Stylish Kitchen Appliances & Housewares: Fearne by Swan...](#)
-  [Support | Swan Big Family](#)
-  [Home - WEEE Ireland](#)