



Contents [[hide](#)]

- [1 SwayTosh NOVA PRO E-Reader](#)
- [2 Handling, Maintenance and Safety](#)
- [3 Product overview](#)
- [4 Getting started](#)
- [5 Notification bar](#)
- [6 Apps / booktransfer](#)
- [7 Settings](#)
- [8 Reading function](#)
- [9 Troubleshooting](#)
- [10 Warranty Conditions](#)
- [11 Frequently Asked Questions](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)



SwayTosh NOVA PRO E-Reader



Read me first

Please read following safety instructions before use.

Handling, Maintenance and Safety

 
- Please DO NOT place heavy objects on your E-reader; failure to do so may result damage to the display panel.
- Touch panel surface easily have scratch damage, please operate with care, and avoid contact damage with other object.
- Touch screen with your finger on display, DO NOT use of sharp or metallic objects may cause scratch and damage.
- Please use the standard USB-C cable to charge the device, failure to do so may cause damage to it.
- Before cleaning the equipment, the power must be cut off. Please DO NOT use alcohol, liquid or spay type of deterative to clean the equipment.
- Please wipe the surface of the appliance with a soft cloth with water or non-alkaline cleaners, or gently wipe the display with a soft lint-free cloth.
- Use a soft cloth to remove dust from the display, touch screen surface has a special protective coating, will prevent dust from sticking to it; without using a soft cloth, and may cause damage to the protective coating.
- Please DO NOT disassemble the equipment. For your safety concern, only qualified serviceman can open the equipment.
- The using temperature is 0–40°C, please use this E-reader in this range.

Waste Disposal

- Please DO NOT dispose this final product as normal trash, the assembled parts are designed for recycling and reuse, please follow the related disposal regulation at your region.
- Please DO NOT place or store this final product close to the fire source, it may cause explosion accident.

Product overview

See the illustrations below to learn more about the product. These show the front, back, top and bottom sides, with all key hardware features indicated.

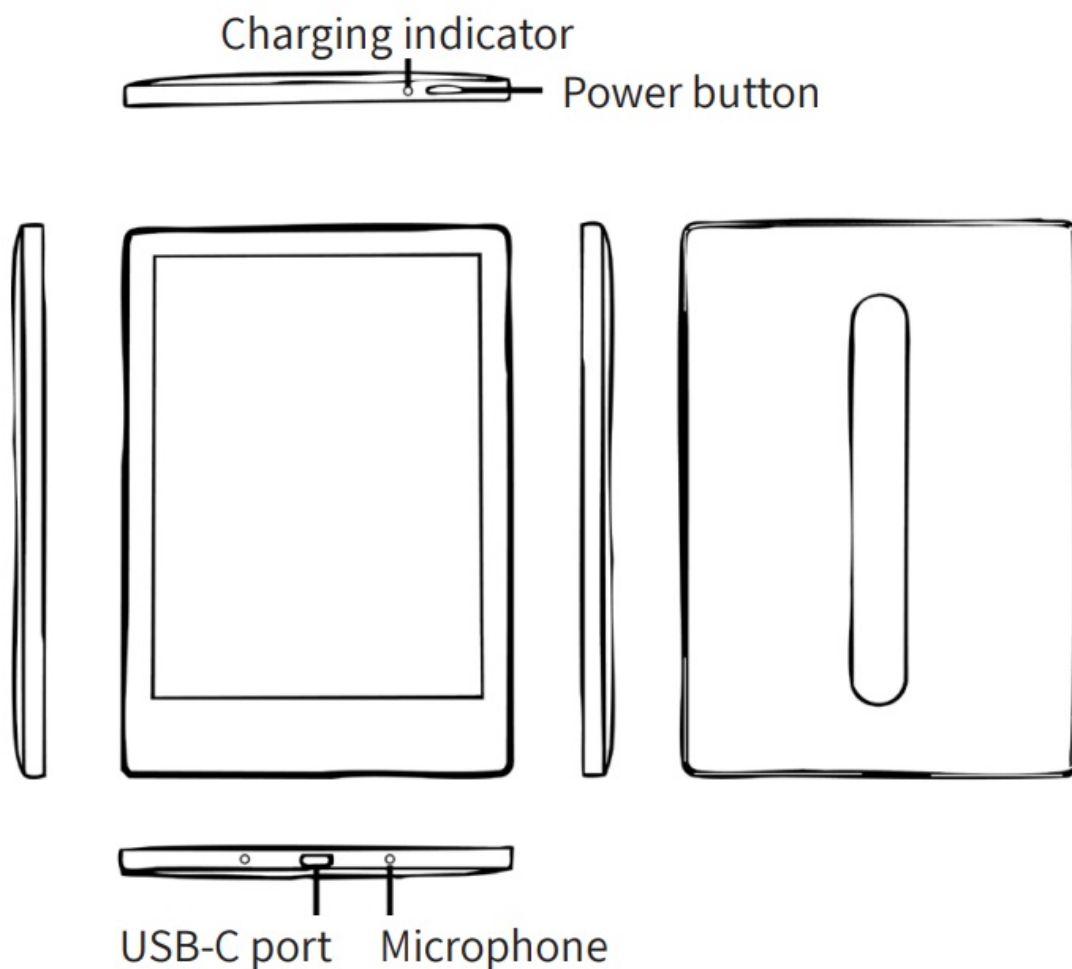


- Power button
 - Press and hold to turn the e-reader on/off
 - Short press to switch the screen on/off
 - Hold for 10 seconds to force restart
- USB-C port

- Connect to PC to transfer files
- Charge via PC or normal charger
- Supports OTG
- Indicator
 - Charging indicator

Getting started

Home

 When starting the SwayTosh E-reader NOVA PRO for the first time, it goes directly to the HOME screen. You can set the language in Settings (explained later in this manual). The Home screen shows the bookshelf. Press Home or Bookshelf to view book covers. Tap a cover to start reading. You can also search, sort, multi-select and create folders.

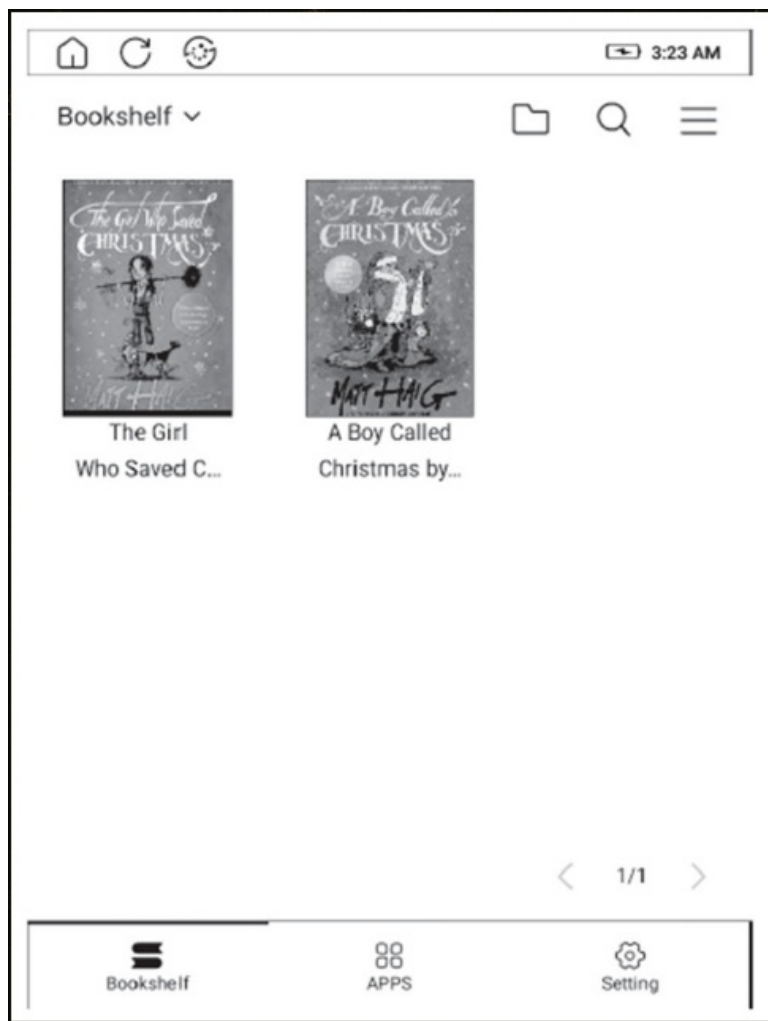

Buttons

- Home button – Return to the Home screen

- Refresh button – Manually refresh to remove ghosting
- Load button – Choose normal or fast loading (fast loading may reduce display quality)
- Hamburger menu – Access extra options, including importing books (explained later)

Notification bar

Swipe down from the top to open the notification bar.

Functions include:

- Toggle Wi-Fi
- Toggle airplane mode
- Toggle Bluetooth
- Open Wi-Fi settings
- Toggle battery saver mode
- Back button
- Home button
- Refresh button
- Adjust warm/cold light (30 levels)
- Adjust volume

Apps / booktransfer

In this section you find 2 main options:

- Google Play Store – Log in with your Google account to download apps (e.g. Google Drive, Dropbox, Storytel, etc.)
- Book Transfer – Pre-installed app (in English) for transferring books.



1. Booktransfer USB connection

Transfer books directly via USB cable to PC.

2. Booktransfer Wifi connection

 
Transfer books wirelessly via Wi-Fi. Connect both devices to the same Wi-Fi network, follow the on-screen steps. Within a few seconds to one minute after uploading, books appear under: Home → Hamburger menu → Import local book.

3. Booktransfer Cloud

With a cloud app (Google Drive, Dropbox, etc.), upload books via smartphone/PC to the cloud. Open the app on your e-reader to view and download them.

Settings

In the settings menu you can check the device model/ version and change preferences.

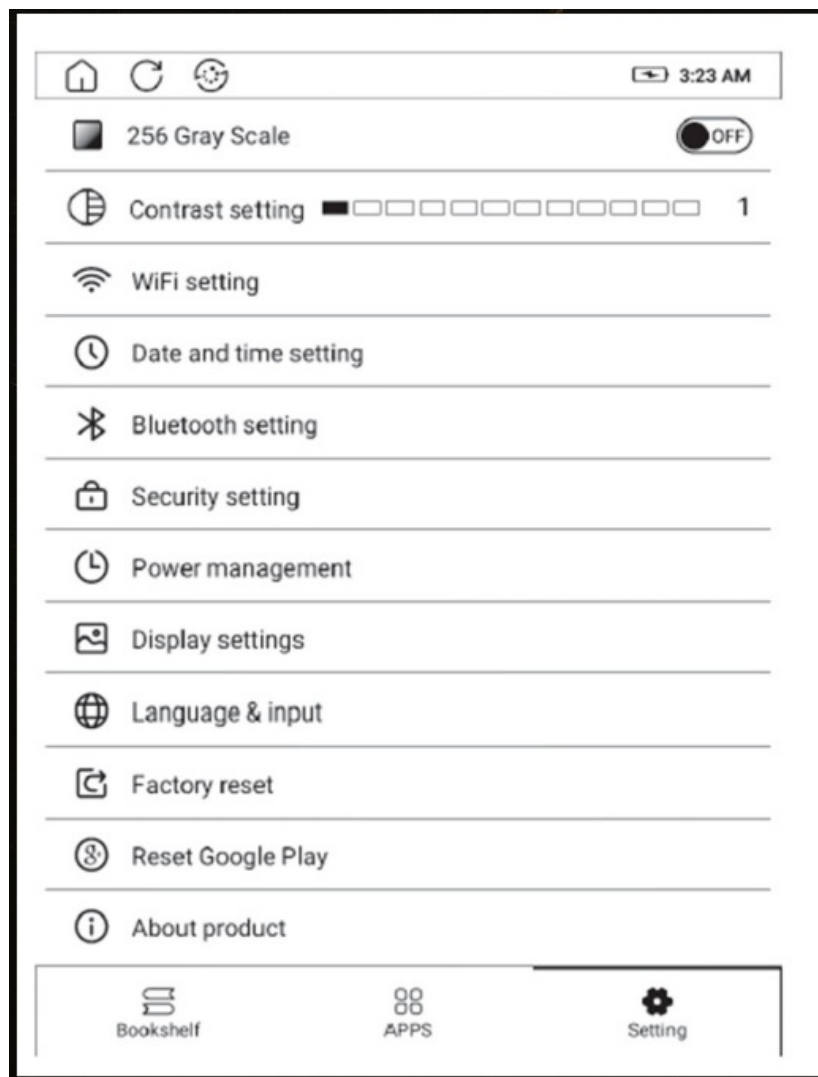

1. 256 Gray Scale
On/Off, improves quality with 256 grayscale levels.
2. Contrast
Adjust screen contrast.
3. Wi-Fi settings
Connect/manage Wi-Fi networks.
4. Date & time
Set date, time, timezone.
5. Bluetooth
Turn Bluetooth on/off, manage devices.
6. Security
Configure passwords/screen lock.
7. Power management
Set sleep/auto power-off.
8. Display

Adjust font size and display options.

9. Language & input

Choose system language, adjust keyboard/input.

10. Factory reset

Restore factory defaults (erases all data).

11. Reset Google Play

Reset Play Store configuration.

12. About product

Device info: model number, firmware, updates.

Reading function

With the SwayTosh E-reader NOVA PRO, you can easily open, browse, and close books. The e-reader always remembers your last reading position, so you can continue reading where you left off.

Open a book

Tap a cover in the bookshelf.

Navigation

- Tap middle = open menu
- Tap right = next page
- Tap left = previous page.

Close a book

Close via menu. When reopened, the device returns to the last page read.

Troubleshooting

1. Network error

Move to an area with better signal.

2. Device won't power on

Battery empty; recharge fully.

3. Touchscreen unresponsive

Issues may be caused by screen protector, gloves, dirty fingers, sharp objects,

moisture, or outdated software.

Restart or update device.

4. Crashes/overheating

Restart, force restart (hold power 10s), or factory reset (back up first).

5. Network problems

Weak Wi-Fi; move closer to access point and avoid interference.

6. Battery icon empty

Charge battery.

7. Battery not charging

Check USB port and/or replace charger.

8. Battery drains quickly

Extreme temperatures reduce performance; batteries naturally wear out.

9. Data loss

Regularly back up your data. SwayTosh is not responsible for loss/misuse

Warranty Conditions

1. Within 2 years of purchase, with valid proof, you are entitled to free repair for quality issues under normal use.
2. Not covered by warranty:
 - Self-inflicted damage
 - Water or moisture damage
 - Scratches
 - Heat damage caused by careless use
 - Normal wear and tear
3. Damage caused by intentional or irresistible factors may result in repair costs.
4. For questions/claims/repairs contact SwayTosh. Provide your address, name, email, order number, and fault description.

SwayTosh / AngelTech Antwoordnummer 8005 5995 ZX Nederland

- swaytosh.nl

Frequently Asked Questions

Q: Why does the screen flicker?

A: The flickering is a normal part of the screen refresh process in E Ink technology to maintain display clarity and prevent ghosting.


Q: Why do I still see letters from the previous page?

A: This phenomenon, called ghosting, is common in E Ink screens. The device automatically refreshes the screen to reduce this effect.

Q: How do I keep the speed optimal?



A: Ensure your device is updated and properly maintained for optimal performance.

Documents / Resources

	SwayTosh NOVA PRO E-Reader [pdf] User Manual NOVA PRO E-Reader, NOVA PRO, E-Reader
---	---

References

- [User Manual](#)

 E Reader, NOVA PRO E-Reader, NOVA-PRO,
 SwayTosh SwayTosh

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.