



Swiftel Maxi Linux Remote Control User Guide

[Home](#) » [Swiftel](#) » Swiftel Maxi Linux Remote Control User Guide 



Maxi Linux Remote Control User Guide




Contents

- 1 Remote control layout
- 2 TV control setup: Brand Search
- 3 TV control setup: Auto Search (search all brands)
- 4 Documents / Resources
- 5 Related Posts

Remote control layout

1. TV input source select
2. TV power/standby
3. Colour navigation
4. Replay VOD or recorded video
5. Set-top box (STB) PVR transport buttons
6. Electronic Program Guide
7. Navigation and OK
8. Back
9. Volume up and down
10. Channel select and text entry
11. Go to Live TV
12. Option (this function is mapped by your service provider)
13. STB power/standby
14. VOD menu
15. Forward VOD or recorded video
16. Information
17. Exit
18. STB menu
19. Channel/Page up and down
20. Mute
21. Subtitles/closed captions
22. DVR /recordings menu

Note: Some functionality (e.g. PVR) may not be available on specific models of set-top box (STB), also functionality may vary with the type of TV service delivered by your service provider.

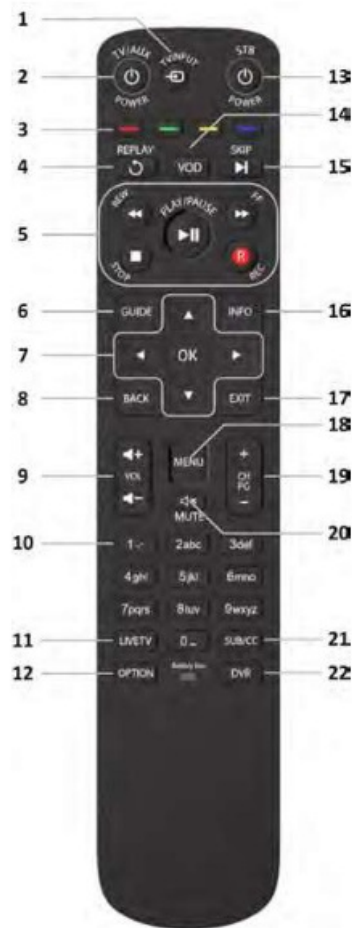

TV control setup: Brand Search

Some functions of the remote can be programmed to operate your TV. To do this, your remote must learn the 'brand code' of your TV. By default, the remote is programmed with the most common brand code 1150 (Samsung).

1. Set the remote to infra red (IR) mode by pressing Menu and 1 simultaneously for at least three seconds. The STB POWER led flashes twice when the remote has switched to IR mode.
If you make a mistake, you can exit the procedure by pressing and holding the STB POWER button. The remote will revert to normal operation. No N brand code will be stored.
2. Note your N brand and find the 4-digit brand code by referring to the brand code tables on the Amino support site (www.aminocom.com/ support). Note the brand code.
3. Make sure your TV is turned on. The STB does not need to be turned on to perform this programming feature.
4. Press and hold the 1 and 3 buttons simultaneously for at least three seconds until the TV/AUX POWER led flashes twice and remains on.
5. Enter the 4 digit brand code for your N. On each digit entry the N/ AUX POWER led will flash.
6. If the operation is successful the TV/AUX POWER led will flash once and remain on. If the operation is unsuccessful the TV/AUX POWER led will flash rapidly and the remote will revert to normal operation. No TV brand code will be stored.
7. Press and hold either the TV/AUX POWER or MUTE button. When the N turns off or mutes, release the TV/AUX POWER or the MUTE button.
8. Leave the brand search mode by pressing the STB POWER button. If you change your N to a different brand and the remote control requires re-programming, repeat this brand search procedure with the brand code for

your new TV.

TV control setup: Auto Search (search all brands)

If the N brand cannot be found by the previous Brand Search method then Auto Search can be used.

Note: this process may take several minutes to find your N code. Make sure your TV is turned on. The STB does not need to be turned on to perform this programming feature.

1. Set the remote to infra red (IR) mode by pressing simultaneously for at least three seconds. The STB POWER led flashes twice when the remote has switched to IR mode. Menu and 1
2. Press and hold the 1 and 3 buttons simultaneously for at least three seconds until the TV/AUX POWER led flashes twice and remains on, then release both buttons.
3. Enter the 4 digit code 9 9 9 9. On each digit entry the STB POWER led will flash.
4. If the operation is successful the TV/AUX POWER led will flash once and remain on. If the operation is unsuccessful the remote will give one long flash and exit from the brand search.
5. Press and hold either the TV/AUX POWER or MUTE button. When the TV turns off or mutes, release the TV/AUX POWER or the MUTE button.
6. Leave the brand search mode by pressing the STB POWER button.


If Auto Search cannot set up operation of your TV, then the remote is unable to control that N.

For the Volume Button punch through:

1. Set Volume Keys as N Keys: Press «MENU + 3>> simultaneously for 3secs. The TV-LED gives a confirmation blink and the 3 volume keys now act as N keys. They will then send TV-IR codes (either DB or learned).
2. Set Volume Keys as STB Keys: Press «MENU + 4» simultaneously for 3secs. The TV-LED gives a confirmation blink and the 3 volume keys now act as STB keys. They will then send STB codes.



Documents / Resources

	Swiftel Maxi Linux Remote Control [pdf] User Guide Maxi Linux, Remote Control, Maxi Linux Remote, Remote
---	---