



SWISSDIGITAL SDFV12101 FMN Finder Device Instruction Manual

January 11, 2022January 11, 2022

[Home](#) » [SWISSDIGITAL](#) » [SWISSDIGITAL SDFV12101 FMN Finder Device Instruction Manual](#) 

SWISSDIGITAL SDFV12101 FMN Finder Device Instruction Manual



Contents [[hide](#)]

[1 INTRODUCTION](#)

[2 PRODUCT DESCRIPTION](#)

[3 PRODUCT OVERVIEW](#)

[4 Swissdigital Design FMN Finder](#)

[5 Instruction for use](#)

[6 FCC statement](#)

[7 Documents / Resources](#)

[7.1 Related Manuals / Resources](#)

INTRODUCTION

Dear customer,

Thank you for choosing one of our products with the latest technology.

Like our Swiss forebears, we blend precision with craftsmanship.

Swissdigital stands for high-quality precision gear which are thoroughly tested.

To fully benefit from the support that Swissdigital offers, register your product at www.swissdigital.eu or www.swissdigital.com

PRODUCT DESCRIPTION

This product is designed by Swissdigital Design.

It has a Swissdigital Design FMN Finder which works with the Apple Find My APP, it fits and integrates in the bag, which will help you find your bag through Find My APP on your iPhone, iPad or MacBook in minutes, no need to worry about losing your backpack.

PRODUCT OVERVIEW

Swissdigital Design FMN Finder overview

Content

FMN Finder

technology

main control chip: Bluetooth BLE chip, Frequency: 2.4GHz

Battery type and life

CR2032 and life time approx. 1 year

Replaceable battery

Yes

Compatibility

iPhone or iPod touch with iOS 14.3 or later, iPad with iPad OS 14.3 or later, or Mac with macOS Big Sur 11.1 or later, capable of running iOS/ iPadOS 14.3 or later.

Swissdigital Design FMN Finder



Instruction for use

How to install and pairing the battery

Take the battery CR2032 out of the package, then open the FMN device rear cover by rotating the cover counter clockwise, place the battery in and close the battery cover (clockwise).

1. Rotate left open rear cover



2. Put in button battery



3. Rotate right close the rear cover



- 4.

How to attach the FMN Finder to backpack

Find the screw and screwdriver in the box, and fix up the battery-packed FMN device with the base support inside the backpack then installation completed.

1. Open the box to find a screw and a screwdriver



2. Open the zipper behind the Swissdigital logo on the front piece and find the FMN device base support



3. Insert the FMN device into the base



4. Place the screw in the socket and tighten it with the screwdriver




5. Zip up




How to connect the FMN device on the iOS system

Open "Find" APP on your iOS system, and click "Add Items" on the "Items" menu, then click "Other supported Items" and finally enter the name of your device to complete the connection of the device.


1. Open Bluetooth

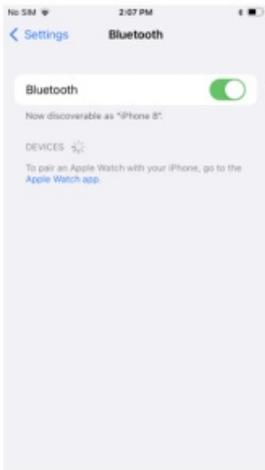


2. Open "Find" APP

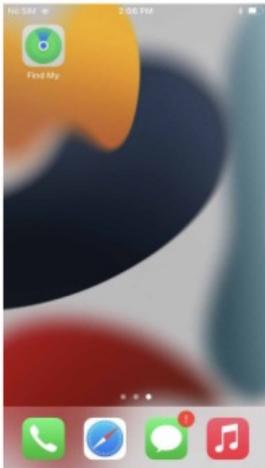


3. Click "Add new items" and search

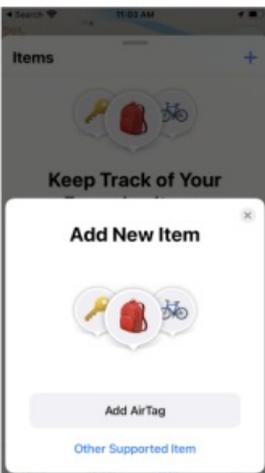


4. Connect the

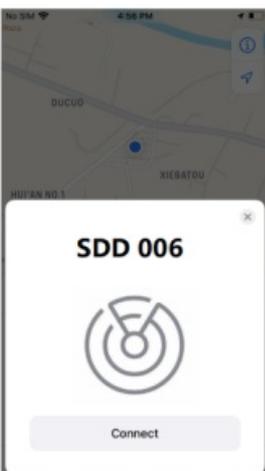


5. Self-named device

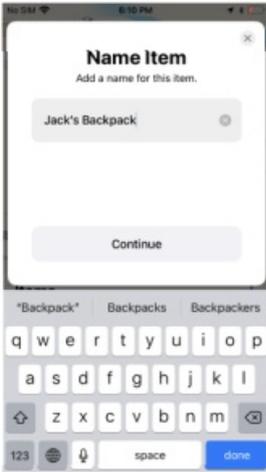


6. Select icon

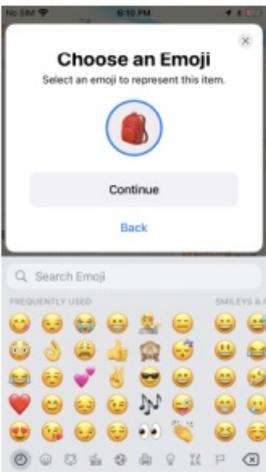

7. Binding ID

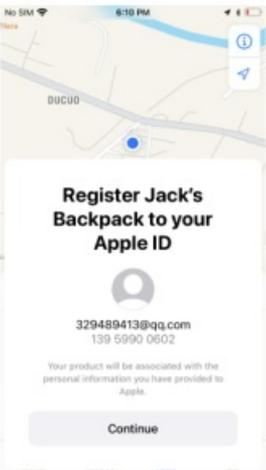

8. Finishing Setup

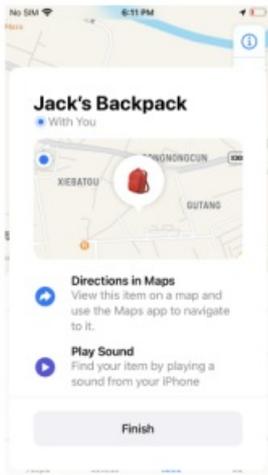

Tips:

When FMN device is not finding a connection, the device automatically enters sleep mode. In this case, remove the battery and reinstall to activate the FMN device. If you still cannot connect the device after trying the above steps, then consider replacing a new battery.

How to quit pairing broadcast

Rotate left to open rear cover and remove the battery.

Enable serial number view

Rotate left to open rear cover and remove the battery, then reload the battery and rotate right to close the cover. (one-time-completed battery reload)


Restore factory configuration

To restore the factory default settings, firstly place the battery on and after hearing a short beep sound, take out the battery in 3 seconds; secondly repeat the first step to hear a second short beep sound; thirdly after reloading the battery again, you will hear a long beep sound, the operation completed.


How to remove the connection of FMN device from the iOS system

Place the the FMN device next to your iPhone, iPad or MacBook , open the "Find" APP and click "device" to list out the connecting devices for this APPLE ID , click the FMN device and click "Remove this device" in drop-down to remove the FMN device connection.


1. Open "Find" APP

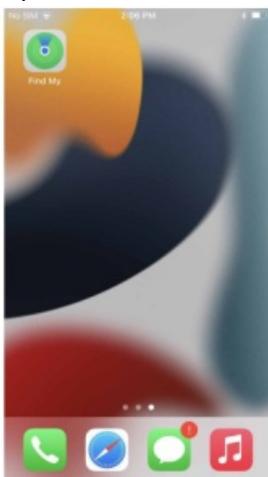


2. Click on Item List

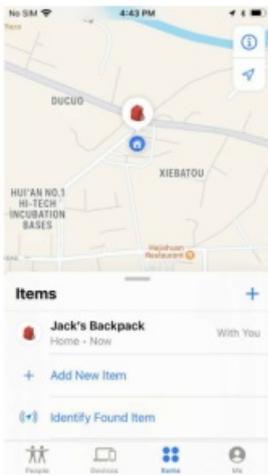


3. Click on Item Menu

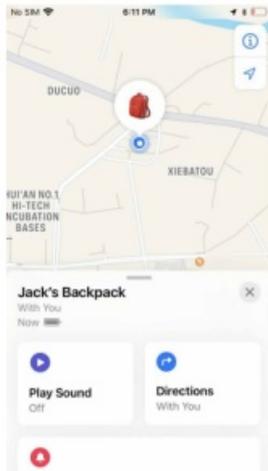

4. Find My Remove Menu in Drop-down

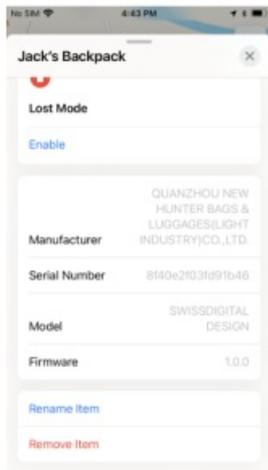

5. Do the removal

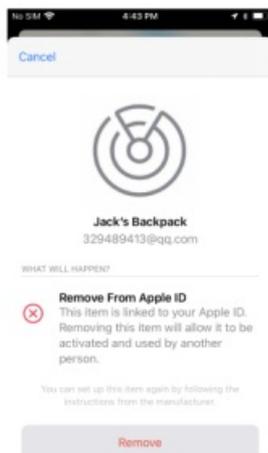

How to disassembling the FMN device from backpack

Unscrew the screw with the screwdriver and separate the FMN device from the bracket.

1. Open pocket for FMN device



2. Unscrew the screw with screwdriver



3. Separate the FMN device from the bracket



4. Zip up.



Tips:

Once the FMN device is added through the "Find My" APP, then other iOS system can not be added at the same time and have to remove before added to other IOS systems.

How to replace the Battery and quit pairing broadcast

1. Try replacing the battery when the following situations occur
 1. Unable to connect FMN device with the iOS system and failed to re-install the battery .
 2. "Search" APP shows low power.
 3. Unable to update the latest location information after connecting
2. Battery replacement steps

1. Get a new battery and rotate to the left to open the rear cover



2. Replace the old button battery with the new one



3. Turn right to close the rear cover



Tips:

The average standby time of FMN equipment is about one year, and the standby time may be shorter due to other factors, such as playing sound for a long time

Other instructions

The locating accuracy of this product depends on the number of iOS devices surrounding the FMN device.

This product requires an Apple device with iOS 14.0 or later to be functional. If it is not a software version mentioned before, please upgrade your iOS device software to required version.

Swissdigital Design FMN Finder (SDBT-014) is FCC, RoHS and CE certified.

FCC statement

FCC Interference Statement (Part 15.105 (b))

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15 Clause 15.21

“Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment”

FCC Part 15.19(a)

“This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.”

ISED RSS-Gen Notice (in English and French):

“This device complies with Industry Canada’s licence-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.”



Battery Safety Guidelines

- This product contains a coin battery, if the coin battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Follow battery usage and replace guidelines in the user’s guide.
Do not use incompatible batteries. Use of an incompatible battery may present a risk of explosion, leakage, or other hazard.
- Do not ingest battery, Chemical burn Hazard.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or place inside any part of the body, see immediate medical attention.

Technology authorized by Swissdigital®

Mac, macOS and iPhone, iPad and MacBook are trademarks of Apple Inc., registered in the U.S. and other countries and regions. Errors and omissions excepted. Version 1.1 20-Oct-2021.

We reserve the right to modify the instruction manual in accordance with product improvements



Documents / Resources

SWISSDIGITAL DESIGN

SWISSDIGITAL DESIGN

Apple with Apple Find My



[SWISSDIGITAL SDFV12101 FMN Finder Device](#) [pdf] Instruction Manual

SDFV12101, 2AILI-SDFV12101, 2AILISDFV12101, SDFV12101 FMN Finder Device, FMN Finder Device

Related Manuals / Resources

[hama 179555 SAT Finder Instruction Manual](#)

hama 179555 SAT Finder Operating instruction Safety instructions • Protect the product from moisture. • Do not leave...



[EXPLORE Finder and Guiding Telescope Instruction Manual](#)

Sucher- und Leitfernrohr / Finder- and Guiding Telescope 8x50 / 10x60
Art. No. 0620170 / 0620180 BEDIENUNGSANLEITUNG...

[Xerox Device Agent User Manual](#)

Xerox Device Agent User Manual - Optimized PDF Xerox Device Agent
User Manual - Original PDF

[ESKY Remote Key Finder Instruction Manual](#)

REMOTE KEY FINDER (Model: ES-KFO2) Instructions for Use
www.eskynow.com Introduction This remote key finder can help you to...

[Manuals+,](#)

- [home](#)
- [privacy](#)