



SwitchBot B08HR18MRH Bot and Remote User Manual

[Home](#) » [SwitchBot](#) » SwitchBot B08HR18MRH Bot and Remote User Manual 

SwitchBot

SwitchBot Remote
User Manual



Please read this user manual carefully before using your device.

Contents

- [1 Package Contents](#)
- [2 List of Components](#)
- [3 Getting Started](#)
- [4 Placement](#)
- [5 Pairing Remote](#)
- [6 Mapping Keys](#)
- [7 Specifications](#)
- [8 Return & Refund Policy](#)
- [9 Contact & Support](#)
- [10 CE/UKCA Warning](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

 
Package Contents



Remote
× 1




User Manual
× 1

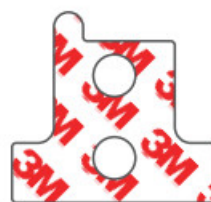

3M Adhesive
Tape × 2





 CR2450 Button Cell
Battery × 1
(Installed in the Remote)

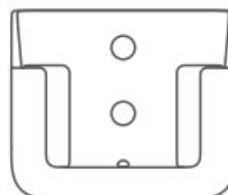


Remote Holder
× 1

  List of Components

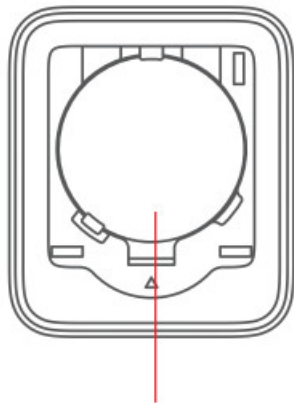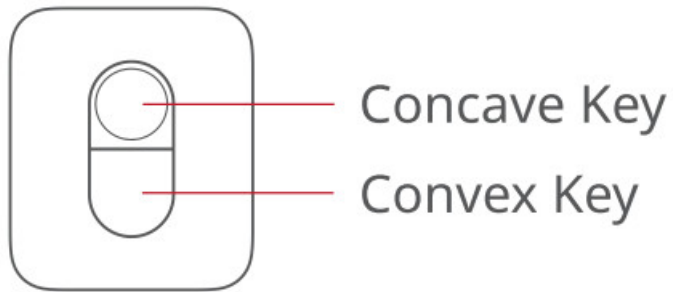

Battery Box

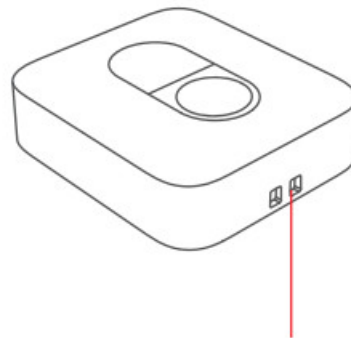 

Strap-hole

Getting Started

1. Download the SwitchBot app via the Apple App Store or Google Play Store.
2. Open our app and register a SwitchBot account or sign in directly if you already have one.




iOS 11.0+




Android OS 5.0+

<https://play.google.com/store/apps/details?id=com.theswitchbot.switchbot&hl=en>
<https://apps.apple.com/cn/app/switchbot/id1087374760>

 Open the battery cover, remove the plastic battery isolation tab, and you will see the indicator light start flashing.

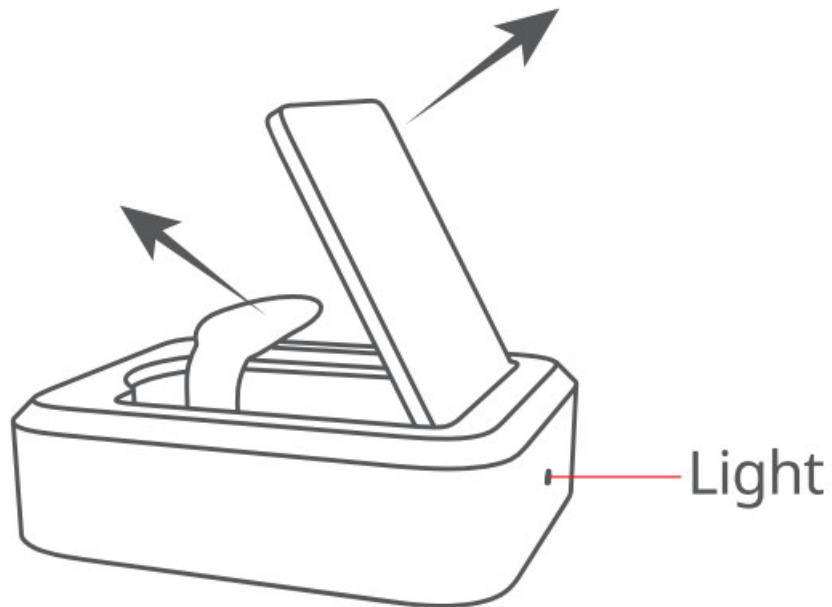


 Close the battery cover and turn on Bluetooth on your phone. Open the SwitchBot app, tap “+” on the top right of the home page, find the Remote icon and select. Then follow the instructions and add your device.

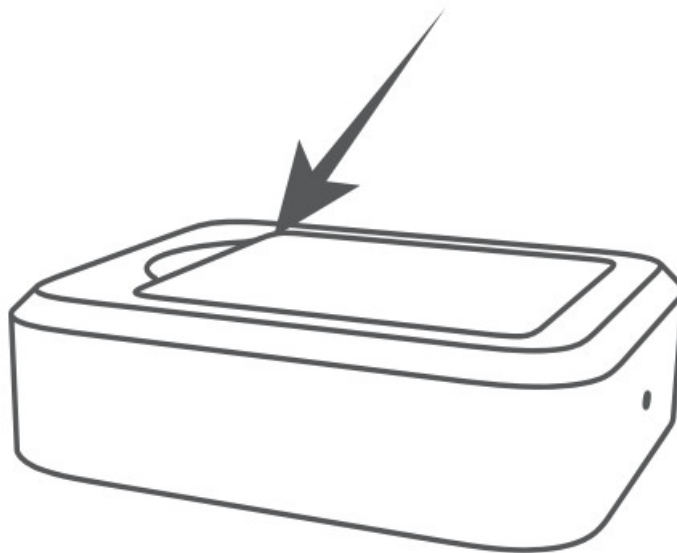


Placement

 After adding your Remote, you may place it anywhere.
Option 1: Place it on a table.

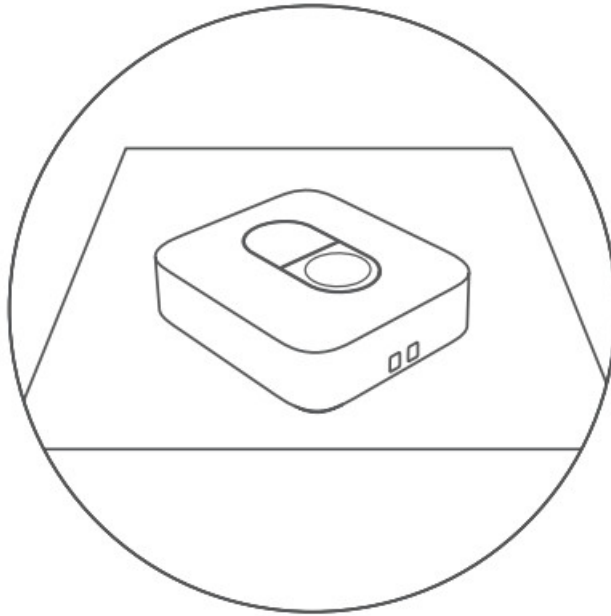


Option 2: Put it into the Remote holder.

 Peel off the tape liner on the back of the holder, stick it to a smooth surface and press it for 30 seconds to ensure it is firmly attached. Then put your Remote into the holder.

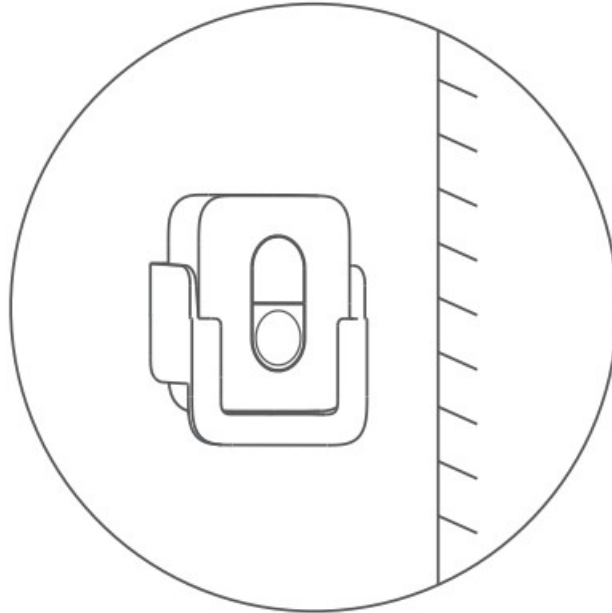

Option 3: Add a lanyard to your Remote through the strap-hole for portable use. You may need to purchase a lanyard separately.

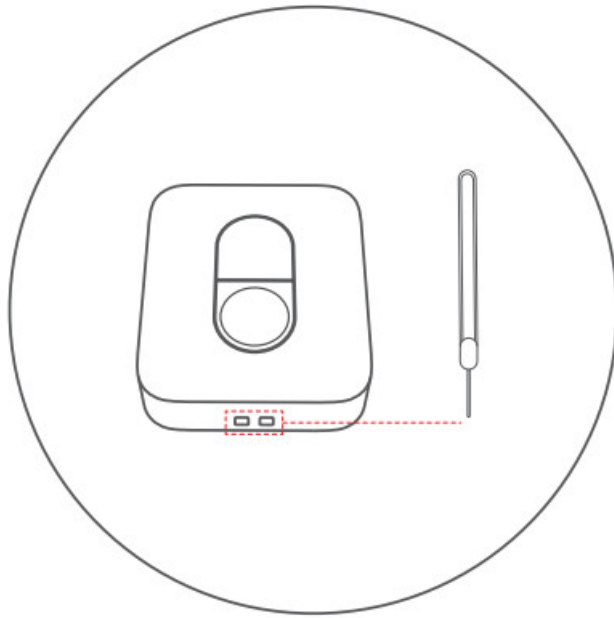 

Pairing Remote

You can pair your Remote with SwitchBot devices like a Bot or a Curtain to control them.

How to pair a Remote:

1. When pairing, place your phone, Remote and the target device close to each other.
2. Open the SwitchBot app, tap the Remote card on the home page, tap the Key icon below Key Settings, then your phone will start to scan nearby available devices. Select your target device and Set Remote actions for it.

Mapping Keys

The two keys on your Remote can be set individually to trigger actions of two different devices. One key can only trigger one action.

 
For example, you can set the action of the concave key as closing/opening your Curtain, and the concave key as turning on/off your Bot.

Low Battery

When you see a red battery icon appear on the Remote card on the app home page, you may need to replace the battery.

Resetting Factory Settings

Press and hold both keys, and you will see the indicator light starts flashing. Hold the keys for 15 seconds and release when the light stops flashing. Then your Remote will emit a beep sound and the indicator light will light up for 1.5 seconds. Now your remote has been reset to factory settings.

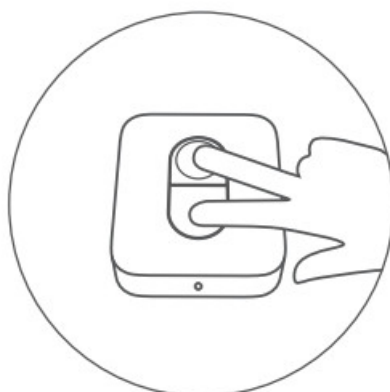

Note: Since all previous settings of your remote will be deleted after resetting, you will need to pair your Remote again.

Specifications

Model: W0301700

Color: White

Material: ABS plastic with UV-resistant coating

Size: 37.1x 43.1 x 13.4mm
(1.5%1.7x05in.)

Weight (with battery): 17.7 g (0.6 Oz.)

Battery: CR2450

Network Connectivity:

Bluetooth Low Energy

Return & Refund Policy

This product has a one-year warranty which begins from the date of purchase.

Should the following situations occur, your warranty and/or your eligibility for a return or refund may not be valid.

- Intended damage or abuse.
- Inappropriate storage (including dropping or soaking in water).
- Unauthorized modifying or repair of product.
- Natural wear of product.
- Natural disasters.

Contact & Support

Setup and Troubleshooting:

support.switch-bot.com

Support Email: support@wondertechlabs.com

Feedback: If you have any concerns or problems when using our products, please send feedback via our app through the Profile > Feedback page.

CE/UKCA Warning

RF exposure information: The EIRP power of the device at maximal case is below the exempt condition, 20 MW specified in EN 62479: 2010. RF exposure assessment has been performed to prove that this unit will not generate the harmful EM emission above the reference level as specified in EC Council Recommendation(1999/519/EC).

CEDOC

Hereby, Woan Technology (Shenzhen) Co.,

Lid. declares that the radio equipment type W0301700 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: support.switch-bot.com

UKCA DOC

Hereby, Woan Technology (Shenzhen)

Co, Lid. declares that the radio equipment type W0301700 is in compliance with UK Radio Equipment Regulations (SI 2017/1206). The full text of the UK declaration of conformity is available at the following internet address: support.switch-bot.com

This product can be used in EU member states and UK

Manufacturer: Woan Technology (Shenzhen) Co., Lid.

Address: Room 1101, Qiancheng
Commercial Center, No. 5 Haicheng Road,
Mabu Community, Xixiang Subdistrict,
Bao'an District, Shenzhen, Guangdong,
PRChina, 518100

EU Importer Name: Amazon Services Europe
Importer Address: 38 Avenue John F
Kennedy, L-1855 Luxembourg
WJ 2412 MH2 t0 2472 Mz
Operation temperature: —20 °C to 60 °C

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user’s authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Documents / Resources

	SwitchBot B08HR18MRH Bot and Remote [pdf] User Manual B08HR18MRH Bot and Remote, B08HR18MRH, Bot and Remote, Remote
-------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------