

SWZA V509 Portable Projector User Manual

Home » SWZA » SWZA V509 Portable Projector User Manual



Contents

- 1 SWZA V509 Portable Projector
- 2 Important safety considerations
- 3 Package Include
- **4 Product Function Structure Diagram**
- **5 FREQUENTLY ASKED QUESTIONS**



SWZA V509 Portable Projector




Important safety considerations

The following safety instructions ensure the long service life of the projector to avoid fire or electric shock. Make sure to read them carefully and pay attention to all the following warnings.

- Do not install the projector in sites with improper ventilation.
- Do not install the projector in hot and humid sites.
- Do not block the ventilation holes(intake or exhaust).
- Do not install the projector in dust and smoke sites.
- Do not install the projector near the temperature and smoke transducer. If may cause a sensor failure.
- Do not install the projector in sites with direct blowing of warm and cool air-condition wind. Otherwise it may cause the project failure due to moisture condensation or temperature increment.


Package Include

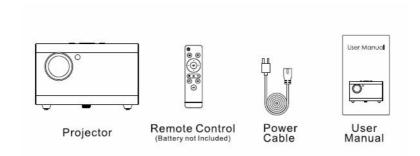

TROUBLESHOOTING FAQ's

MAC/ Mobile Phone Connection

- Mac Book air: Needs an extra Mini Display Port to HD adapter(not included)
- Mac Book Pro: Needs an extra Type C to HD adapter(not included)
- Android: Needs an extra Micro USB to HD/Type C to HD adapter(not 1hcluded)
- iPhone: Needs an extra Lightning to HD adapter(not included)

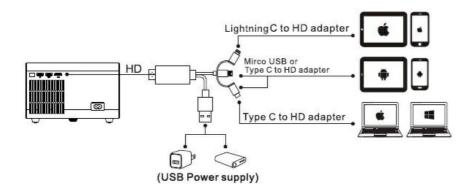

Blurry Image


- 1. (D Adjust keystone correction to make the image rectangular.
- 2. Second, rotate the focus button to gain the best clarity.


Effective Projection Distance: 1.2 M-4.8 M

Mounting Hole

The projector's mounting holes are compatible with standard camera tripods and projector brackets with 1/4-inch mounting screws.

Product Function Structure Diagram

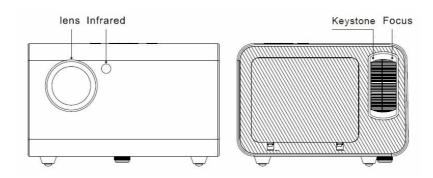

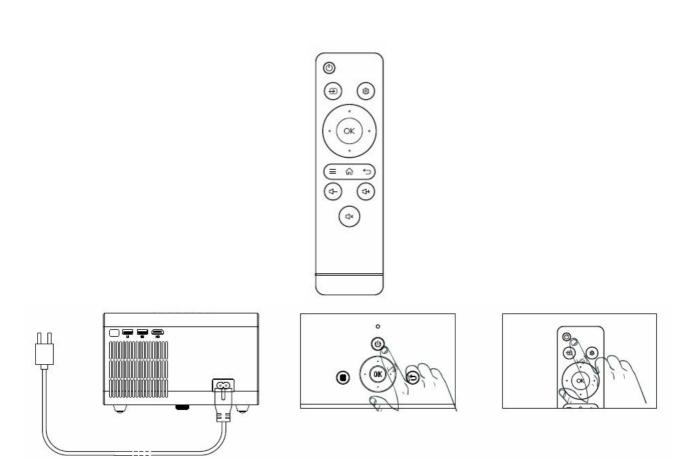
















	Picture mode
Ÿ	Brightness of light source
(1)	Color Temperature
\longleftrightarrow	Aspect Ratio
×	Projector Mode
Đ	Zoom 100%



Setting


A OSD Language	English
■ OSD Time	off
	B)
Restore Factory Defa	ult
! Version	
LED Temperature	100%

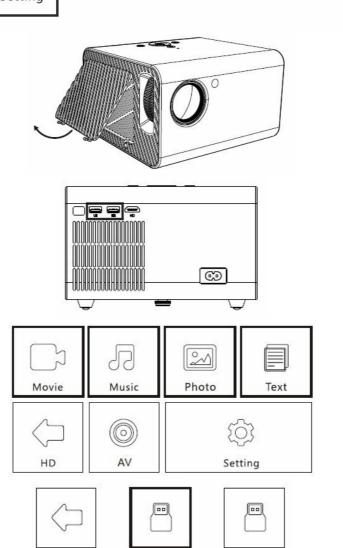

USB1

Return

USB2

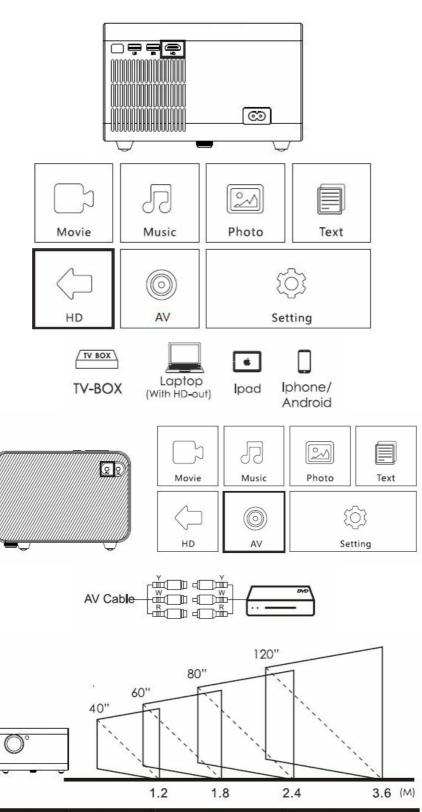

File	Format	Suffix	Decoding
Audio p l ay	Мр3	mp3	
	M4A	mp4	
Picture play	JPEG	.jpg	
	BMP	.bmp	
	PNG	.png	
Video play	MPEG1	.DAT\.MPG\.MPEG	\
	MPEG2	.MPG	1
	MPEG4	.AVI\.MP4	DIVX,XVID
	RM\RMVB	.RM\.RMVB	RV8, RV9, RV10
	H264	.MKV\.MOV	H.264
	MJPEG	.AVI	\
	DivX	.DIVX\.AVI	MPEG,DIVX,H264
	FLV	.FLV	H264

FREQUENTLY ASKED QUESTIONS

DOWNLOAD THE PDF LINK: <u>SWZA V509 Portable Projector User Manual</u>

Manuals+,