

Wizard 4 Wizard 4U Wireless AV and BYOD Content Sharing and Collaboration System



# Wizard 4 Wizard 4U Wireless AV and BYOD Content Sharing and Collaboration System User Manual

[Home](#) » [SY](#) » Wizard 4 Wizard 4U Wireless AV and BYOD Content Sharing and Collaboration System User Manual 

## Contents

- 1 Wizard 4 Wizard 4U Wireless AV and BYOD Content Sharing and Collaboration System
- 2 Product Information
- 3 Product Usage Instructions
- 4 Using this Product
- 5 Features
- 6 Package Contents
- 7 Connectors and Controls
- 8 Using this Product
- 9 Additional Options
- 10 Built-In Web Interface
- 11 Settings Page
- 12 Network settings – Ethernet
- 13 Display & Audio – HDMI
- 14 Display & Audio – Audio
- 15 System Settings – Date&Time
- 16 Firmware Upgrade – Firmware update
- 17 About Device – About Device
- 18 Specifications
- 19 Troubleshooting
- 20 Safety Instructions
- 21 After Sales Service
- 22 Documents / Resources
  - 22.1 References
- 23 Related Posts

# Wizard 4

Wizard 4 Wizard 4U Wireless AV and BYOD Content Sharing and Collaboration System



## Product Information

### Specifications

- **General:** Wireless AV & BYOD Content Sharing and Collaboration System
- **Environmental:** Designed for conferences and training rooms
- **Physical:** Supports BYOD devices such as Android, iPhone, and iPads

### Product Usage Instructions

#### Installation Precautions

This product is designed with special circuitry to protect against surges and static discharges. To ensure reliable operation:

- Avoid placing the unit near heat sources and provide adequate ventilation.
- Use shielded cables like cat6, cat6a, or cat7. Route cables away from noisy sources and AC mains cables.

### Using this Product

#### • Required Connections

Connect the Wizard 4 or Wizard 4U to your display device using the appropriate cables.

#### • Optional Connections

You can connect additional devices to the Wizard for more input sources.

- **The Home Screen**

The home screen provides options for selecting input sources and managing display settings.

- **SY Wands**

Pair the wireless wands with the Wizard device before using them to connect HDMI or USB-C sources.

## **BUILT-IN WEB INTERFACE**

Access the web interface for advanced settings and configurations.

## **FAQ**

- **How many wireless sources can connect to the Wizard 4 or Wizard 4U?**

A maximum of sixteen wireless sources can connect to the device.

- **How many input signals can be displayed on the screen simultaneously?**

Up to four input signals can be viewed on the display at a time.

## **Wizard 4**

Wizard 4U

User Manual

## **Wireless AV & BYOD Content Sharing and Collaboration System**

- Wireless media presentation system supporting BYOD for use in conferences and training rooms
- SY Electronics Ltd., 7 Worrall Street, Manchester, M5 4TH, United Kingdom **Tel:** +44 (0)161 868 3450 – **Web:** [sy.uk](http://sy.uk)

## **Thank you for purchasing this product**

This product is designed with the professional AV installers in mind. The many extensive features assist in system integration, validation and maintenance.

## **Installation precautions**

- This product has special circuitry to protect it against moderate surges and static discharges. However, to ensure reliable operation and long service life, it is important to take the necessary precautions against any spikes, surges and static discharges.
- Place the unit away from heat sources and allow adequate ventilation.
- Shielded cable and in particular cat6, cat6a or cat7 is highly recommended. As much as possible cables should be routed away from any noisy sources and avoiding long runs in close proximity to AC mains cables.

The Wizard 4 and Wizard 4U are BYOD wireless/LAN presentation system designed for use where sharing and collaboration is required, such as in conferences or training rooms. Attendees can bring their own devices and connect to the Wizard device and have their image displayed. BYOD devices include Android and iPhone smart phones, and iPads.

There are two wireless wands, SY-WAND-H and SY-WAND-U, which allow wireless connections of either an HDMI source or a USB-C source as inputs to the Wizard device. These Wands must first be paired with the respective Wizard device before use.

A maximum of sixteen wireless sources can connect to the Wizard 4 or Wizard 4U but only a maximum of four can be viewed on the display, a sidebar menu allows the selection of which input signals can be displayed. The first four wireless/LAN signals that arrive are automatically assigned to the display windows and to the sidebar menu, subsequent signals are added to the sidebar menu. A mouse will be required to select the additional inputs.

## Features

- Pure wireless presentation experience
- Bring Your Own Device (BYOD), no messy or unsightly cables
- Connect USB devices such as cameras, microphones, or speakers
- Fully compatible with mainstream VC platforms such as Zoom, WebEx, etc.
- Wireless content up to 1080p60
- Output HDMI 2.0 signals up to 4K60 4:4:4
- Supports native wireless mirroring protocols such as Airplay, Miracast, Chromecast
- Wireless dongles for HDMI sources and USB-C video
- PoE support on LAN port 2 only
- RS232 control
- Built-in WebGUI for configuration and moderator control

## Package Contents

### Wizard 4

- 1x Wizard 4
- 2x Wi-Fi antennas
- 1x 12V DC PSU
- 1x Manual

### Wizard 4U

- 1x Wizard 4U
- 3x Wi-Fi antennas
- 1x 12V DC PSU
- 1x Manual


## Connectors and Controls

### Front

#### Wizard 4




#### Wizard 4U

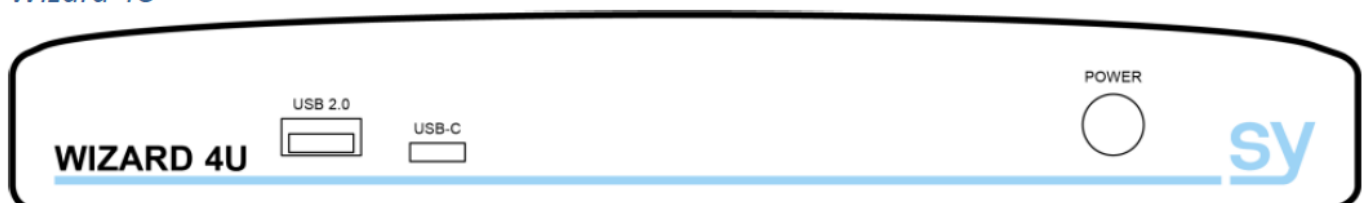

Name	Description
USB 2.0	USB 2.0 port for USB devices
USB-C	USB-C port for USB-C devices
POWER	Power switch


Rear

Wizard 4

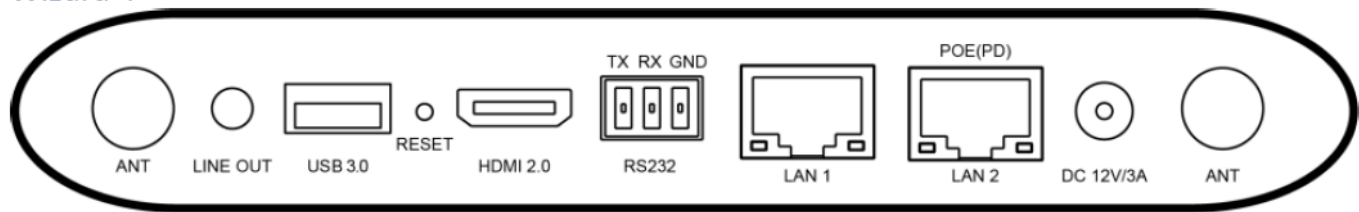

Name	Description
ANT	Wi-Fi antenna connection
LINE OUT	Audio output
USB 3.0	USB 3.0 Type A port
RESET	Reset button (recessed)
HDMI 2.0	HDMI output to display
RS232	RS232 control port
LAN 1	LAN port 1
LAN 2	LAN port 2 with PoE support
DC 12V/3A	PSU input
ANT	Wi-Fi antenna connection

Wizard 4U

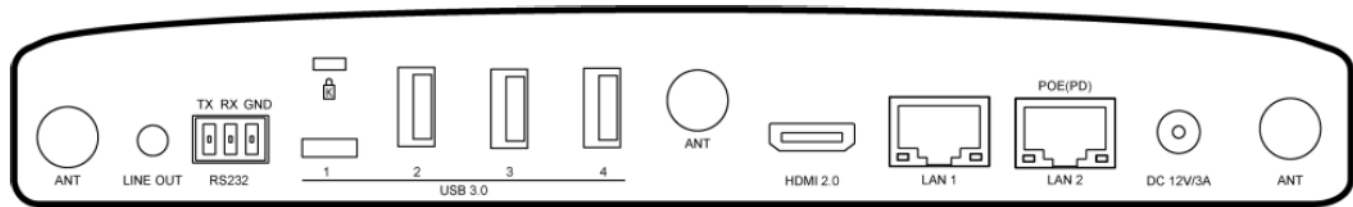

Name	Description
ANT	Wi-Fi antenna connection
LINE OUT	Audio output
RS232	RS232 control port
K	Slot for Kensington lock
USB 3.0 Port 1	USB 3.0 Type C port
USB 3.0 Ports 2~4	USB 3.0 Type A ports
ANT	Wi-Fi antenna connection
HDMI 2.0	HDMI output to display
LAN 1	LAN port 1
LAN 2	LAN port 2 with PoE support
DC 12V/3A	PSU input
ANT	Wi-Fi antenna connection

### Top SY Decal

On the top of the Wizard 4 and the Wizard 4U is an SY decal that lights with different colours depending on the status of the unit:

Decal Colour	Description – The Wizard device is:
Off	Not powered up
Flashing Red	Booting after being powered up
Solid Red	In stand-by mode, press the POWER button to activate the Wizard unit
Green	Not connected to any input source
Blue	Connected to at least one input source

## Using this Product

### 1. Required connections

1. Connect a display device to the HDMI output.
2. Attach the antennas to the rear of the Wizard unit.
3. Connect the 12V DC PSU to the PSU input port.

### 2. Optional connections

1. Connect a LAN cable to either or both the LAN ports.
2. Connect an RS232 cable to the 3-way RS232 connector.
3. Connect a 3.5mm stereo jack connector to the audio output.
4. Attach any USB devices, such as a mouse to access to the on-screen menu system.

### The Home Screen

The Home screen is always displayed when there are no input sources, or when all active input sources have

been stopped from the sidebar menu.



### The Home screen provides the following information:

- The device ID: Wizard 4 or Wizard 4U
- The current password for BYOD sources, this may change depending on the setting on the 'Auto change password' option in the 'Network setting' tab of the built-in WebGUI.
- The current time – Configured on the 'Date & Time' settings in the 'System Settings' tab of the built-in WebGUI.
- The upper half of the middle section shows how to connect casting devices to the Wizard.
- The lower half of the middle section shows how to connect laptops and PCs to the Wizard using one of the two SY Wand units.
- The bottom shows the WiFi IP address of the Wizard unit and the LAN IP address for LAN port 1 and LAN port 2 respectively. N/A indicates that the IP address for that port is Not Available. This will be different if DHCP is enabled.

## Additional Options

### SY Wands

- **SY-WAND-H** HDMI wireless wand to connect an HDMI source to the Wizard device. A USB port is required to power the SY-WAND-H.
- **SY-WAND-C** USB-C wireless wand to connect a USB-C video source to the Wizard device. Power is taken from the USB-C output port.

### Pairing with the Wand

To use either of these Wands, it must first be paired with the same Wizard device it is being used with. To perform the Wand pairing do the following:

1. Plug the SY-WAND-H into the USB-A port, or the SY-WAND-C into the USB-C port on the front of the Wizard

device.

2. Wait for the pairing process to complete and then unplug the wand and connect it to the source device. The SY-WAND-H requires a separate USB-A port act as its power supply source.
3. Wait for the indicator on the Wand to stop flashing and then touch the wand to begin sending the video to the Wizard device.

Once paired, the Wand will always connect to the same Wizard device. Pairing will need to be repeated should the Wand need to work with a different Wizard device.

### On-Screen drawing and Whiteboard Modes


These are two separate features of the Wizard

### Streaming from PC, Laptop, or Android

- Use the Built-In Web Interface to download the WirelessMedia app appropriate to your system. Run the downloaded app to install WirelessMedia on your computer system.
- The WirelessMedia app will stream a secondary video display to the Wizard device using either WiFi or LAN connections. This will allow you to continue using your primary display.
- **Note** that any IP addresses shown in this section are examples only, the IP of your Wizard device will be shown instead.
- Open the WirelessMedia app from the WirelessMedia icon:



- The app will then search for and list all Wizard devices that are visible to the PC, laptop, or Android device:

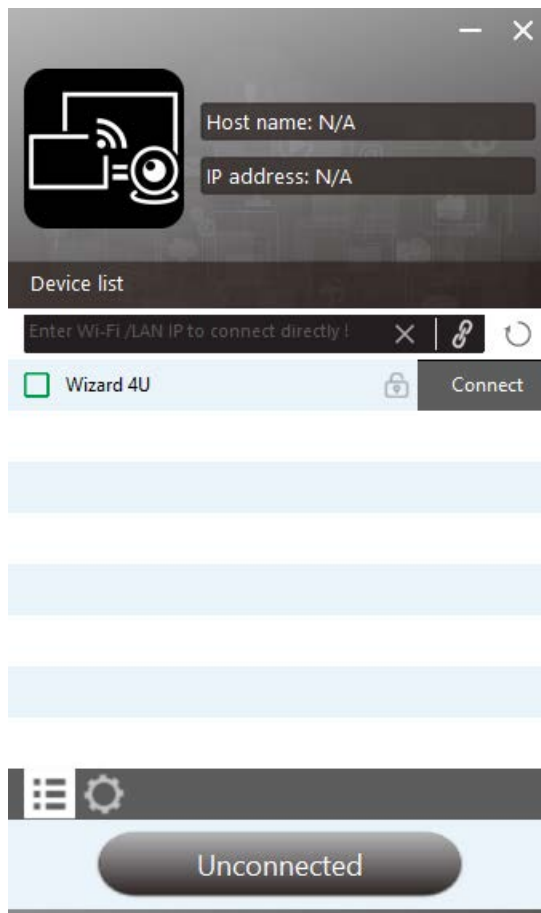



- Click the Connect button to the right of the Wizard device and the password enter window will appear:



- Enter the eight-digit password as displayed on the Home page of the Wizard unit, including any leading zeros. Click OK to complete the connection.
- If you are prompted to download a newer version of the WirelessMedia app, use the Built-In Web Interface to obtain the latest version appropriate to your computer system.
- Once connected, the following screen will appear:







- When you are ready to being sharing your screen, click on the Ready to share button. The screen will now change to:




- Click the Sharing button to stop sharing with the Wizard unit.

**Above the Sharing button is a row of icons:**

	Display a list of detected Wizard devices
	Settings – see below
	Toggle between split screen and full screen.
	

### Settings


Selecting the settings icon will display the available optional settings:

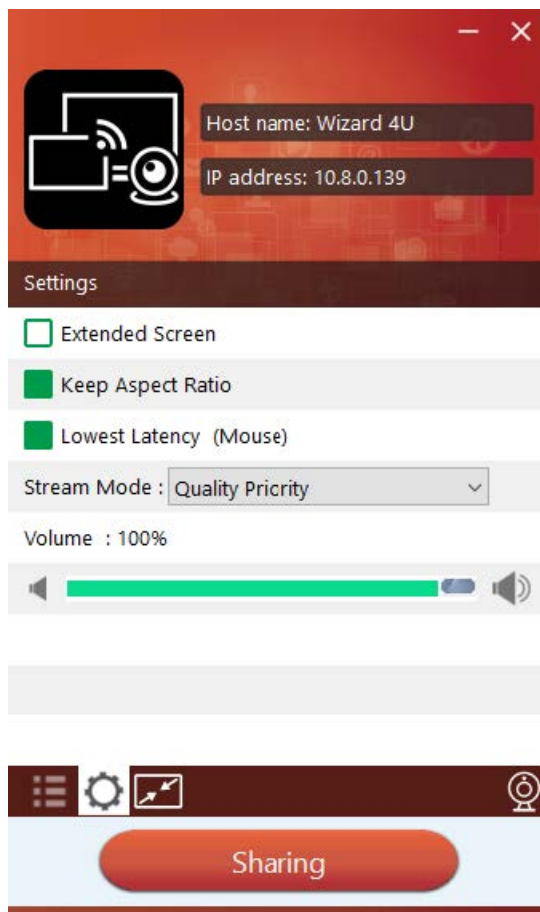

Any active item is indicated by a filled green box.

Setting	Default State	Description
Extended Screen	Off	Toggle between streaming the secondary (desktop extend) or primary display
Keep Aspect Ratio	On	Toggle between maintaining the aspect ratio of the streamed display or stretching the image to fit.
Lowest Latency (mouse)	On	Change the mouse latency, lowest when enabled.
Stream Mode	Quality Priority	Select between Fluency Priority and Quality Priority. This setting will depend on the quality of the network connection.
Volume	100%	Set the output volume level for any sounds sent from the computer.




Click the  button in the top right corner to close the WirelessMedia app. A confirmation box will appear, click the Yes button to end the session.


## Built-In Web Interface

The Wizard 4 and Wizard 4U devices have a built-in Web GUI interface for changing the setting and configuration of the Wizard unit. Use the Home screen to get the IP address for the

LAN port you wish to use and the download page will appear:

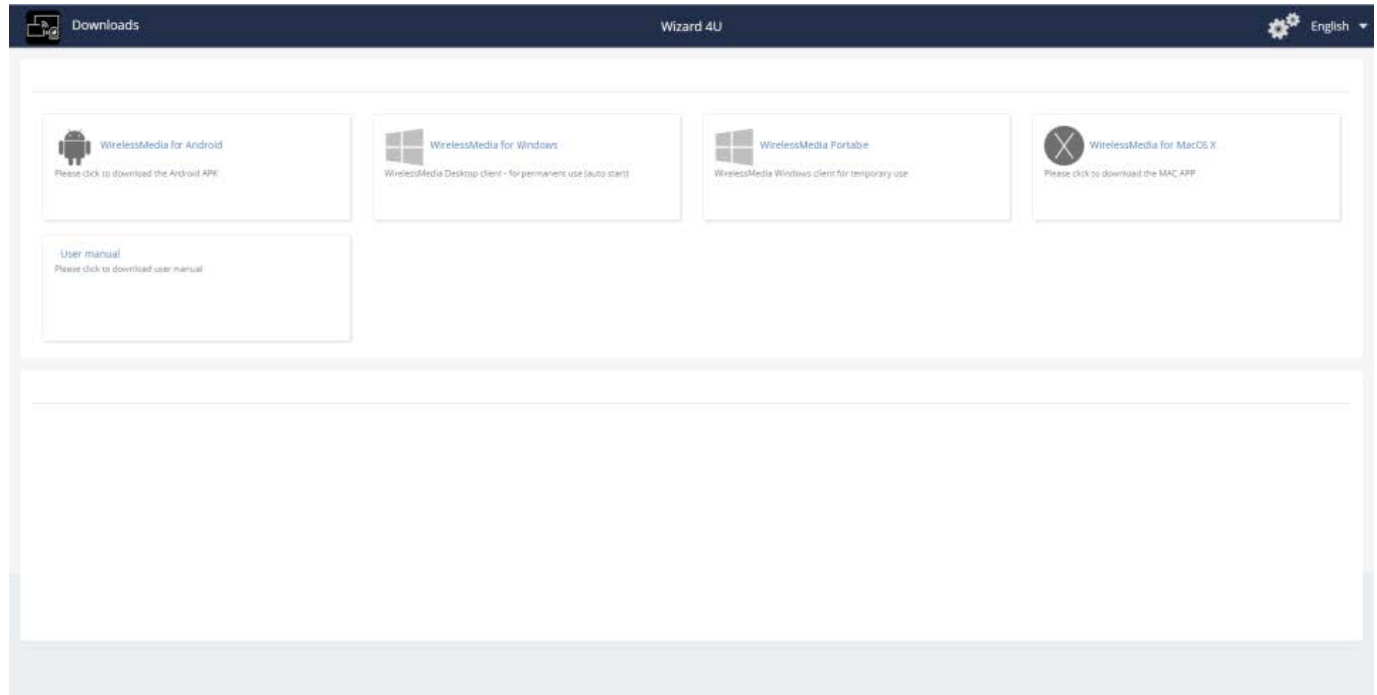


- This page provides several buttons to download the Wizard streaming software package for various platforms and for accessing the User Manual.
- To access the configurations settings pages, click on the twin gear icon at the top right and the login page will appear:

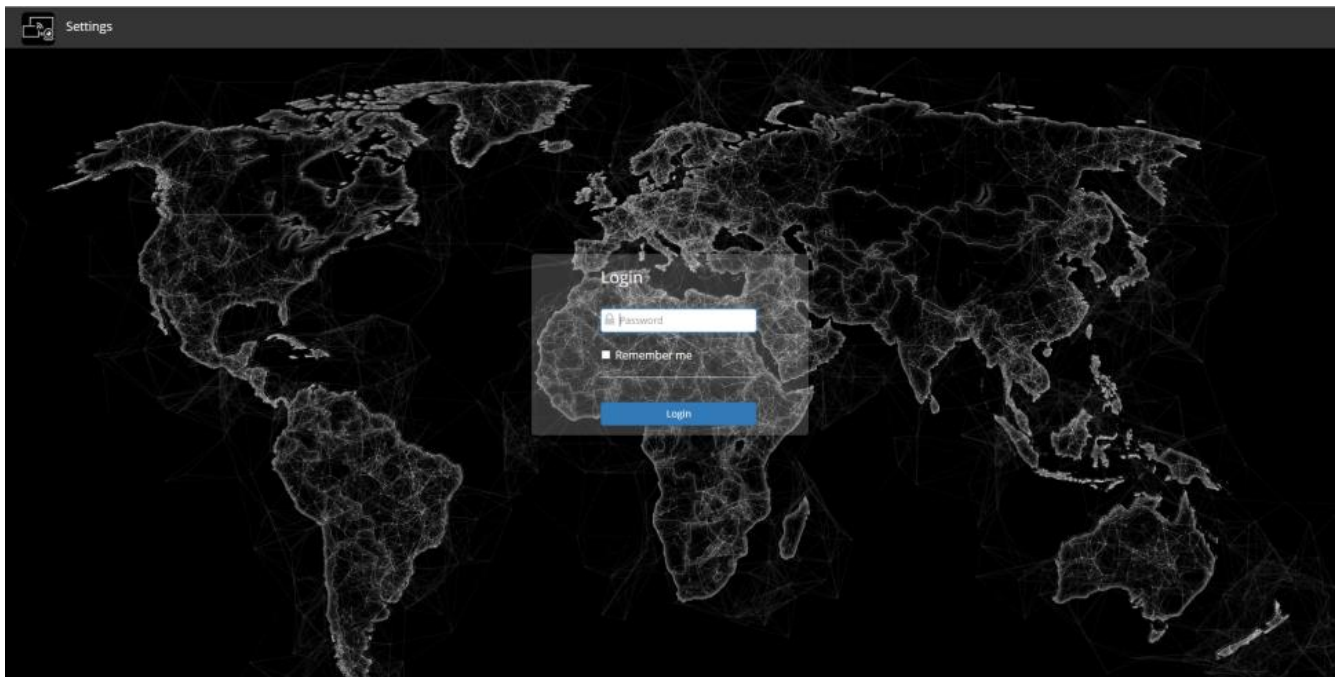

- Enter the current password and click the Login button.
- The default login password is: admin

## Settings Page

After entering the password the Settings page will appear with the Network settings tab already opened to the Wireless network section.

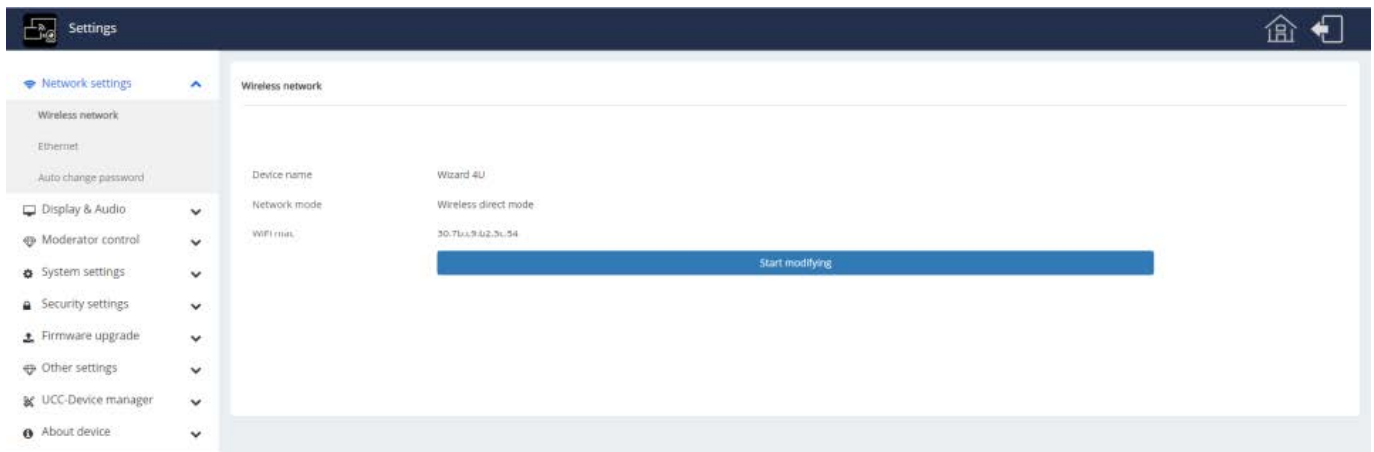

The sidebar menu selects the respective settings page, each detailed in the following sections. Any settings already in progress will not be lost if a different page is selected.


## Navigation Icons

- The two icons on the right of the top bar are:
  - Home – Return to the Downloads page, select the twin gears to return to the above Network settings page.
  - Logout – Return to the login page.


## Network settings – Wireless Settings

The Start Modifying button will initiate a four step process to change the settings for the wireless network identify of the Wizard device:


1. Device Name – Enter a new device name to clearly identify the Wizard device on the wireless network.

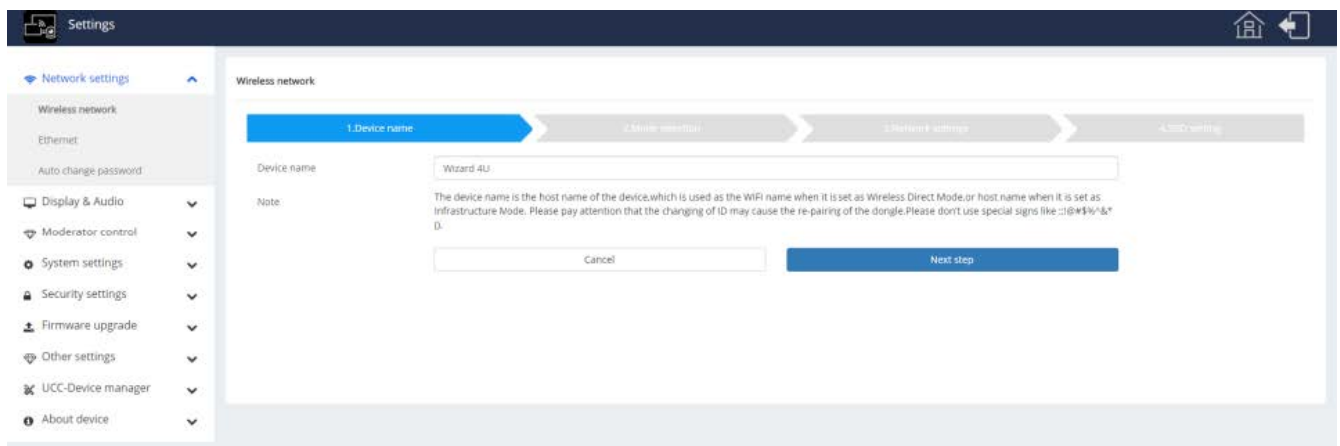

1. Click Next step to go to step 2.
2. Click Cancel to abort this settings mode.
2. Mode selection – Choose one of the wireless operating modes.

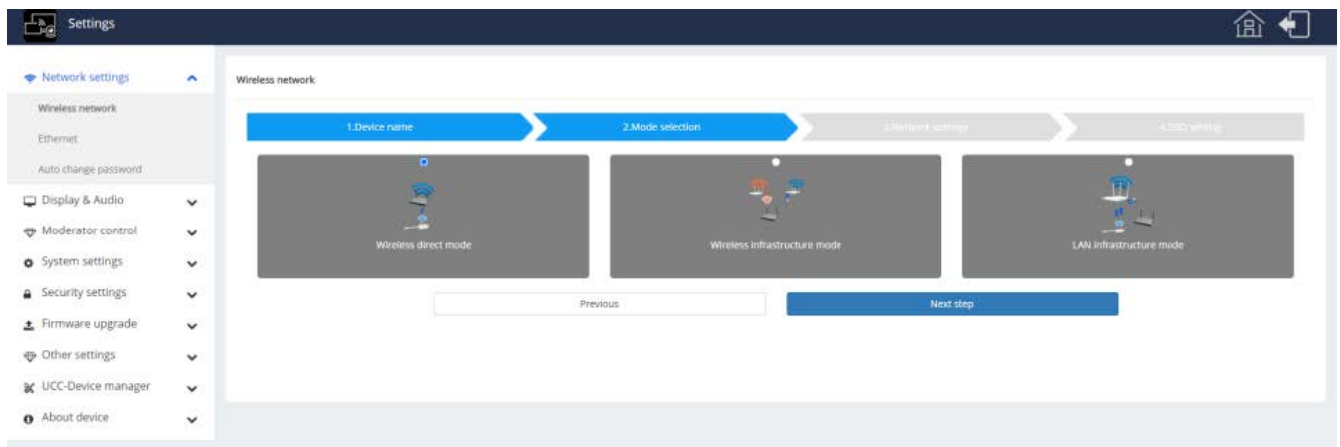


1. Click Next step to go to step 3.
2. Click Previous to go back to step 1.
3. Network settings – Choose one of the options for the internet access mode.

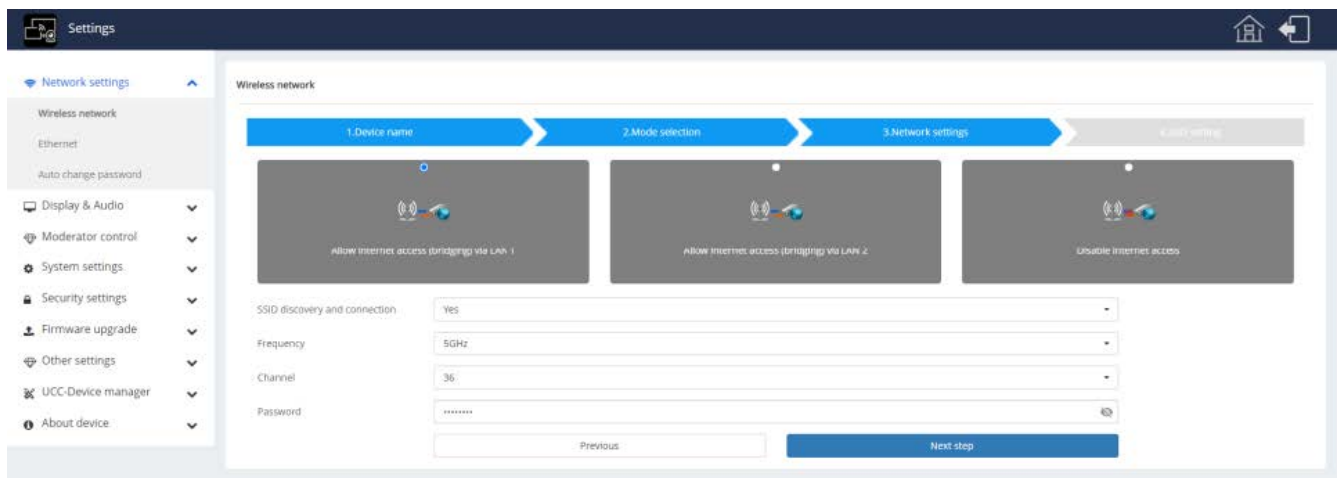

**The dropdown boxes have the following settings:**

1. SSIS Discovery and connection Yes or No Default is Yes
2. Frequency 2.4GHz or 5GHz Default is 5GHz
3. Channel 36, 40, 44, 48, 149, 153, 157, 161 Default is 36
4. Password This is the same as shown on the HDMI Home page
5. Click Next step to go to step 4.
6. Click Previous to go back to step 2.
4. SSID setting – If needed, enter the GUEST and/or STAFF network SSID.

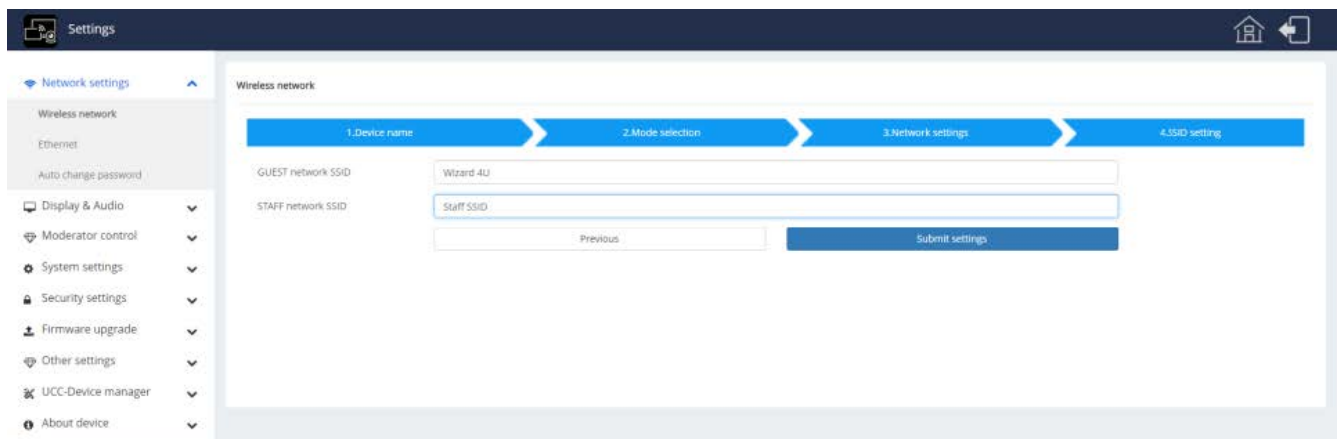

1. Click Submit setting to confirm any changes made.
2. Click Previous to go back to step 3.

**Network settings – Ethernet**

Select LAN 1 or LAN 2 from the top tab selectors as desired:

The screenshot shows the 'Network settings' page for LAN1. The sidebar on the left lists various settings categories, with 'Network settings' currently selected. The main content area has two tabs, 'LAN1' and 'LAN2', with 'LAN1' being the active tab. Below the tabs, there are several configuration fields: 'DHCP' is set to 'Enable'; 'IP address' is '10.8.0.139'; 'Mask' is '255.0.0.0'; 'Gateway' is '10.8.0.1'; 'DNS1' is '8.8.8.8'; 'DNS2' is '8.8.4.4'; and 'MAC' is '2E:31:6D:00:32:D9'. A blue 'Confirm settings' button is located at the bottom of the configuration area.

- DHCP – select Enable or Disable as needed. When DHCP is set as Enable, the remaining edit boxes are not usable.
- IP Address – Set the static IP address for the Wizard LAN port.
- Mask – Set the network subnet mask for the Wizard LAN port.
- Gateway – Set the IP address of the default Gateway device.
- DNS1 – Set the IP address for the first domain name server.
- DNS2 – Set the IP address for the second domain name server.
- MAC – The MAC address of the Wizard device, this cannot be changed.

Click the Confirm settings button to set the changes into the Wizard device.

### Network settings – Auto change password


This is the access password for wireless BYOD devices, to change the login password see\_. This page sets how often this password is changed from one of the following: Never, 5 minutes, 30 minutes, 1 hour, 2 hour, 4 hour, or 24 hour. The interval chosen will take effect immediately and will be acknowledged by a green Success banner at the bottom of the browser window.

The screenshot shows the 'Auto change password' page. The sidebar on the left is the same as in the previous screenshot, with 'Network settings' selected. The main content area has a single tab labeled 'Auto change password'. Below the tab, there is a dropdown menu for 'Auto change password' which is currently set to 'Never'.

## Display & Audio – HDMI


### HDMI Resolution

- Select the desired output resolution, or Auto to allow the Wizard to automatically choose the best output resolution for the display device. The selected option will take effect immediately and will be acknowledged by a green Success banner at the bottom of the browser window.

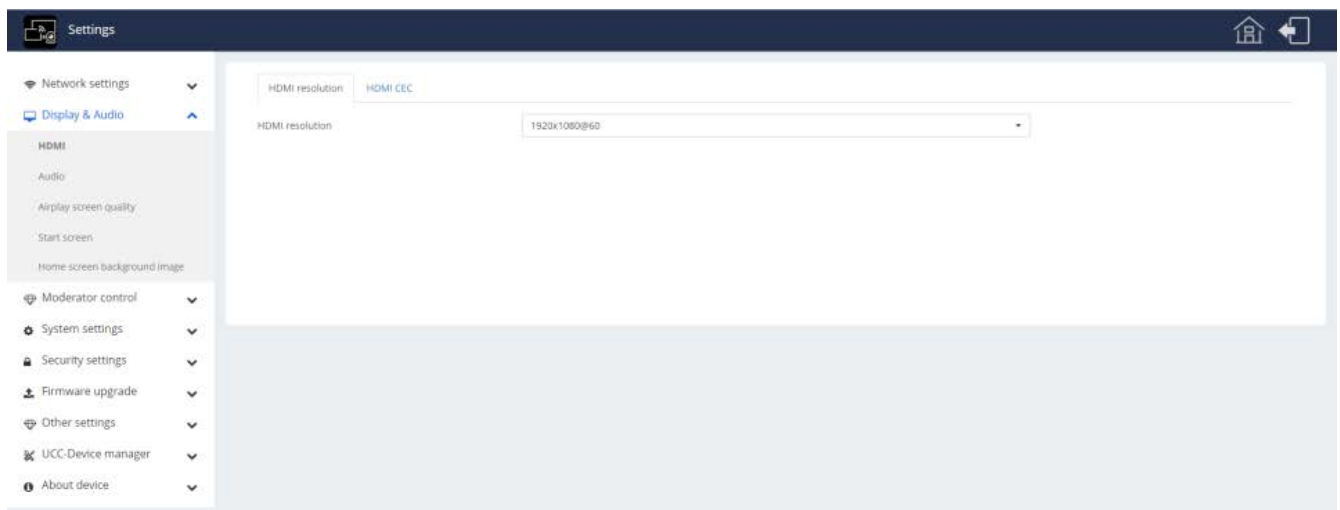

- Only resolutions that the connected HDMI display device supports will be listed

## HDMI CEC

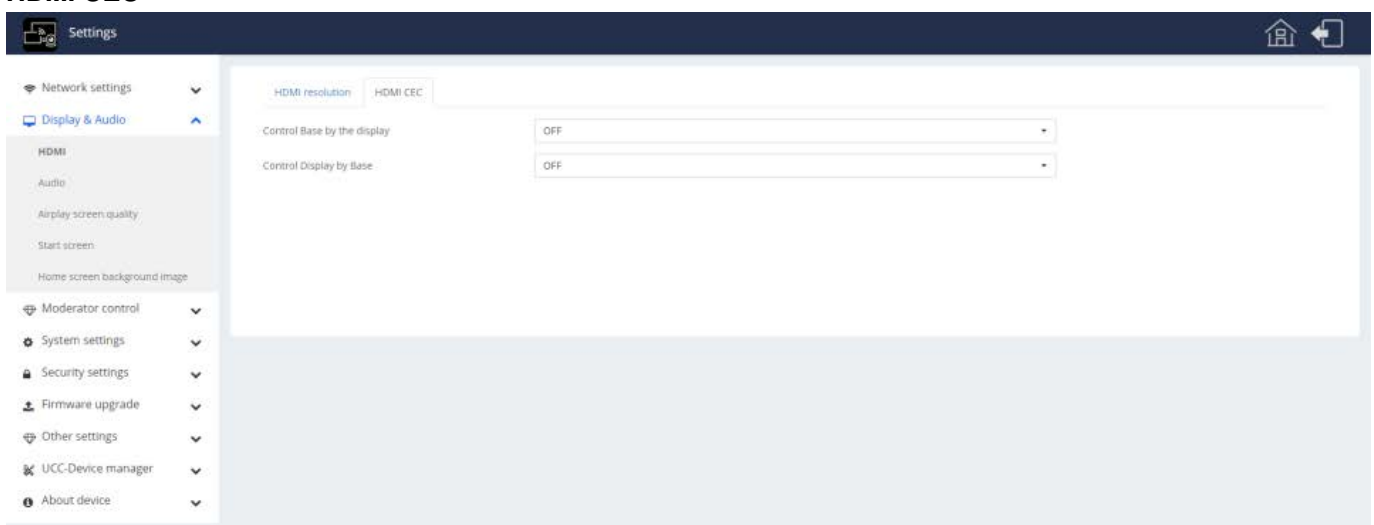


This page sets the CEC power mode options:

- **Control Base by the Display**
  - ON – when the CEC enabled display device is turned off the Wizard will also turn off
  - OFF – turning of the CEC enabled display device will not turn off the Wizard device.
- **Control Display Base by Base**
  - ON – when Wizard device turns off it will also turn off the CEC enabled display device.
  - OFF –the Wizard device will not turn off the display device.

The default state is with both options set to OFF.


## Display & Audio – Audio

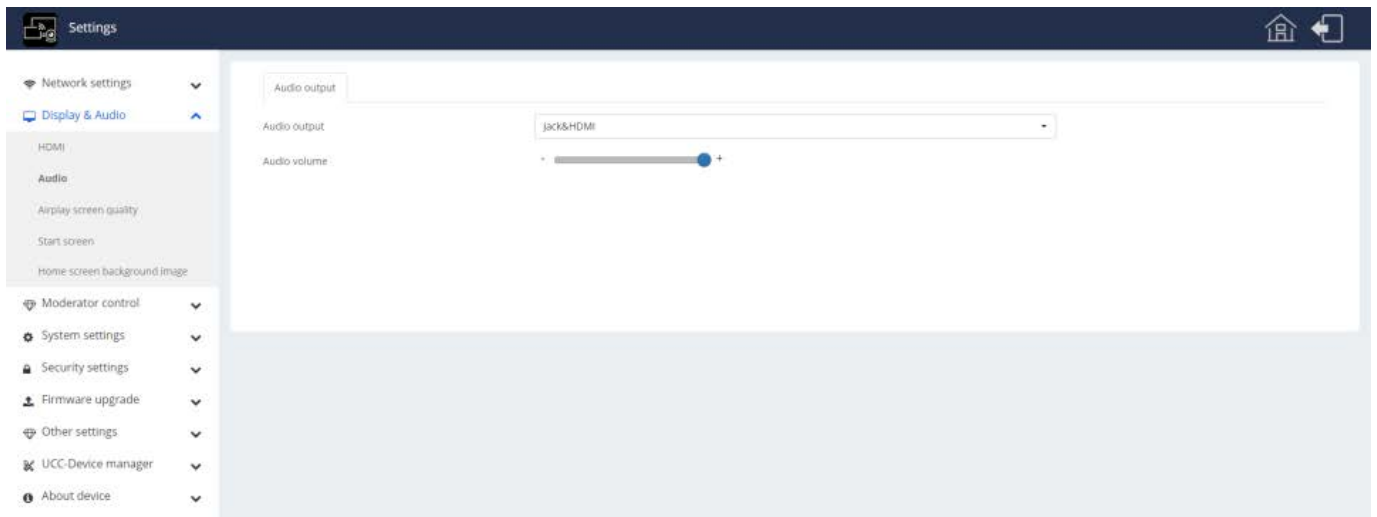

From the dropdown list, select where the audio is to be output:

- Jack – this is the LINE OUT analogue audio output on the rear of the Wizard device. In this mode there is no HDMI audio to the display device.
- HDMI – the HDMI output carries the audio. In this mode there is no analogue audio on the LINE OUT connector.
- Jack&HDMI – Both the HDMI output and the LINE OUT carry the audio signal.
- USB – This will only appear if USB speakers are connected to the Wizard device. In this mode the audio signal is sent only to the USDB speakers.
- The audio volume slider sets the maximum output volume level for the Wizard device.


### Display & Audio – Airplay screen quality

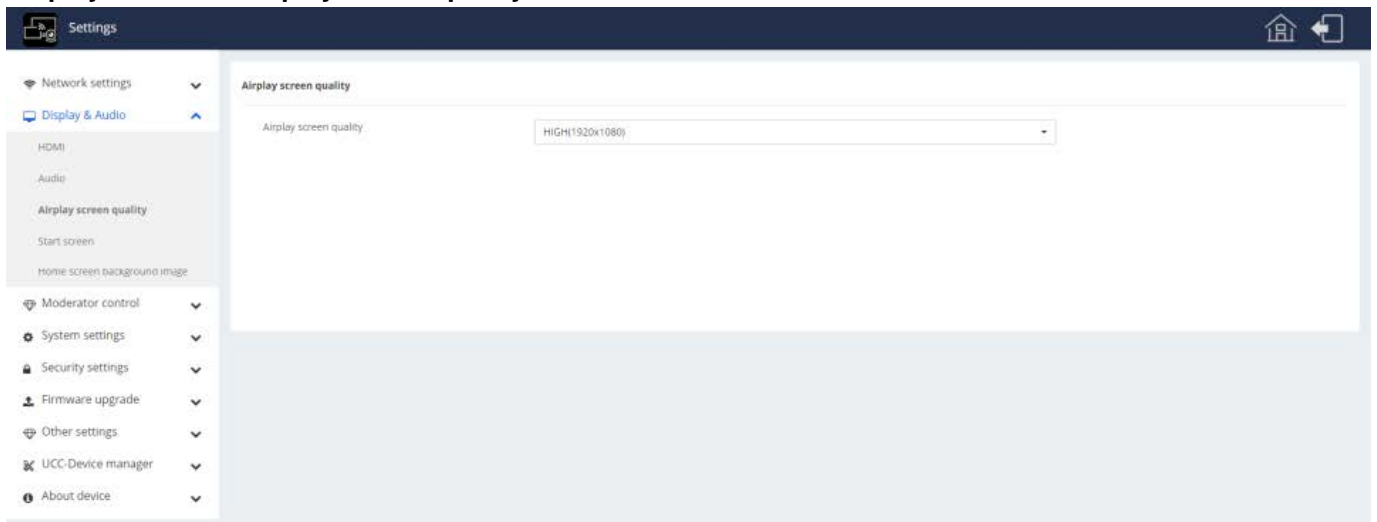

- **Select the resolution for Apple AirPlay signals:**
  - HIGH 1920×1080
  - MEDIUM 1600×900
  - LOW 1280×720
- The selected option will take effect immediately and will be acknowledged by a green Success banner at the bottom of the browser window.


### Display & Audio – Start screen



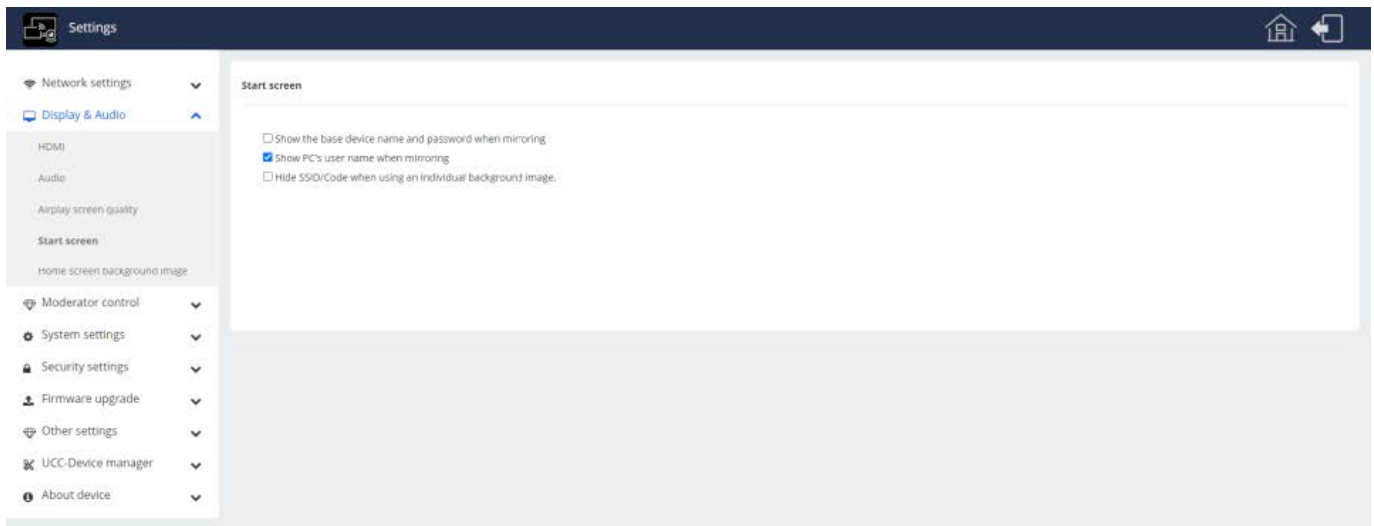

These options select what information is displayed on the Home, or Start, screen of the Wizard device.


## Display & Audio – Home screen background image

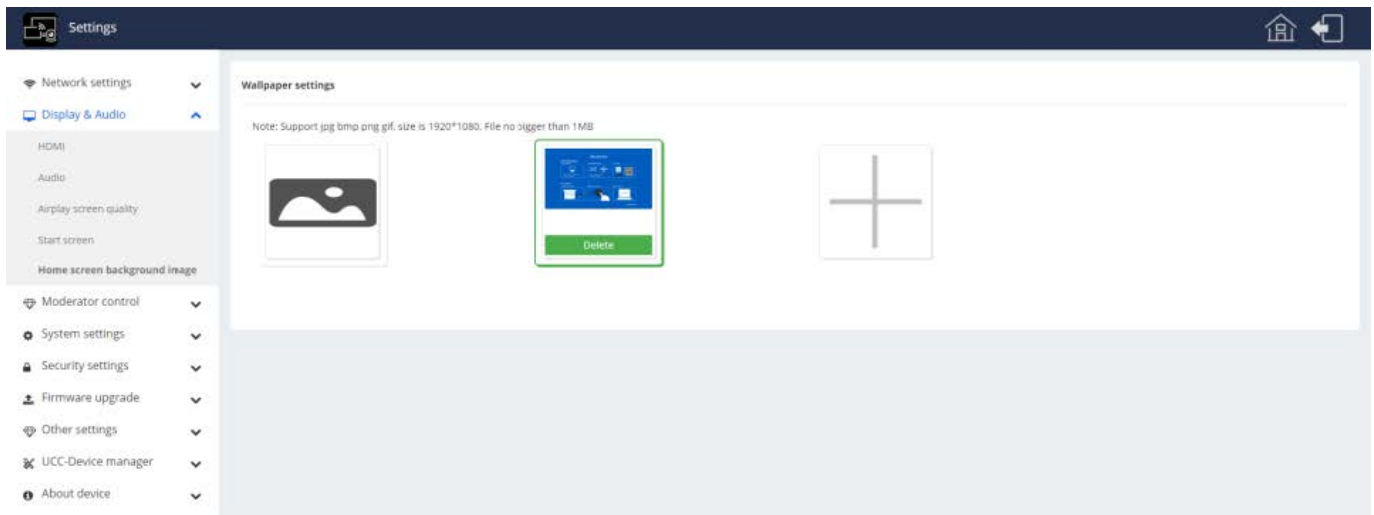

- The left icon opens a file browser to choose a new image for the Home screen.
- The middle icon(s) allow the deletion of existing images.
- The large + icon allow more images to be loaded.

## Moderator control – Moderator control

The Moderator control section controls the appearance of the sidebar menu on the HDMI display:

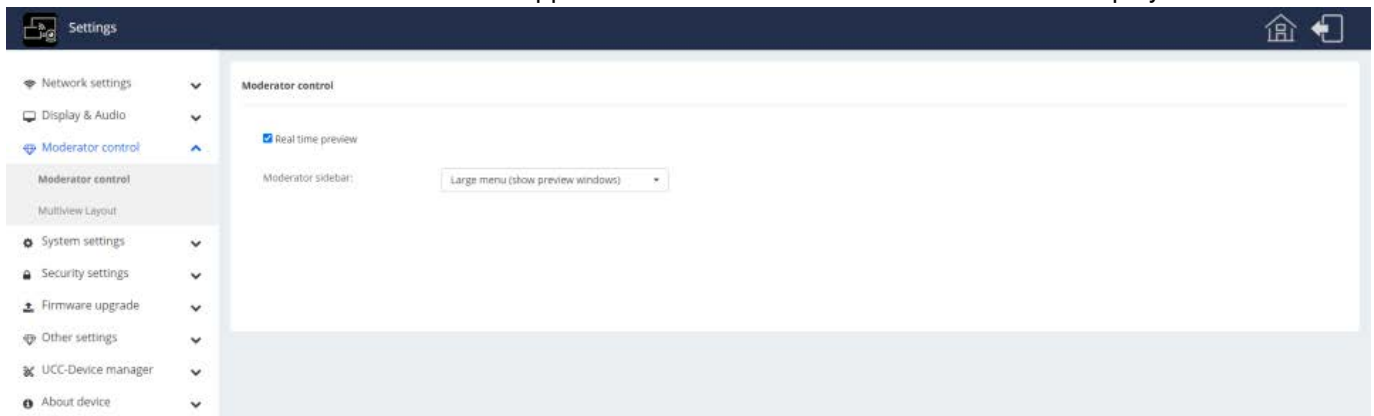


To use the moderator options a mouse must be connected to the Wizard unit to access the sidebar to select which preview images in the HDMI output sidebar list are presented to the display. A maximum of four images are allowed at any time.

## The options are:

- Hide side bar completely (including arrow)
- Small menu (no preview windows)
- Large menu (show preview windows)


## Moderator control – Multiview Layout

Select one of the 11 multiview layout views for the HDMI output:

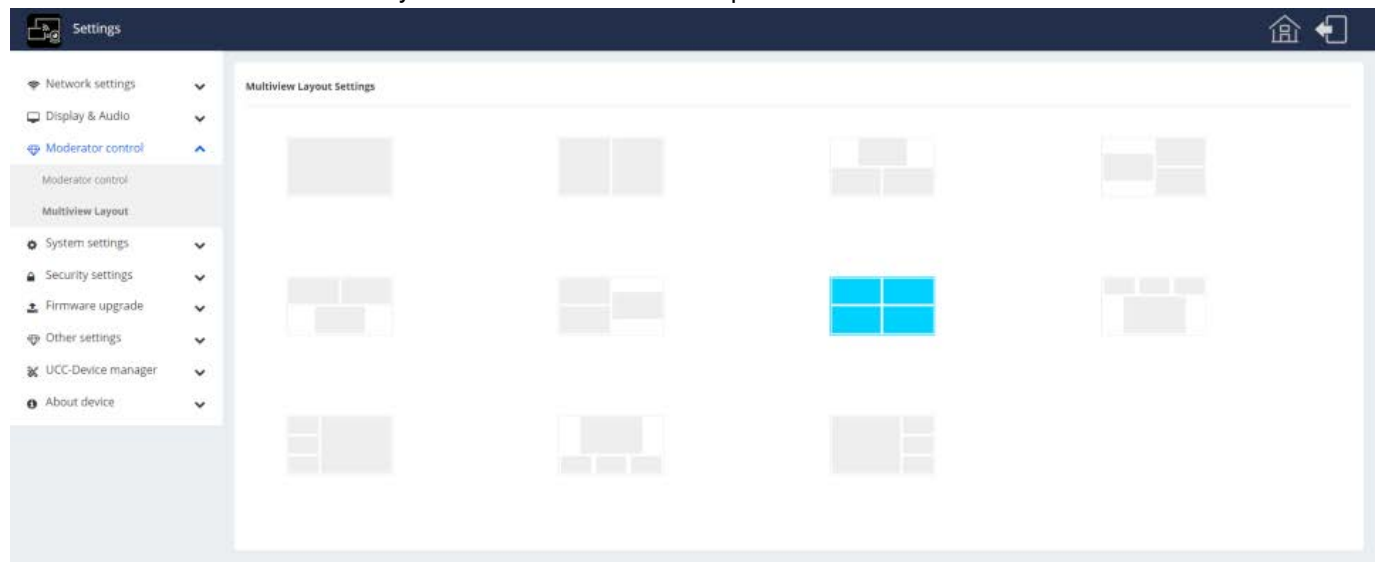


## System settings – Buttons

- The Connected and Paired tabs show the details of the currently Connected SY Wand units (Buttons) and the history of any SY Wand units that were previously used with the Wizard device. Note that the actual details given will differ for each installation.

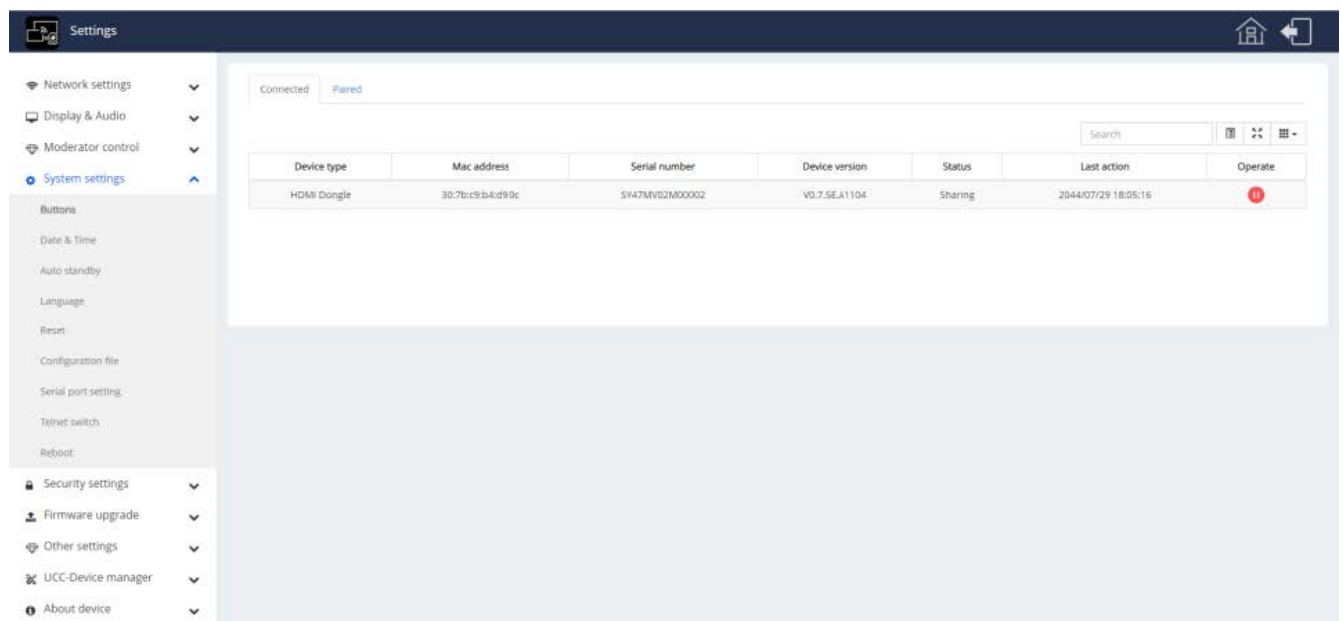

- The Operate column shows a red Pause icon for active SY Wands and a green play icon for SY Wands that are not currently sending to the Wizard unit. Click on the respective icon to change the state of the selected SY Wand.

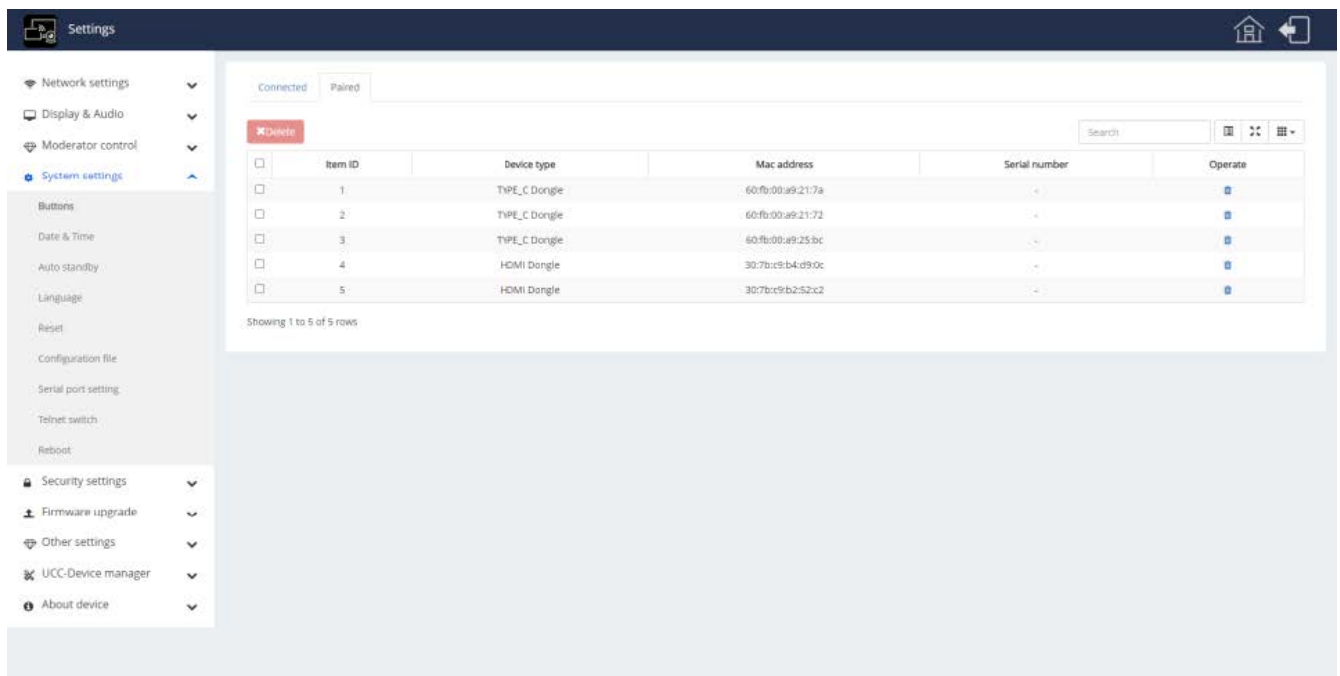


- This is a list of any SY Wand that was paired with the Wizard unit at any time in the past. To remove items from the list either use the left side check boxes to select the item to remove and then click the red Delete button, or click on the Trash bin icon to remove an individual item. Be careful when using this last option as the entries are immediately deleted with no confirmation window.

## System Settings – Date&Time


The Date and Time tab has one dropdown box with the following options:

### Automatic date & time


- Use network-provided time
- Off
- Click the Confirm settings button to accept the new option.

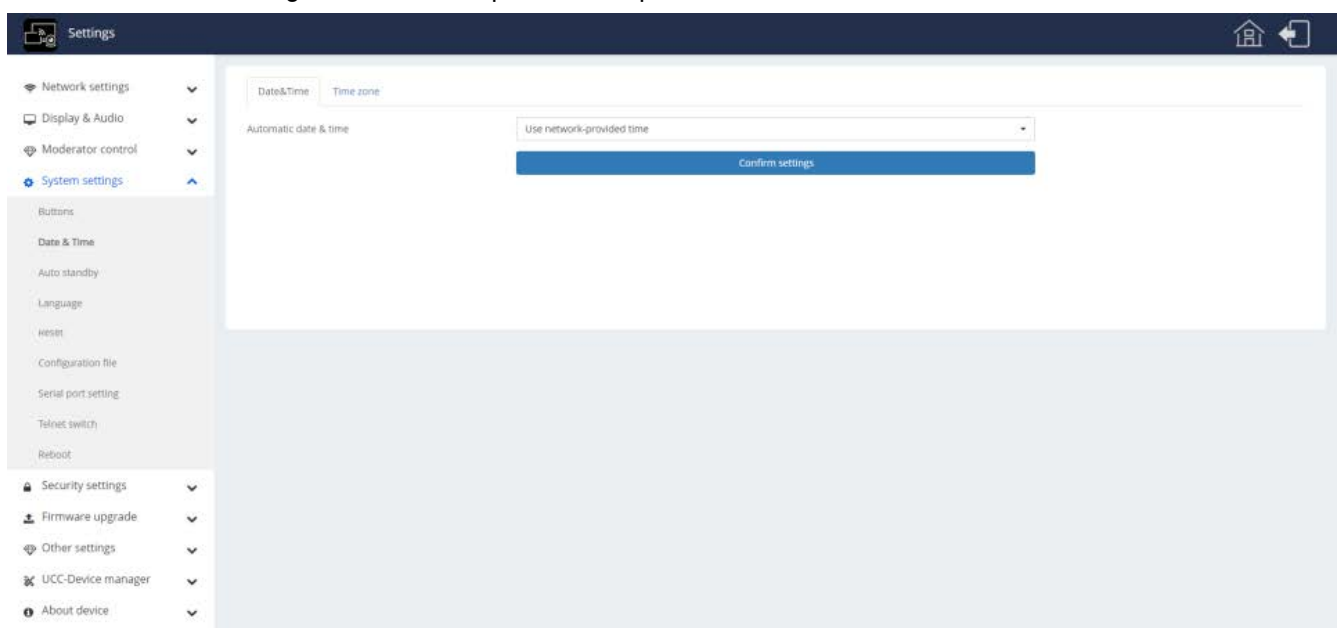


- When the Automatic date & time of set to Off, the following screen will appear:

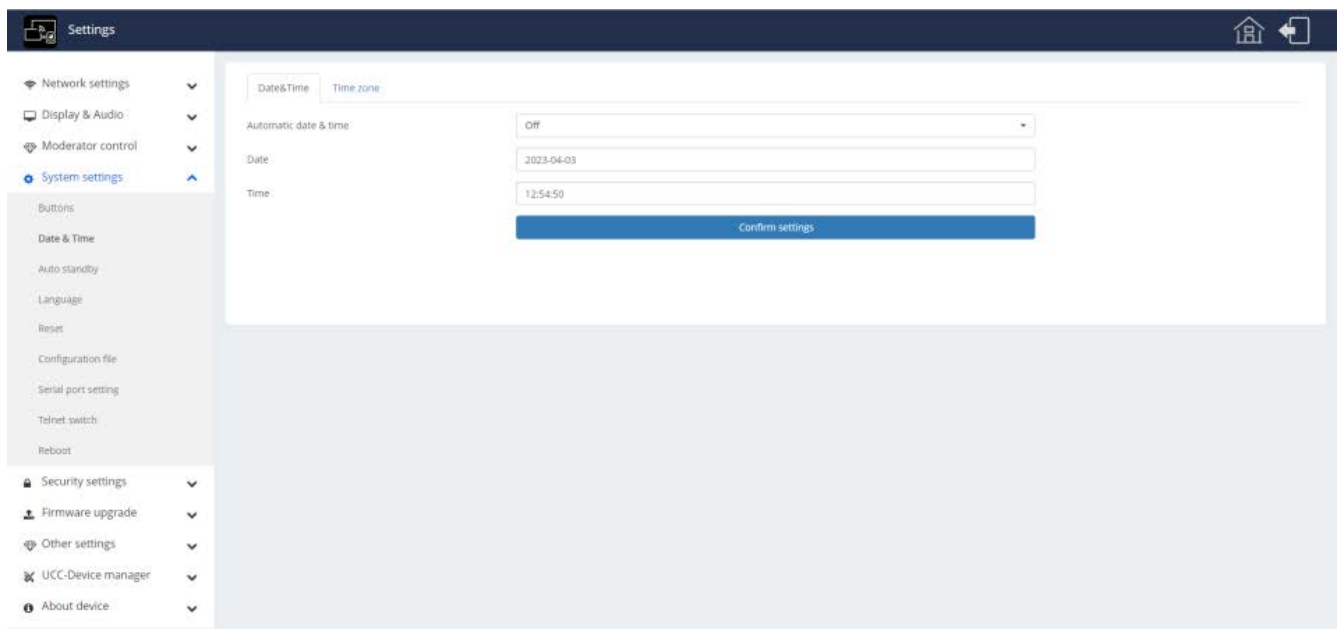

- Enter the date and time in the respective boxes. To aid in entering the date and time values, a selection pop-up will appear below the respective edit box:

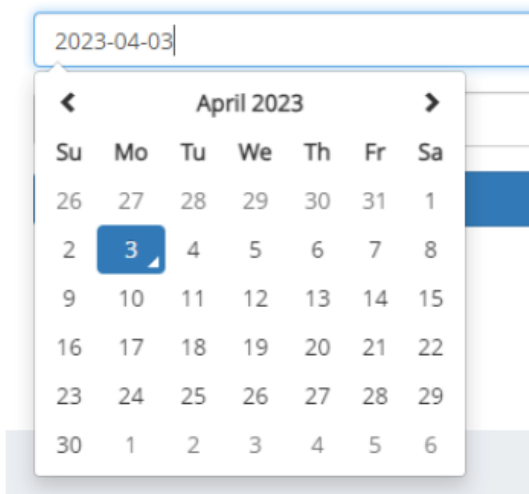


### The date picker

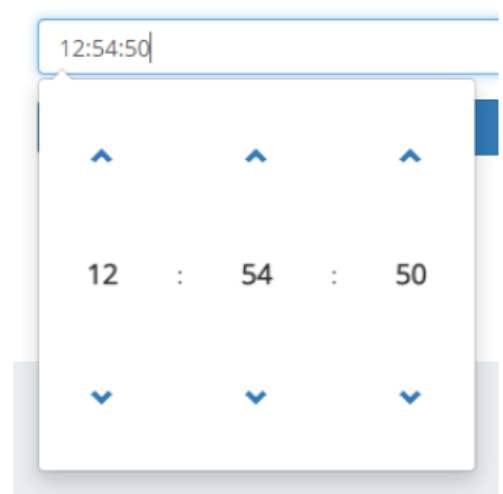


### The time selector

- As shown above, the date format is entered in ISO 8601 format: YYYY-MM-DD.
- For the time selector panel, note that the seconds will wrap over to the minutes, and the minutes will wrap over to the hours.
- The Time Zone tab is used to adjust the time and date display to your locale. Select your time zone from the dropdown list:

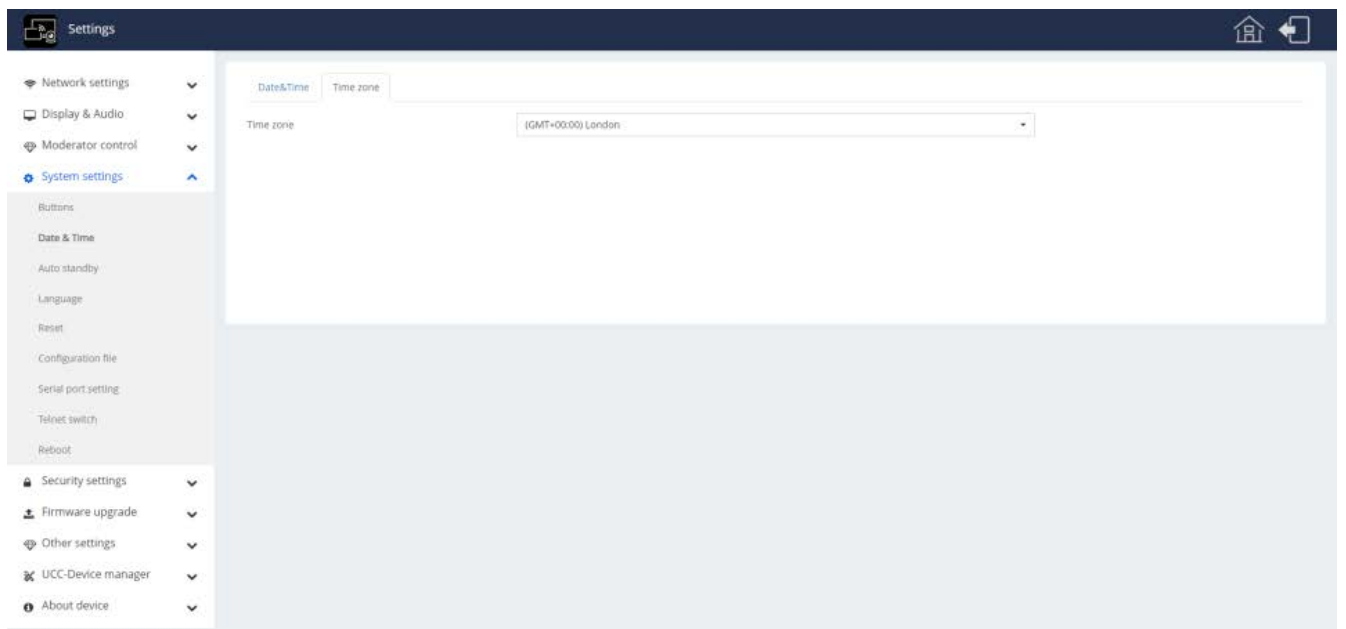


## System Settings – Auto standby

This page is used to set the duration of inactivity after which the Wizard will automatically enter its standby mode.

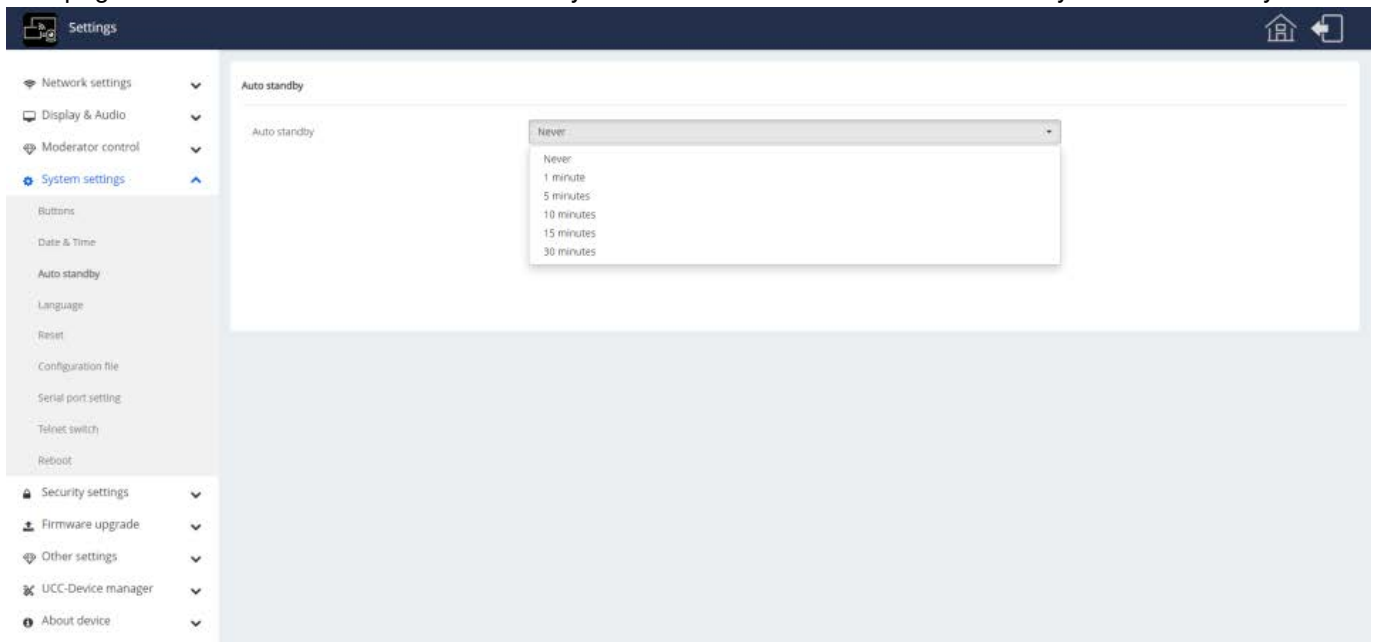


## System Settings – Language

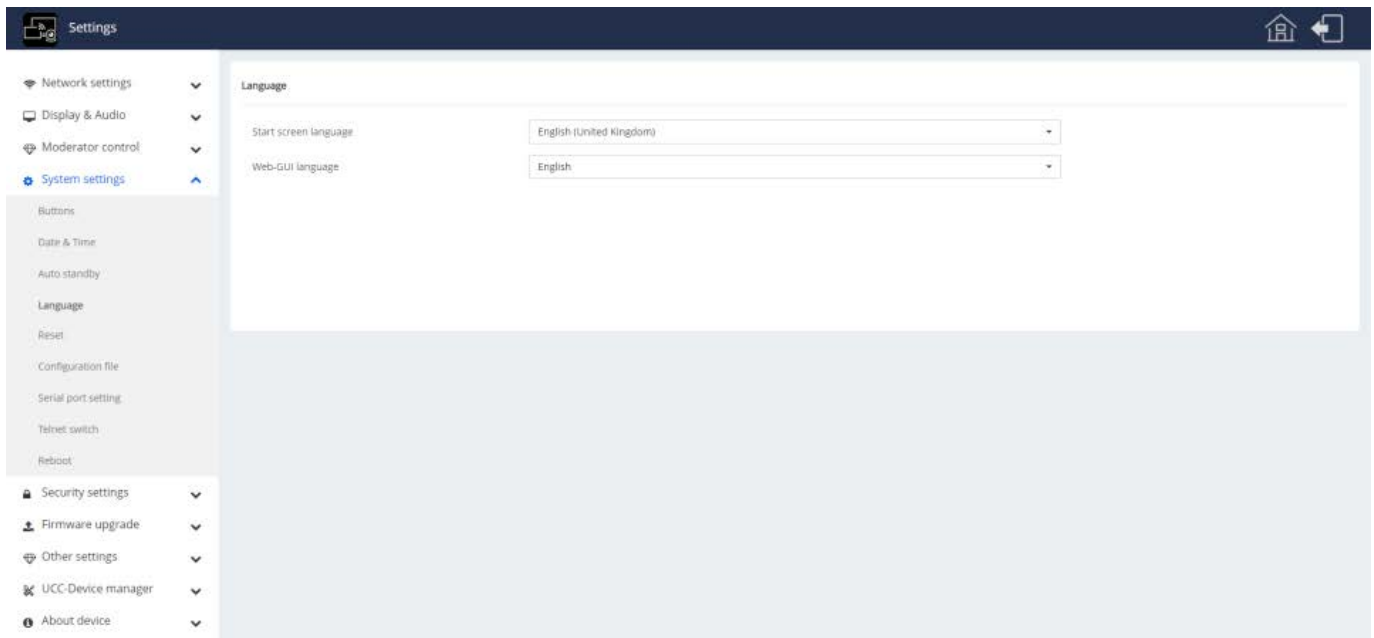


This page changes the language of the overlay items on the Home screen, any text that is part of the background image will not be changed.

## System settings – Reset

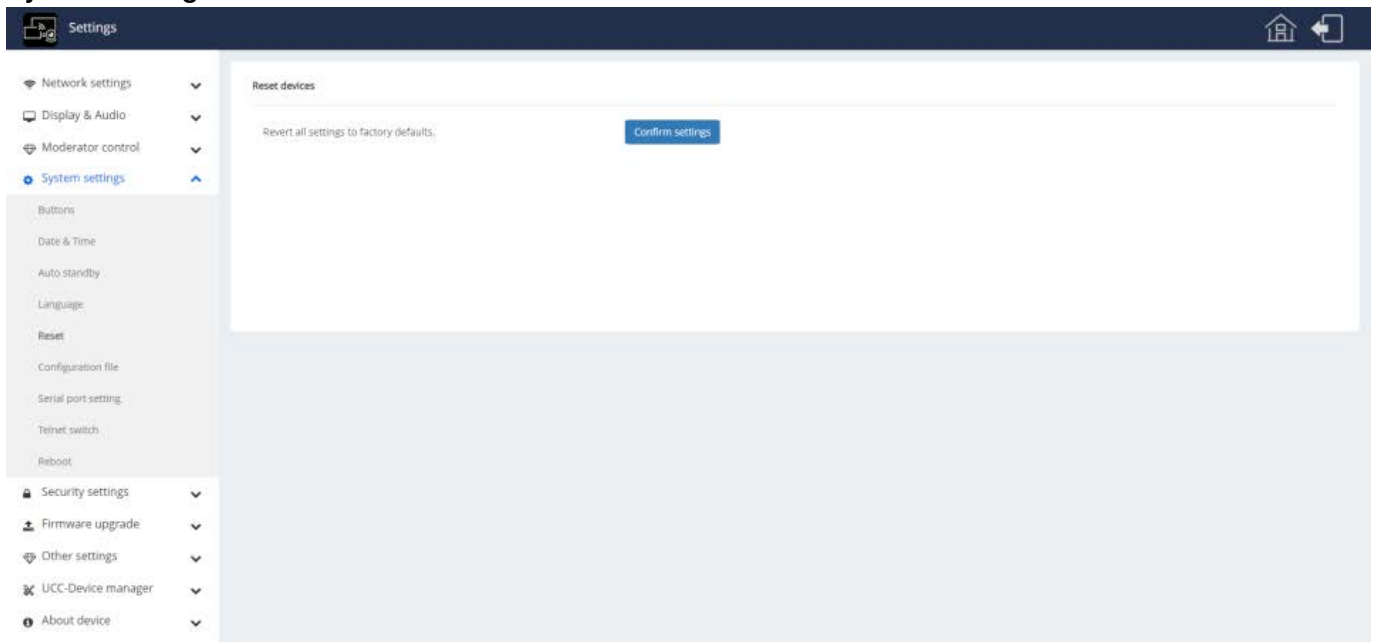

- Use this page to reset all configurable options to the factory defaults. Clicking the Confirm settings button will bring up a confirmation box:

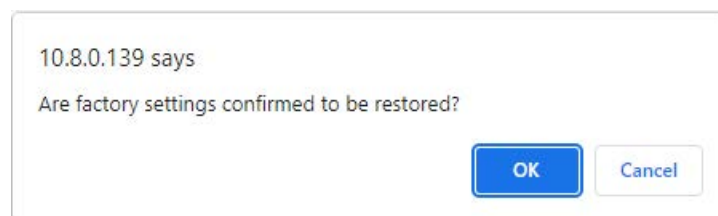


- Click OK to restore the Wizard to factory default settings.
- Click Cancel to keep current settings.

## System settings – Configuration file


- There are two tabs, Upload configuration and Download configuration. The configuration file, named config.dat,

is a binary image of the current configuration of the Wizard unit.

- This can be used to restore a last known good configuration file to the Wizard unit, provided that it was previously downloaded, to replace a bad or faulty configuration.

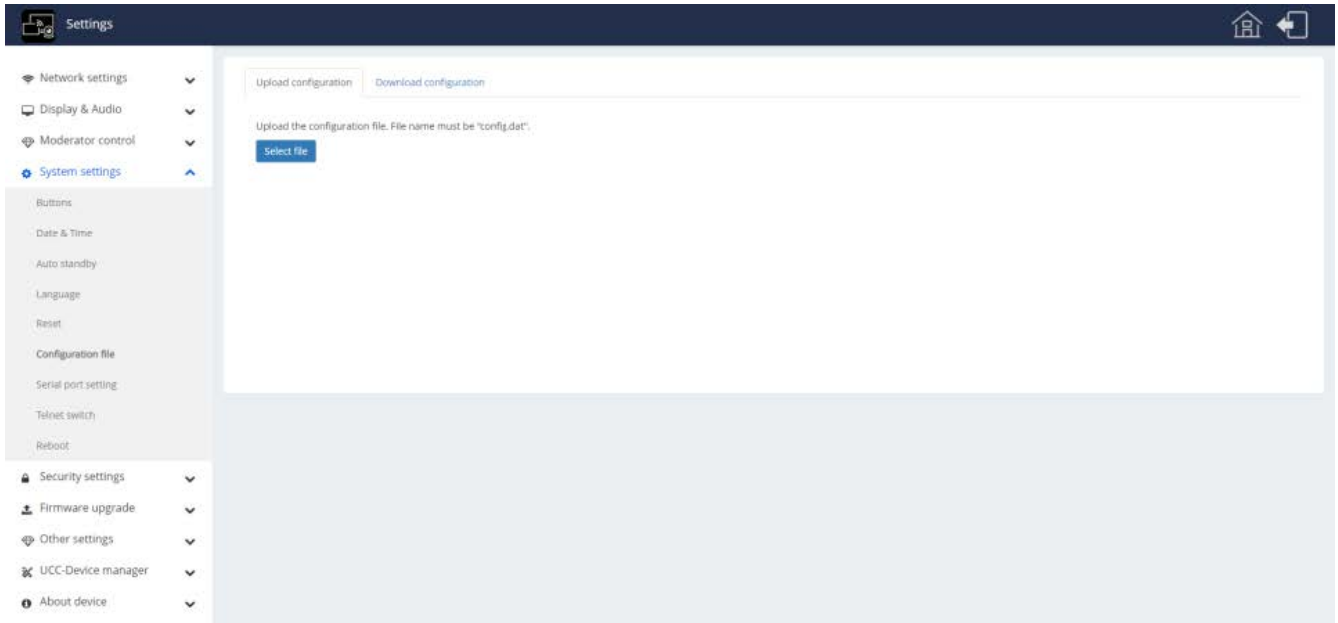

- Click Select file to choose the desired config.dat file.

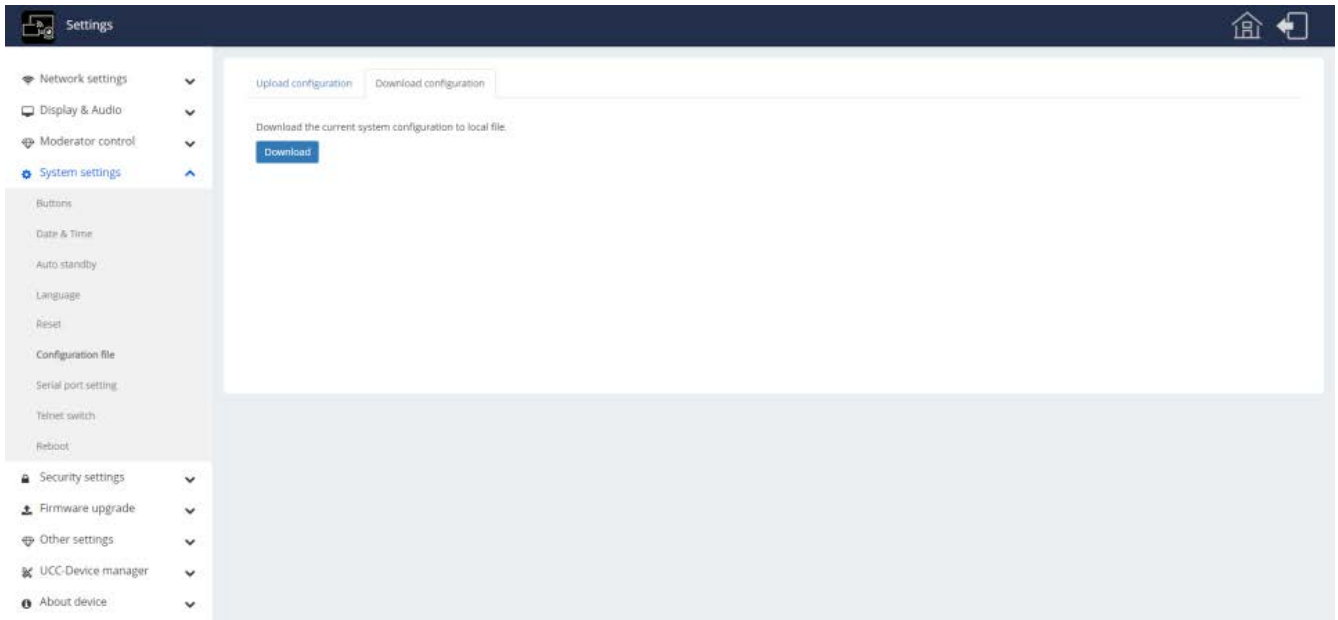

- Click the Download button to save the current configuration of the Wizard unit to the binary image file 'config.dat'. The actual download location depends on the web browser settings.

## System settings – Serial port settings

The screenshot shows a web-based configuration interface for a device. On the left is a sidebar menu with categories like 'Network settings', 'Display & Audio', 'Moderator control', and 'System settings'. The 'System settings' category is expanded, showing options such as 'Buttons', 'Date & Time', 'Auto standby', 'Language', 'Reset', 'Configuration file', 'Serial port setting' (which is selected), 'Telnet switch', 'Reboot', 'Security settings', 'Firmware upgrade', 'Other settings', 'UCC-Device manager', and 'About device'. The main content area is titled 'Serial port Setting' and contains a form with the following fields and values:

Field	Value
Enable serial	Enable
Baud rate	115200
Parity	NONE
Flow control	NONE
Serial port function	Uart function as telnet
Data bits	8
Stop bits	1

A 'Confirm settings' button is located at the bottom right of the form.


**This page configures the RS232 serial port options (bold items are the factory defaults):**

- Enable serial: Enabled / Disabled
- Baud Rate: 1800, 2400, 4800, 9600, 19200, 38400, 57600, 115200
- Parity: NONE, EVEN, ODD
- Flow control: NONE, XON/XOFF
- Serial port function: UART function as telnet / UART function commander
- Data bits: 5, 6, 7, 8
- Stop bits: 1, 2
- The UART function as telnet option requires a Telnet session to send RS232 commands. The UART function commander option accepts direct RS232 commands.
- Click the Confirm settings to accept any changes. The green Success banner will appear at the bottom of the browser window.

### System settings – Telnet switch

- This page is used to enable or disable the telnet option.
-




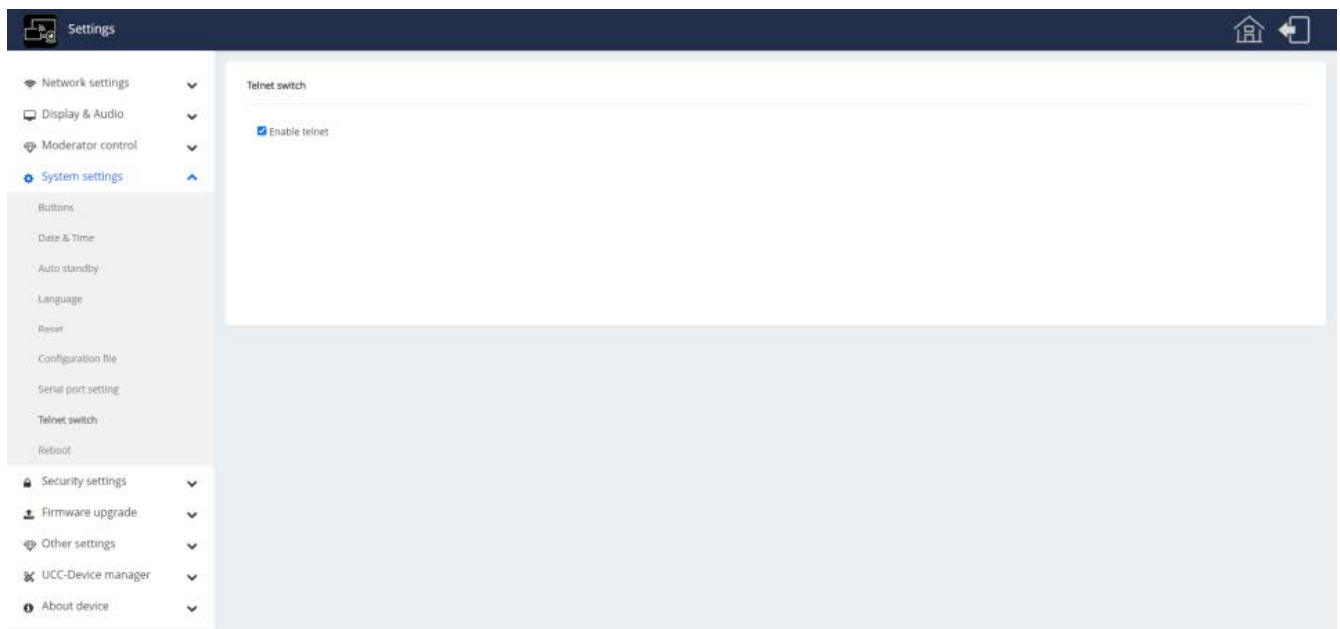


Clicking the selection box causes the green Success banner to appear at the bottom of the V1.0 browser window to confirm the new setting.

## System settings – Reboot

When the Enable option is set, the Day options are used to set the days, with a time in when the Wizard device shall automatically reboot. Click the Submit button to set any changes to the options. Click the Reboot now button to reboot the Wizard device immediately.

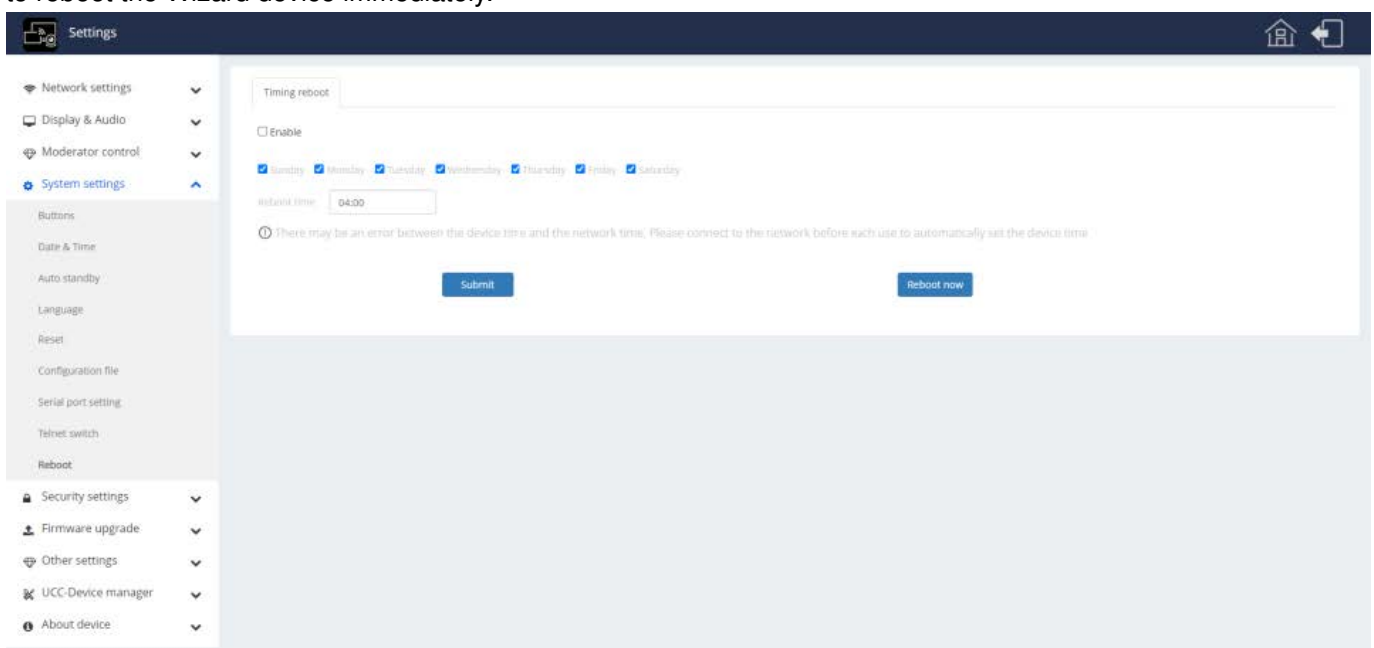


## Security settings – Security level

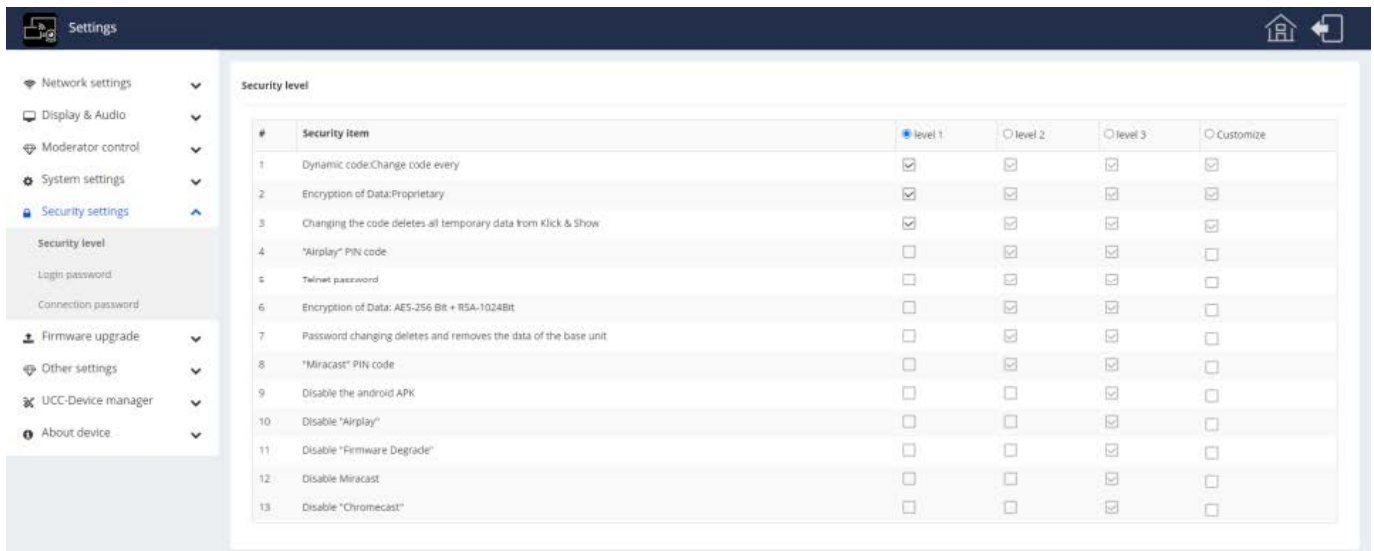


Use the top row selection buttons to choose the desired security setting. Use the columns to enable or disable any of the security features given in the Security item column.

## Security settings – Login password

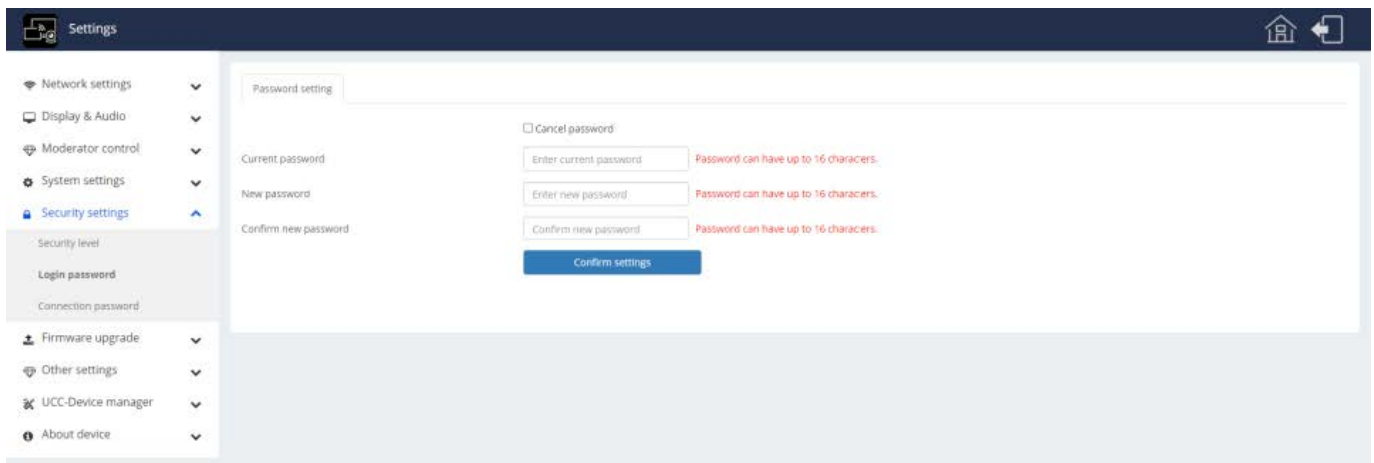


- The Cancel password option will delete the login current password and enable entry to the settings pages with no password requirement.
- To change the login password, enter the details as given in the edit boxes.
- Click the Confirm settings button to accept the changes.
- The default password is 'admin'. This is also the password after resetting the Wizard unit to factory defaults.

## Security settings – Connection password

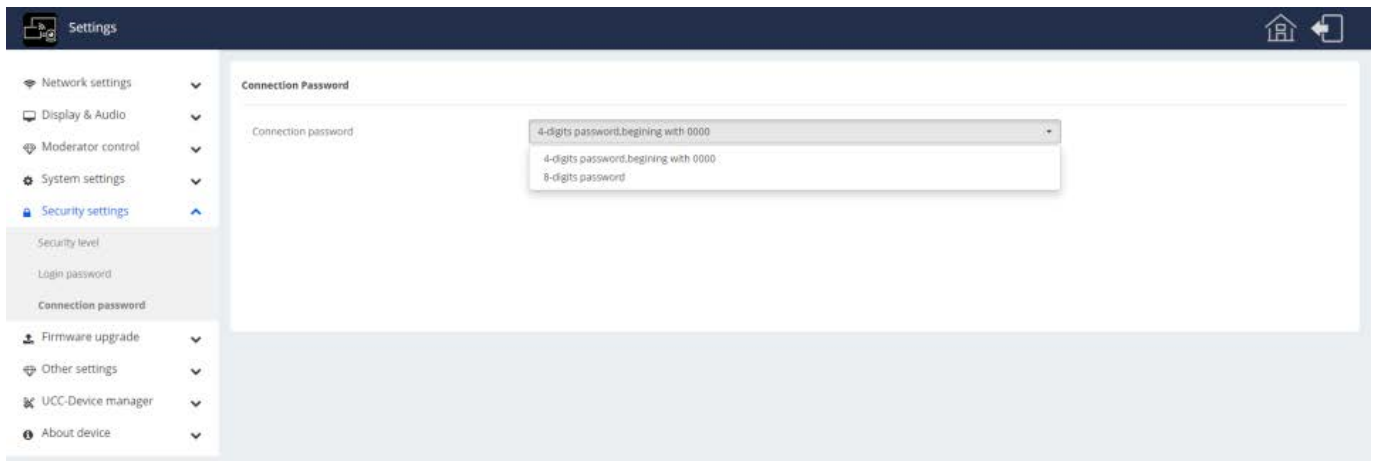


- This option changes the format of the numerical password displayed on the Home page that allows devices to connect to the Wizard. The password format can be four leading zeros followed by a 4-digit password (0000xxxx), or an 8-digit password (xxxxxxxx). The change is accepted immediately with the green Success banner being shown at the bottom of the browser.
- Any user that wishes to connect must always enter all the 8 digits shown on the Home screen, regardless of the chosen password format.

## Firmware Upgrade – Firmware update

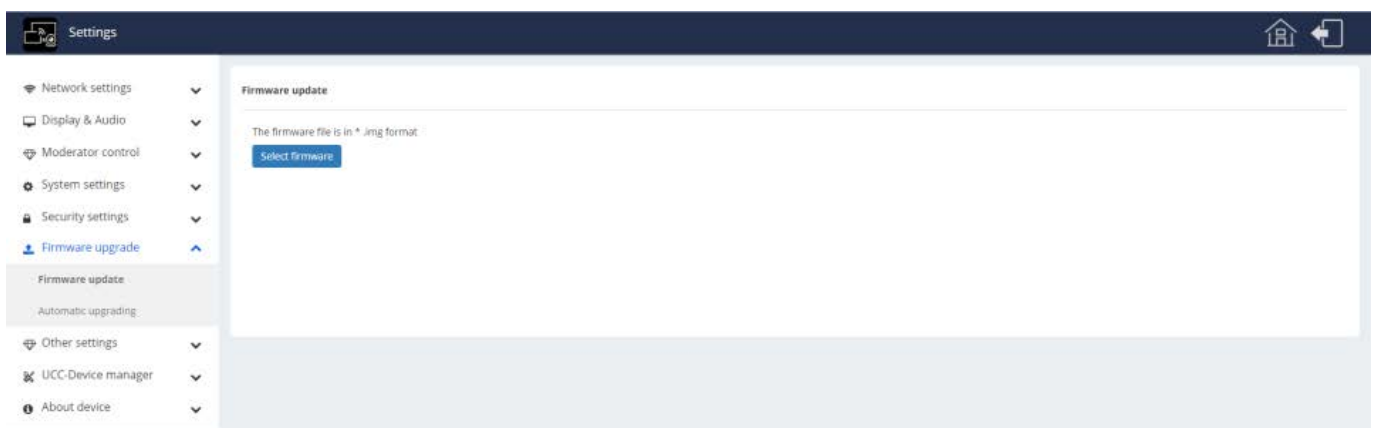


- Only use this page if a valid firmware upgrade file is available on your PC or laptop.
- Click the Select firmware button to open the default file browser for your OS. Navigate to the folder containing the firmware update file and click the Open to begin the update.

## Firmware Upgrade – Automatic update

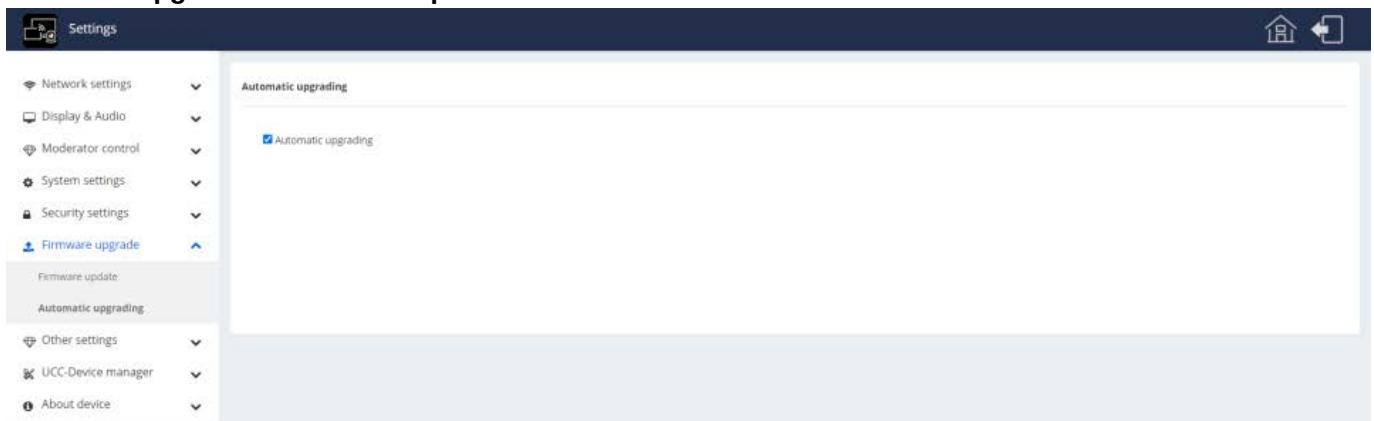


This option enables or disables Automatic updates via the Internet or from a local file.

## Other Settings – Auto create launcher

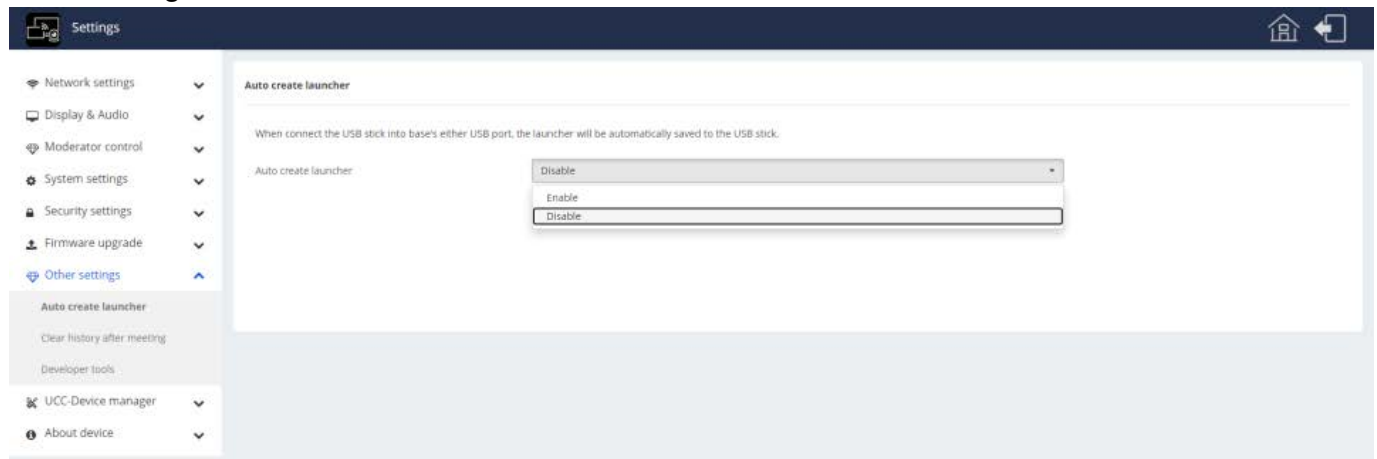

This option determines whether the WirelessMedia software will be automatically copied to a USB memory stick when it is plugged into any of the USB ports on the Wizard device.

## Other Settings – Clear history after meeting

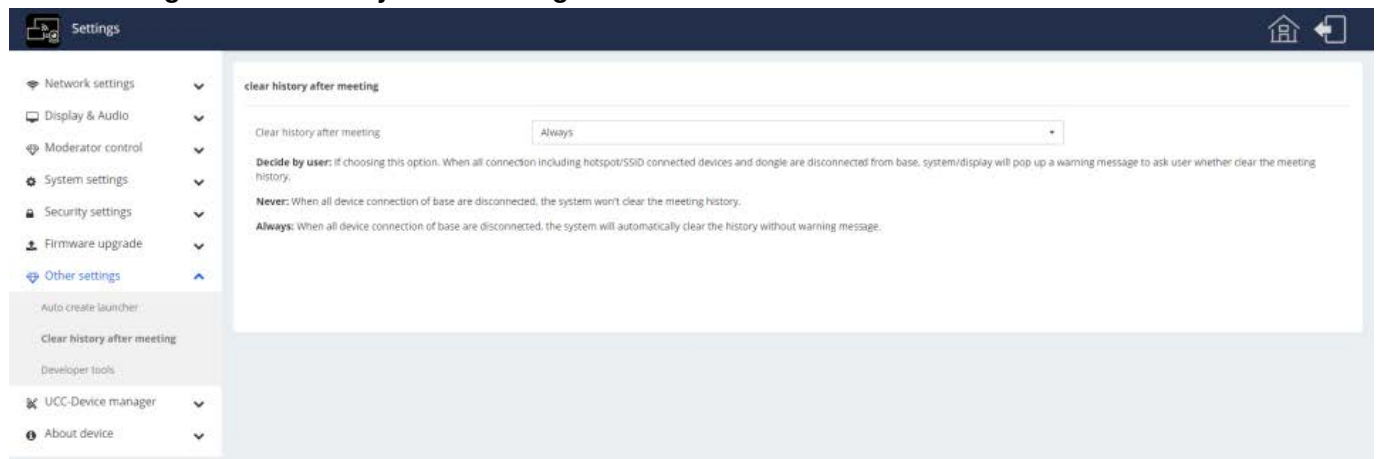

There are three options for clearing the history of any device that connected to the Wizard unit during a meeting session:

- **Decide by user**

When all connections, including hotspot/SSID connected devices and dongles, are disconnected from Wizard, a pop-up warning message appears to request the user if the meeting history should be erased.


- **Never**

When all device connections to the Wizard are disconnected, the system leaves the meeting history intact.

- **Always**


When all device connections to the Wizard are disconnected, the system automatically clears the history without giving a warning message.

## Other Settings – Developer tools

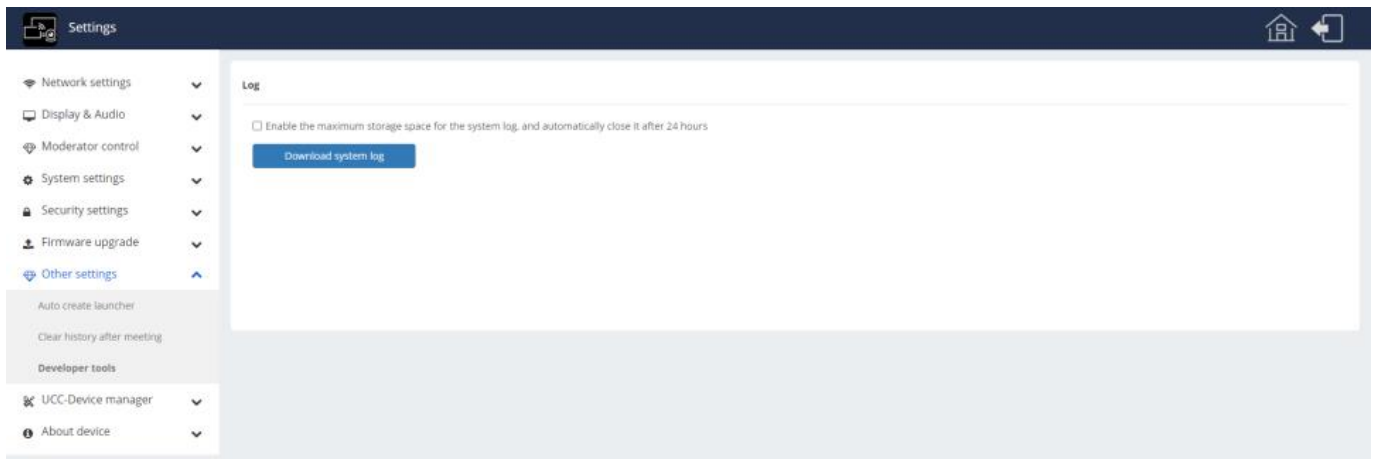


This page is for downloading a System log.

## UCC-Device Manager – USB-Camera

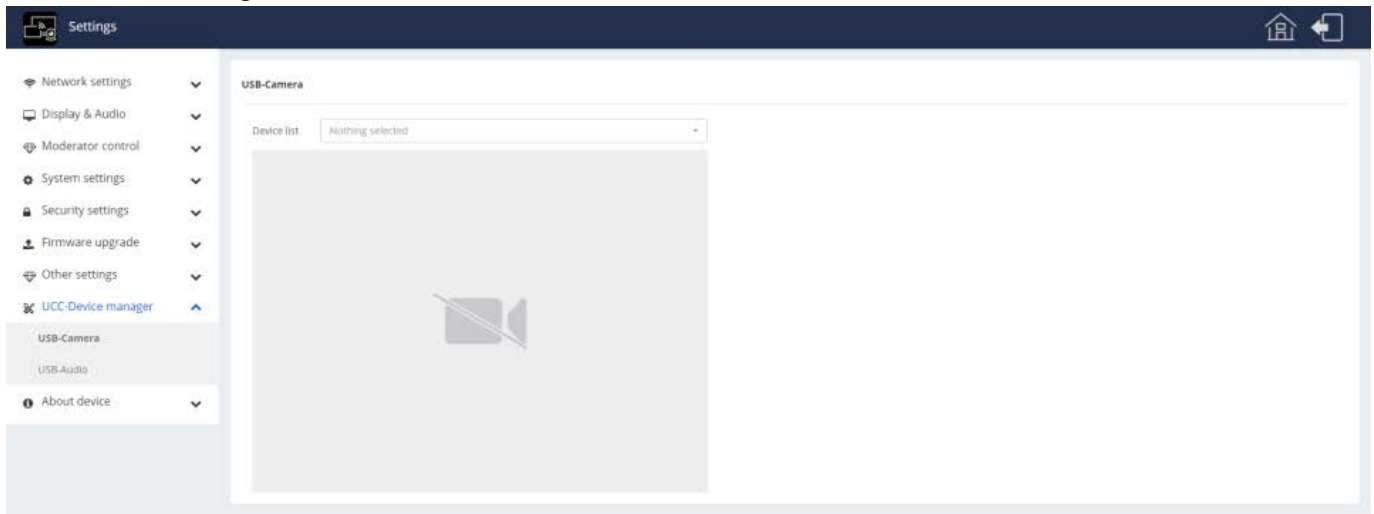

This page lists any USB cameras available to the Wizard, choose the desired camera and a preview will be displayed. Any PC or Laptop running the WirelessMedia app will be able to view that camera by selecting the Virtual Meeting Camera in the camera app on the PC or laptop.

## UCC-Device Manager – USB-Audio

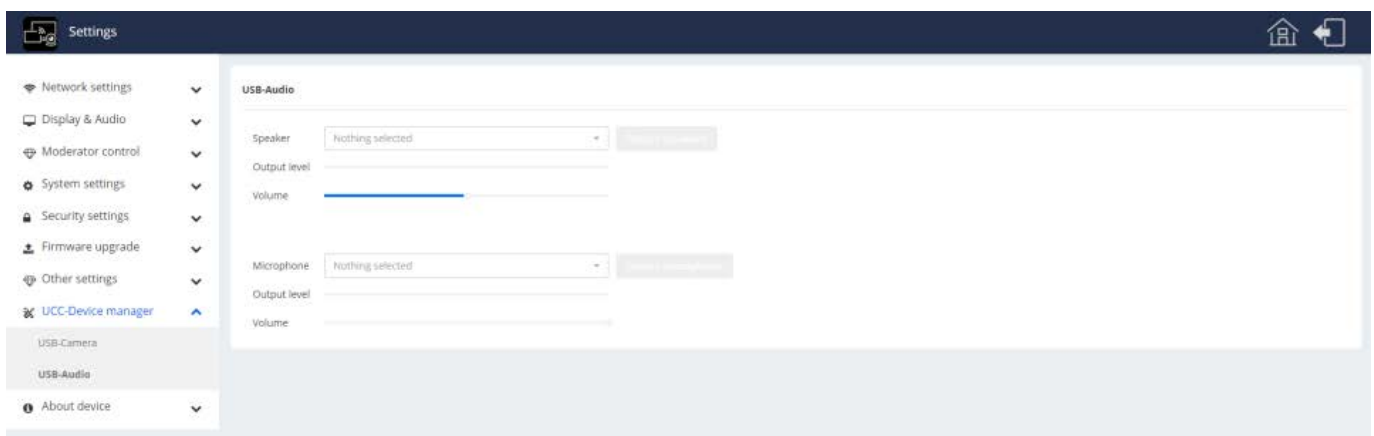

- Any USB connected speaker or microphone system will be listed in the respective selection boxes. The speaker and microphone level bars show the signal levels for those devices.
- To use USB speakers, be sure that the USB option is selected on Display & Audio – Audio web page detailed

on page 18.

About Device – About Device

Settings

Network settings

Display & Audio

Moderator control

System settings

Security settings

Firmware upgrade

Other settings

UCC-Device manager

About device

About device

About device

Model name	WMB-P245
Firmware version	3.1.6C.42.A1047
Web server version	1.21
Serial number of the base	5Y46MY02M00002

This page gives the internal model name, firmware version, Web server version and the product serial number.

Specifications

General

Source Video Format	Up to 1080p60
HDMI Output Resolutions	HDMI Output: 4K60, 4K30, 1080p60, 720p60
HDMI Standard	HDMI 2.0 for the output
HDCP Compliance	HDCP 1.4 and HDCP 2.2
LAN/Ethernet	<ul style="list-style-type: none"> <li>• Port 1: 100Mbps</li> <li>• Port 2: 1000Mbps, supports PoE</li> </ul> <b>Default settings:</b> <ul style="list-style-type: none"> <li>• Proxy: None DHCP: Enabled</li> <li>• IP address is displayed on the Home screen</li> </ul>
Antennas	Wizard 4: 2 Wizard 4U: 3
Audio input	AirPlay, Miracast, DLNA, Windows/MAC, WMH, USB, BT SpeakPhone
Analogue audio output	3.5mm stereo jack
USB interfaces	<ul style="list-style-type: none"> <li>• Wizard 4: Front – 1x USB 2.0 &amp; 1x USB C, Rear – 1x USB 3.0</li> <li>• Wizard 4U: Front – 1x USB 2.0 &amp; 1x USB C, Rear – 1x USB-C, 3x USB 3.0</li> </ul>
RS232	1x 3-way pluggable terminal connector
Number of simultaneous windows	<ul style="list-style-type: none"> <li>• Up to 4 on display screen</li> <li>• Up to 14 in thumb nail list</li> </ul>
Number of simultaneous connection	Up to 16
Wireless data rate	Up to 1200 Mbps
Latency	< 100ms, 20ms minimum
Wi-Fi Transmission Protocol	WIFI IEEE 802.11 a/g/n/ac
Wi-Fi Frequency Band	2.4 GHz & 5 GHz
PoE Standard	IEEE 802.3f
Power Supply	12V DC or PoE
Power Consumption	10W max.

## Environmental

Storage Temperature	-20°C ~ 60°C (-4°F ~ 140°F)
Operating Temperature	0°C ~ 40°C (32°F ~ 104°F)
Operating Humidity	20 ~ 90 %RH (non-condensing)

## Physical

Dimensions (WxHxD)	220 x 120 x 41 mm
Weight	1 kg

## Troubleshooting

Problem	Cause	Solution
“WirelessMedia for Android” app running on Android device, or Airplay on iOS device, cannot find the Wizard base unit	Wi-Fi password of base unit changed when Android or iOS device is connected to the base unit using Wi-Fi	Reconnect the Android or iOS device and enter the new password displayed on the Wizard home screen
Poor image quality on the main display	The cable between the Wizard and the display is	<ul style="list-style-type: none"> <li>• Try another cable</li> <li>• Replace the cable</li> </ul>



Problem	Cause	Solution
	either of poor quality or too long Wrong output resolution	<ul style="list-style-type: none"> <li>• Check that the cable connectors are fitting properly in the HDMI connectors</li> <li>• Change the Wizard output resolution to match the preferred resolution of the display.</li> </ul>
Bad wireless connection	<p>Wi-Fi problems</p> <ul style="list-style-type: none"> <li>• RF Interference</li> <li>• Channel over used</li> </ul> <p>The Wizard device does not automatically jump to other channels</p>	<p>Use a Wi-Fi scanner to find a free Wi-Fi channel and select it using the configuration settings.</p> <p>Regularly check the RF environment to determine if there are frequent changes in Wi-Fi networks your areas</p>
Low signal strength	<ul style="list-style-type: none"> <li>• Metal cabinets, walls, building construction... causing reflections and harming the Wi-Fi signal</li> <li>• Obstacles between the Wand and the Wizard unit reducing the Wi-Fi strength and quality</li> </ul>	<ul style="list-style-type: none"> <li>• Place the Wizard unit nearer to the display</li> <li>• Change the orientation of the antennas in relation to the sender direction</li> <li>• Remove or limit as many obstructions as possible between the Wizard device and transmitter</li> </ul>
The “WirelessMedia” app doesn’t start when the Wand is connected to a laptop computer	When using for the first time, the Launcher app must be installed on the laptop	After installing the Launcher program, “WirelessMedia” is ready to use at any time

## Safety Instructions


To ensure reliable operation of this product as well as protecting the safety of any person using or handling these devices while powered, please observe the following instructions.

1. ONLY USE the power supply provided. If an alternate supply is required, check the voltage, polarity and that it has sufficient power to supply the device it is connected to.
2. DO NOT operate this product outside the specified temperature and humidity range given in the above specifications.
3. Ensure there is adequate ventilation as this product generates heat while operating.
4. Repair of this product should only be carried out by qualified professionals as this product contains sensitive devices that may be damaged by any mistreatment.
5. Only use this product indoors and in a dry environment. DO NOT allow any liquids or harmful chemicals to come into contact with this product.

## After Sales Service

1. Should you experience any problems while using this product, firstly refer to the Troubleshooting section in this manual and/or your local dealer before contacting SY Technical Support.
  2. **When calling SY Technical Support, please provide the following information:**
    1. Full Product Name and Model Number
    2. Product Serial Number
    3. Details of the fault and any conditions under which the fault occurs.
  3. This product has a two year standard warranty beginning from the date of purchase as stated on the sales invoice. For full details please refer to our Terms and Conditions.
  4. The SY Product warranty is automatically void under any of the following conditions:
    1. The product is already outside of its warranty period
    2. Damage to the product due to incorrect usage or storage
    3. Damage caused by unauthorised repairs
    4. Damage caused by mistreatment of the product
  5. Please direct any questions or problems you may have to your local dealer before contacting SY Electronics.
- 

## Documents / Resources

	<p><a href="#">SY Wizard 4 Wizard 4U Wireless AV and BYOD Content Sharing and Collaboration System [pdf] User Manual</a></p> <p>Wizard 4 Wizard 4U Wireless AV and BYOD Content Sharing and Collaboration System, Wizard 4 Wizard, 4U Wireless AV and BYOD Content Sharing and Collaboration System, BYOD Content Sharing and Collaboration System, Sharing and Collaboration System, Collaboration System</p>
---	--

## References

- [SY SY Electronics](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.