

SYART SD-16 Wireless Pro Switch Controller



SYART SD-16 Wireless Pro Switch Controller User Guide

[Home](#) » [SYART](#) » SYART SD-16 Wireless Pro Switch Controller User Guide 

Contents

- [1 SYART SD-16 Wireless Pro Switch Controller](#)
- [2 Specifications](#)
- [3 Connecting to Switch Console Via Wireless](#)
- [4 Connecting to a Paired Switch Console](#)
- [5 How to use the TURBO function](#)
- [6 Turbo Speed Adjustment](#)
- [7 Reset function](#)
- [8 Specifications](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

SYART

SYART SD-16 Wireless Pro Switch Controller

 


Specifications




Connecting to Switch Console Via Wireless


The Controller can be paired with the Nintendo Switch and Switch Lite console in the following ways:

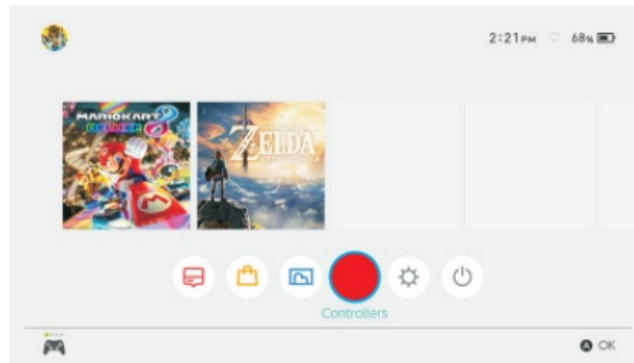

 (1)

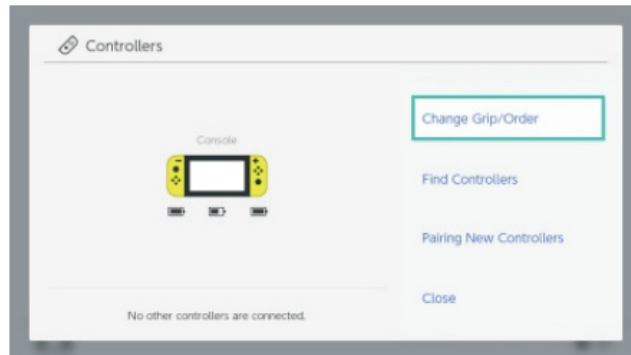

 (2)

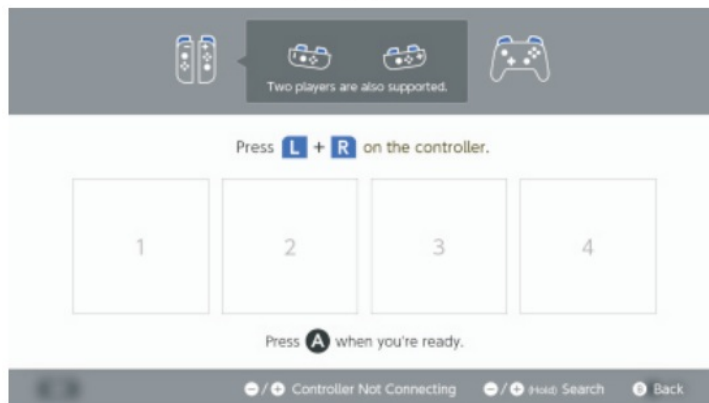

(3)

1. Power on a switch Console
2. on the main interface of the console, click "Controllers" → "Change grip / Order" to enter the pairing mode interface
3. Press and hold the "Home" button on the controller for 3s to power the controller on, and keep holding the "Home" button until
4. LEDs in the controller start blinking slowly and then blinking quickly (It takes about 5s).
5. When one (or more) of the 4 LEDs is solid bright, it means that the controller is paired with the console successfully.

Connecting to a Paired Switch Console

If your controller was paired with a Switch console ever before, next time, you want to connect your controller to

this console, you can press the “HOME” button on the controller shortly to power the controller on, and connect it to a Switch console in sleep or powered-on mode; if the console is in sleep mode, the controller will power on the console and connect with it.



Connecting to PC(X-Input)

1. Power on a PC
2. Connect the controller to the PC with a data cable
3. When the LED 2 is solid bright, it means that the controller is paired with the console successfully.

Note: This controller can just support part of PC games.

 
How to use the TURBO function



The turbo button causes the game function assigned to the button to fire in rapid succession E.g. Fire 1 bullet when you hit the button once when the turbo is on and you hold down the button, and fire continuously.

Turn on

Hold down the button that you want to set to Turbo, then press the Turbo button one time.



Turn off



After setting up Turbo mode, you want to cancel this button's Turbo function.
Hold down this button, then press the Turbo button one time

Turbo Speed Adjustment

- You can adjust the Turbo mode to 3 different speeds.
- Turbo speed is set to 12 times/second by default.
- While pressing the Turbo Button, push up on the Right Analog Stick to change the Turbo speed: 20 times/second
- While pressing the Turbo Button, push down on the Right Analog Stick to change the Turbo speed: 5 times/second

Vibration Intensity Adjustment

4-level vibration intensity adjustment: 100% → 70% → 30% → 0%

Strengthen Vibration

Keep Pressing "Turbo", and then push UP on the Left Analog Stick

Weaken Vibration

Keep Pressing "Turbo", and then push DOWN on the Left Analog Stick

Charging Status Indication

1. When the controller is disconnected from the console and charging, the player LEDs will slowly blink → Fully charged, the LEDs will go off.
2. When the controller is connecting with the Switch console and charging, the player LED(s) corresponding to the controller number will slowly blink → Fully charged, LEDs will remain lit.

How to turn the controllers off

1. When the controller is connecting with the Switch console, by holding down the POWER Button on the top of the console to power it off, the controller will power off as well.
2. When the controller is connecting with the Switch console, by holding down the [HOME Button] on the controller for at least 5 seconds to turn it off.

How to calibrate the Control Sticks

1. From the HOME Menu select System Settings, then scroll down the menu on the left-hand side and select Controllers and Sensors.
2. Select Calibrate Control Sticks then press down on the control stick for the controller you want to calibrate.
3. Follow the on-screen prompts to verify the control stick functionality.

How to calibrate the Motion Controls

1. Turn off your controller, press and hold the L3 button, then press the R1 button, the LED light on the controller will flash
2. Place the controller with the stick facing upward on a flat, stable surface. then press the " + " button on the controller, after that, release the button, and 4 LEDs on the controller will light up.
3. The indicator goes off after 3 seconds, controller goes into sleep mode.
4. Pressing down the Left stick is the L3 button

Reset function


When the controller is out of order, which can be reset by poking the reset key with a needle.



Specifications

- Working current: 25mA
- Charging current: <180mA
- Size: 158X113X58mm
- Weight: 180g

Documents / Resources

	SYART SD-16 Wireless Pro Switch Controller [pdf] User Guide SD-16, SD-16 Wireless Pro Switch Controller, Wireless Pro Switch Controller, Switch Controller, Controller
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)