



sygonix 2361005 Multi LED Light Chain with 700 LEDs Warm White with Timer Instruction Manual

[Home](#) » [Sygonix](#) » sygonix 2361005 Multi LED Light Chain with 700 LEDs Warm White with Timer Instruction Manual 

Contents

- [1 sygonix 2361005 Multi LED Light Chain with 700 LEDs Warm White with Timer](#)
- [2 Operating Instructions](#)
- [3 Safety instructions](#)
- [4 Operation](#)
 - [4.1 Care and cleaning](#)
 - [4.2 Disposal](#)
- [5 Technical data](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

sygonix®

sygonix 2361005 Multi LED Light Chain with 700 LEDs Warm White with Timer



Operating Instructions

Intended use

This product is a battery-operated LED light with a timer function and 9 light modes. It is intended for indoor and outdoor use. Contact with moisture, e.g. in bathrooms, must be avoided under all circumstances. For safety and approval purposes, you must not rebuild and/or modify this product. If you use the product for purposes other than those described, the product may be damaged. In addition, improper use can result in short circuits, fires, electric shocks or other hazards. Read the instructions carefully and store them in a safe place. Make this product available to third parties only together with its operating instructions. This product complies with the statutory national and European requirements. All company names and product names are trademarks of their respective owners. All rights reserved.

Delivery content

- LED light chain with battery box
- Operating instructions

Up-to-date operating instructions

Download the latest operating instructions at www.conrad.com/downloads or scan the QR code shown. Follow the instructions on the website.

Explanation of symbols



The symbol with the lightning in the triangle is used if there is a risk to your health, e.g. due to an electric shock.



The symbol with the exclamation mark in the triangle is used to indicate important information in these operating instructions. Always read this information carefully.



The arrow symbol indicates special information and advice on operation.



Safety instructions

Read the operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling in this manual, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.

General information

- The device is not a toy. Keep it out of the reach of children and pets.
- Do not leave the packaging material lying around carelessly. This may become dangerous playing material for children.
- Protect the appliance from extreme temperatures, direct sunlight, strong jolts, high humidity, moisture, flammable gases, steam, and solvents.
- Do not place the product under any mechanical stress.
- If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. Safe operation can no longer be guaranteed if the product:
 - is visibly damaged,
 - is no longer working properly,
 - has been stored for extended periods in poor ambient conditions or
 - has been subjected to any serious transport-related stresses.
- Please handle the product carefully. Jolts, impacts, or a fall, even from a low height, can cause damage to the product.
- Consult an expert when in doubt about the operation, safety, or connection of the appliance.
- Maintenance, modifications, and repairs must only be completed by a technician or an authorised repair centre.
- If you have questions that remain unanswered by these operating instructions, contact our technical support service or other technical personnel.

Caution

- To avoid damaging the components, do not attempt to open or repair the product without professional guidance.
- The operating range may be affected by environmental factors and nearby sources of interference.
- Proper use helps to prolong the lifespan of the product.

LED light

- Attention, LED light:
 - Do not look directly into the LED light!
 - Do not look into the beam directly or with optical instruments!

(Rechargeable) batteries

- Correct polarity must be observed while inserting the (rechargeable) batteries.
- The (rechargeable) batteries should be removed from the device if it is not used for a long period of time to avoid damage through leaking. Leaking or damaged (rechargeable) batteries may cause acid burns when in contact with skin, therefore always use suitable protective gloves to handle damaged (rechargeable) batteries.
- (Rechargeable) batteries must be kept out of reach of children. Do not leave (rechargeable) batteries lying around, as there is risk that children or pets may swallow them.
- All (rechargeable) batteries should be replaced at the same time. Mixing old and new (rechargeable) batteries in the device can lead to (rechargeable) battery leakage and device damage.
- (Rechargeable) batteries must not be dismantled, short-circuited or thrown into fire. Never recharge non-rechargeable batteries. Risk of explosion!

Insert batteries

Insert 3 x AA 1.5 V batteries, matching the polarity shown inside the battery compartment. If the LED brightness is noticeably lower, replace the batteries.

Operation

Use the mode switch to select a mode.

Mode	Description
OFF	Switches the product off.
ON	Switches the product on, automatically cycling between 8 functions.
	Switches on the timer function (6 hours on/18 hours off).

Care and cleaning

- Disconnect the product from the mains before cleaning.

- Do not use any aggressive cleaning agents, rubbing alcohol, or other chemical solutions as they can cause damage to the housing and functioning of the product.
- Clean the product with a dry, fibrefree cloth.

Disposal

Product

Electronic devices are recyclable waste and must not be disposed of in household waste. At the end of its service life, dispose of the product in accordance with applicable regulatory guidelines. Remove any inserted (rechargeable) batteries and dispose of them separately from the product.


(Rechargeable) batteries

- As the end user, you are required by law (Battery Ordinance) to return all used (rechargeable) batteries. Disposing of them in household waste is prohibited.
 - (Rechargeable) batteries containing hazardous substances are labeled with this symbol to indicate that disposal in domestic waste is forbidden. The abbreviations for the heavy metals involved are: Cd = Cadmium, Hg = Mercury, Pb = Lead (name on (rechargeable) batteries, e.g. below the waste bin icon on the left).
 - Used (rechargeable) batteries can be returned to collection points in your municipality, our stores or wherever (rechargeable) batteries are sold.
- You thus fulfill your statutory obligations and contribute to the protection of the environment.

Technical data

- Power supply 3 x 1.5 V/DC AA batteries (not included)
- Power consumption 0.064 W
- Modes 9 brightness settings, timer function
- LED count 700x LED
- Colour temperature 3000K (warm white)
- Brightness 50 lm
- Ingress protection IP44
- Operating/storage conditions -10 °C to +40 °C

Documents / Resources

	<p>sygonix 2361005 Multi LED Light Chain with 700 LEDs Warm White with Timer [pdf] Instruction Manual</p> <p>2361005 Multi LED Light Chain with 700 LEDs Warm White with Timer, 2361005, Multi LED Light Chain with 700 LEDs Warm White with Timer, Multi LED Light Chain, LED Light Chain, Light Chain, Chain</p>
---	--

References

- [Conrad Electronic » Your Sourcing Platform](#)
- [Conrad Electronic » Your Sourcing Platform](#)

- [!\[\]\(2dc8cdc0c918df88cde61039ecf68682_img.jpg\) Conrad Electronic » Your Sourcing Platform](#)
- [!\[\]\(793119bf0d613bd9b598fb8668922511_img.jpg\) Download center](#)

Manuals+