

sygonix 2368903 4-Way Socket Strip Instruction Manual

Home » Sygonix » sygonix 2368903 4-Way Socket Strip Instruction Manual



Operating Instructions
4-Way Socket Strip with 2x USB-A, IP44
Item no: 2368903

Contents

- 1 Intended use
- 2 Delivery contents
- 3 Latest product information
- **4 Safety instructions**
- 5 Cleaning and care
- 6 Disposal
- 7 Technical data
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

Intended use

The product is a 4-way socket strip with 2x USB-A outputs and a master switch.

Notes:

This product has an ingress protection rating of IP44 and is suitable for outdoor use. It is "splashproof" and protected from objects greater than 1 millimeter in size and water spray from any direction.

- · This rating is only effective if:
 - The socket covers are closed.
 - The plug is connected to a power outlet rated IP44 or higher.
 - An IP44-rated plug is connected to the socket(s).
- The USB sockets are only protected when they are closed.
- Do not use the product in areas where water accumulates.

Warning labels are included in the package. Stick a label in your language over or next to the language label on the product. If you use the product for purposes other than those described, the product may be damaged. Improper use can result in short circuits, fires, electric shocks or other hazards. The product complies with the statutory national and European requirements. For safety and approval purposes, you must not rebuild and/or modify the product. Read the operating instructions carefully and store them in a safe place. Make this product available to third parties only together with the operating instructions. All company names and product names are trademarks of their respective owners. All rights reserved.

Delivery contents

- Product
- · Operating instructions

Latest product information

Download the latest product information at <u>www.conrad.com/downloads</u> or scan the QR code shown. Follow the instructions on the website.

Description of symbols

The symbol with the exclamation mark in the triangle is used to indicate important information in this document. Always read this information carefully.

Safety instructions

Read the operating instructions carefully and especially observe the safety information. If you do not follow the safety instructions and information on proper handling, we assume no liability for any resulting personal injury or damage to property. Such cases will invalidate the warranty/guarantee.

5.1 General

- The product is not a toy. Keep it out of the reach of children and pets.
- Do not leave packaging material lying around carelessly. This may become dangerous playing material for children.
- If you have questions that remain unanswered by this information product, contact our technical support service
 or other technical personnel.

5.2 Handling

- If it is no longer possible to operate the product safely, take it out of operation and protect it from any accidental use. The safe operation can no longer be guaranteed if the product:
 - is visibly damaged,
 - is no longer working properly,
 - has been stored for extended periods in poor ambient conditions or
 - has been subjected to any serious transport-related stresses.
- Handle the product carefully. Jolts, impacts or a fall even from a low height can damage the product.
- Consult an expert when in doubt about the operation, safety, or connection of the appliance.

5.3 Sockets

• The product is equipped with enhanced protection against accidental contact. An integrated mechanism will release the holes of the receptacle only if the two prongs of a power plug are inserted into the two holes at once.

5.4 Operating environment

- Do not place the product under any mechanical stress.
- Protect the appliance from extreme temperatures, strong jolts, flammable gases, steam, and solvents.
- Protect the product from direct sunlight.

5.5 Mains cable



- Always ensure proper connection.
- Never use damaged power supply components.
- Do not modify power supply components.
- The mains outlet must be located near the device and be easily accessible.
- · Never plug in or unplug the mains plug when your hands are wet.
- Never pull the mains plug from the socket by pulling at the cable. Always pull it from the mains socket using the intended grips.
- Unplug the mains plug from the mains socket if you do not use the device for an extended period of time.
- Disconnect the mains plug from the mains socket in thunderstorms for reasons of safety.
- Make sure that the mains cable is not squeezed, bent, damaged by sharp edges, or put under mechanical stress.
- Avoid excessive thermal stress on the main cable from extreme heat or cold.
- Do not modify the main cable. Otherwise, the mains cable may be damaged. A damaged mains cable can cause a deadly electric shock.
- Do not touch the main cable if it is damaged.
 - First, power down the respective mains socket (e.g. via the respective circuit breaker) and then carefully pull the mains plug from the mains socket.
 - Never use the product if the main cable is damaged.
- · A damaged mains cable may only be replaced by the manufacturer, a workshop commissioned by the

manufacturer, or a similarly qualified person, so as to prevent any danger.

- Ensure that cables are not pinched, kinked, or damaged by sharp edges.
- Always lay cables so that nobody can trip over or become entangled in them. This poses a risk of injury.

5.6 Connected devices

• Also, observe the safety and operating instructions of any other devices which are connected to the product.

5.7 Product

- Do not connect the product in series!
- Do not operate the product while covered.
- · De-energized only when unplugged.
- Take special caution when children are around. Children cannot recognize the danger arising from the incorrect use of electrical devices. There is a risk of a life-threatening electric shock!

Cleaning and care

NOTICE! Do not use aggressive cleaning agents, rubbing alcohol or other chemical solutions as they can cause damage to the housing and malfunction.

- 1. Disconnect the product from the power supply.
- 2. Clean the product with a dry, fiber-free cloth.

Disposal

Electronic devices are recyclable waste and must not be disposed of in household waste.

At the end of its service life, dispose of the product in accordance with applicable regulatory guidelines. You thus fulfill your statutory obligations and contribute to the protection of the environment.

Technical data

Rated input	230 V/AC, 16 A, 50 Hz
Rated power	max. 3680 W
USB output	
Cable type	H07RN-F 3G1.5 mm ²
Ingress protection	IP44
Cable length	
Consumers	2x USB-A ports 4x Mains sockets
Enhanced protection against accidental	
contact	Yes
Sockets control	4x mains sockets (ON/OFF)
2x USB-A ports (always ON)	
Protection (USB)	
cut-off Operating	
conditions	20 to +50 °C, 100 % RH
Storage conditions	20 to +50 °C, 100 % RH
Dimensions (L x W x H) 318 x 80 x 71 mm	
Weight (approx.)	687 g

This is a publication by Conrad Electronic SE, Klaus-Conrad-Str. 1, D-92240 Hirschau (<u>www.conrad.com</u>). All rights including translation reserved. Reproduction by any method (e.g. photocopying, microfilming, or the

capture in electronic data processing systems) requires prior written approval from the editor. Reprinting, also in part, is prohibited.

This publication reflects the technical status at the time of printing. Copyright by Conrad Electronic SE. *2368903_V3_0821_dh_mh_en



http://www.conrad.com/downloads

Documents / Resources



sygonix 2368903 4-Way Socket Strip [pdf] Instruction Manual 2368903, 4-Way Socket Strip, 2368903 4-Way Socket Strip, Strip

References

- Conrad Electronic » Your Sourcing Platform
- Conrad Electronic » Your Sourcing Platform
- © Document

Manuals+