



## **SYLVANIA SDVD1046 Progressive Scan Auto Load Compact DVD Player Instruction Manual**

[Home](#) » [SYLVANIA](#) » SYLVANIA SDVD1046 Progressive Scan Auto Load Compact DVD Player Instruction Manual 

## Contents

- 1 SYLVANIA SDVD1046 Progressive Scan Auto Load Compact DVD Player
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 INTRODUCTION
- 4 About DVD DVD
  - 4.1 ABOUT DISC INFORMATION
- 5 Select a DVD disc
- 6 Care of disc
- 7 About the player
  - 7.1 Front panel
  - 7.2 Rear panel
- 8 Remote control
- 9 SYSTEM CONNECTION
  - 9.1 Preparations Accessories
- 10 Battery installation of remote controller
  - 10.1 System connection Optional according to your back panel
- 11 OSD SETUP
  - 11.1 MAIN PAGE
- 12 REMOTE CONTROL OPERATION
- 13 REMOTE CONTROL OPERATION
  - 13.1 MUTE
  - 13.2 L/R
  - 13.3 CLEAR
  - 13.4 PAUSE
  - 13.5 PLAY
  - 13.6 STOP
  - 13.7 STOP
  - 13.8 RETURN
  - 13.9 ZOOM
  - 13.10 STEP
  - 13.11 SETUP
  - 13.12 VOL
  - 13.13 SUBTITLE
  - 13.14 ANGLE
  - 13.15 LANGUAGE
  - 13.16 GOTO
  - 13.17 PROG
- 14 TROUBLE SHOOTING
- 15 SPECIFICATIONS
- 16 Documents / Resources
  - 16.1 References
- 17 Related Posts

# SYLVANIA

**SYLVANIA SDVD1046 Progressive Scan Auto Load Compact DVD Player**



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

### **Warning**

To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance..

## **IMPORTANT SAFETY INSTRUCTIONS**

### **INDOOR USE ONLY**

- This appliance is not intended for outdoor use.
- This appliance is not intended for use in bathrooms, laundry areas or similar moist locations.
- Never locate this appliance into, a bath, basin, washtub, shower or swimming.
- Do not place naked flame sources, such as candles, on the appliance.
- Do not insert or allow foreign objects to enter any grille openings.
- Do not run the cord under carpeting. instead, arrange the cord away from roads where it will not become a trip hazard.
- To disconnect the appliance, turn the appliance off. Do not remove the plug from the outlet.
- Do not misuse the cord, Never carry the appliance by the cord or pull to disconnect it from the outlet, Instead, grasp the plug and pull to disconnect.
- All the safety and operating instructions should be read before this product is operated.
- The safety and operating instructions should be retained for future reference.
- Heed all warnings All warnings on the appliance .All operating and use instructions should be.
- Do not use this apparatus near water.
- The appliance should not be used near water or moisture for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth. Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat pumps, stoves or any other appliances that All the safety and operating instructions should be read before this product is operated.
- Keep these instructions Heed all warnings All warnings on the appliance and in the operating instructions should be adhered to.
- Do not use this apparatus near water.
- The appliance should not be used near water or moisture for example, in a wet basement or near a swimming pool, and the like..

- Do not block any ventilation openings. Install in accordance.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus including amplifiers that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug.
- A polarized plug has two blades with one wider than the other.
- A grounding plug has two blades and a third grounding prong.
- The wide blade or the third prong is provided for your safety.
- If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
- When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip over.
- Unplug the apparatus during lightning storms or when unused for long periods of time
- Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## **CAUTION**

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

## **WARNING**

The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like. The mains plug is used as disconnect device, the disconnect device shall remain readily operable. Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam of laser. Only use attachments/accessories specified or provided by the manufacturer. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus. No naked flame sources, such as lighted candles, should be placed on the apparatus. Attention should be drawn to environmental aspects of battery disposal. Use of the apparatus in moderate climates. Caution. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Do not open do not attempt to repair, disassemble or modify this appliance. Dangerous high voltages exist inside this appliance. This appliance is only to be serviced by Service Technician. There are no user-serviceable parts inside. Do not look at laser pick-up directly. Do not touch the lens.

## **Installation Warnings**

Ventilation Slots and openings in the case are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or heat register. This product should not be placed in a built-in installation such as a bookcase or rack, unless proper ventilation is provided or the video product manufacturer instructions have been followed. Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. ANSI/NFPA No. 70-1984 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines, other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching or approaching such power lines or circuits, as contact with them

might be fatal. Installing an outdoor antenna can be hazardous and should be left to a professional antenna installer. Lightning: For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.

### Compulsory Warnings

If the supply cord is damaged, it must be replaced by service Technician, in order to avoid a hazard. This product has not been designed for any uses other than those specified in this booklet.

### Laser Safety

This compact disc player is classified as a CLASS 1 LASER PRODUCT. Only qualified service personnel should remove the cover or attempt to service this device due to possible eye injury. Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

### Warning

 
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## INTRODUCTION

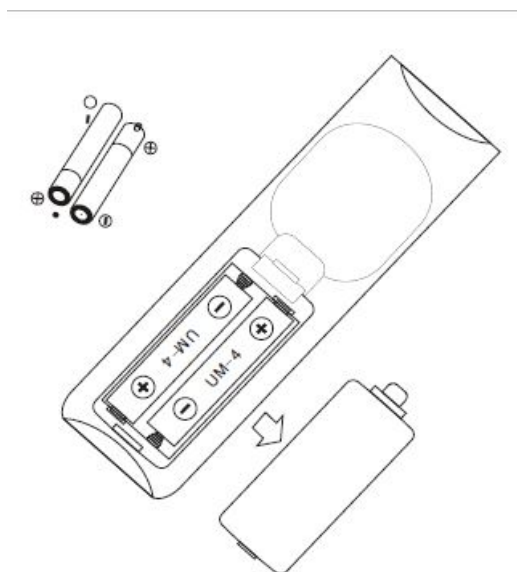

 - Loading batteries to the remote control Remove the battery compartment cover. Load two AAA (UM-4 or R03) batteries into the battery compartment.

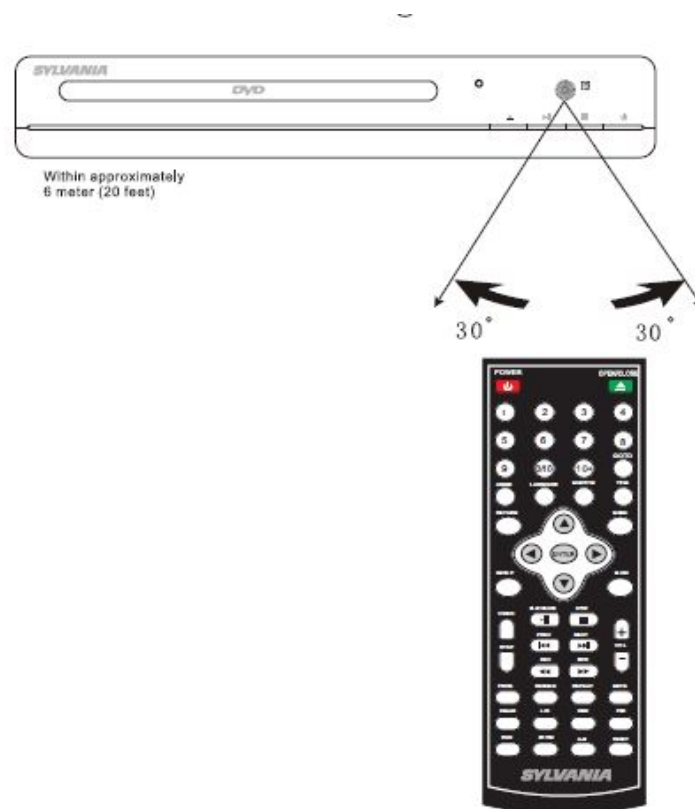

- Make sure that the batteries have been inserted in the correct polarities matching to the symbols marked in the battery compartment.
- Close the battery compartment cover.
- When replacing batteries, replace both batteries.
- Do not mix new and used batteries operating together, otherwise, the operation lifetime will be much shorter than normal.
- Remove the batteries if the unit will not be used for a prolonged period of time.
- The remote control transmits a directional infrared beam.
- Be sure to aim the remote control directly at the infrared sensor of the unit during operation.
- If the sensor has been covered or there is a large object between the remote control and the sensor, the sensor will not respond.
- The sensor may be not able to receive the remote signal when it is exposed to direct sunlight or a strong artificial light (fluorescent or strobe light).
- In this case, change the direction of the light or reposition the unit to avoid direct lighting.



## About DVD

Digital Versatile Disc is a digital video medium under the MPEG II format, featuring a variety of revolutionary entertainment capabilities. The MPEG II video compression technology provides capacity for an excellent picture of minimum 500 lines resolution on screen, up to 8 language soundtracks, up to 9 views from different camera angles and up to 32 language subtitles provided the DVD disc itself supports these features.

## ABOUT DISC INFORMATION

Disc types	DVD	CD
Recording Method	Digital / MPEG II	Digital
Capacity	Single-layer / Single side 4.7GB = 2 hr Single-layer / Double sides 8.5GB = 4 hr Double-layers / Single side 9.4GB = 4.5 hr Double-layers / Double sides 17GB = 8 hr	650MB=74min
Disc size	12cm / 8cm	12cm / 8cm
Horizontal Resolution	500 lines up	-
Sub-titles	32	-
Sound tracks	8	1
Symbol		

### REMARK

 
Some features contained in this DVD player are related to the DVD disc's software. Some features cannot be performed if the disc does not support the feature, or requires special settings. Check the features printed on the disc's packing or follow the instructions of the Disc's on screen menu.

### Select a DVD disc

DVD Region Code	
DVD discs and DVD players are manufactured under the worldwide agreed DVD Regional Code System that the player will operate only with corresponding disc of the same Regional Code.	
Region code	Region
1	Canada, USA
2	Europe (incl. Poland, Romania, The Czech republic), Japan, Middle East (incl. Saudi Arabia, Egypt, Iran, South Africa)
3	East Asia (incl. Hong Kong, Taiwan, South Korea), South-East Asia
4	Australia, Caribbean, Central & South America, Mexico, New Zealand
5	Africa, Former Soviet Union, India, North Korea, Pakistan, Turkmenistan
6	China

### Care of disc

- Video disc contains high density compressed data that needs proper handling. Hold the disc with fingers.
- Hold the disc's outer edge and/or the center spindle hole.
- Do not touch the disc surface.

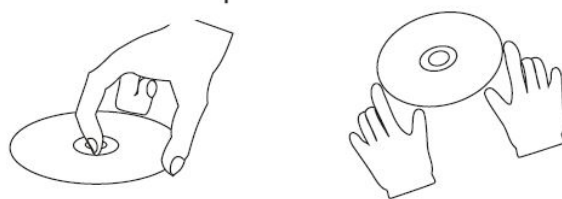


- Do not bend or press the disc.
- Do NOT expose the disc to direct sunlight or heating sources. Store discs in cabinet vertically, in dry condition.



- Store discs in cabinet vertically, in dry condition.
- Prevent exposure to
  - Direct sunlight
  - Heat or exhaust from a heating device.
  - Extreme humidity
- Clean the disc surface with a soft, dry cleaning cloth.
- Wipe the disc surface gently, radially, from center toward the outer edge.
- Do not apply thinner, alcohol chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.


## About the player
 
### Front panel

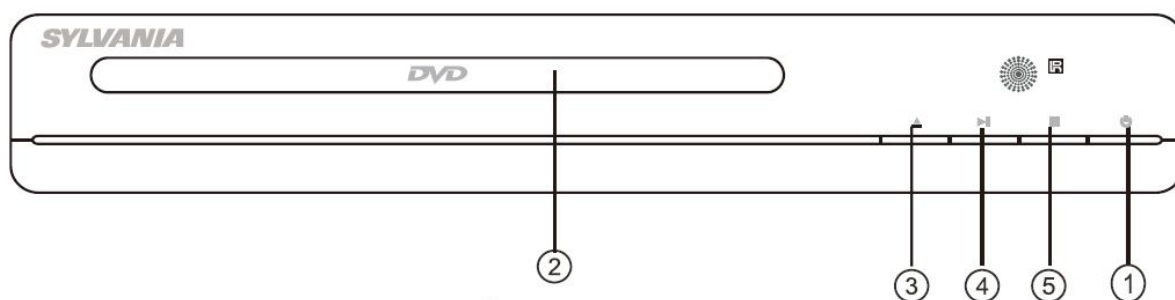

1. ON/OFF
2. DVD DOOR
3. OPEN/CLOSE BUTTON
4. PLAY/PAUSE BUTTON
5. STOP BUTTON

## Rear panel

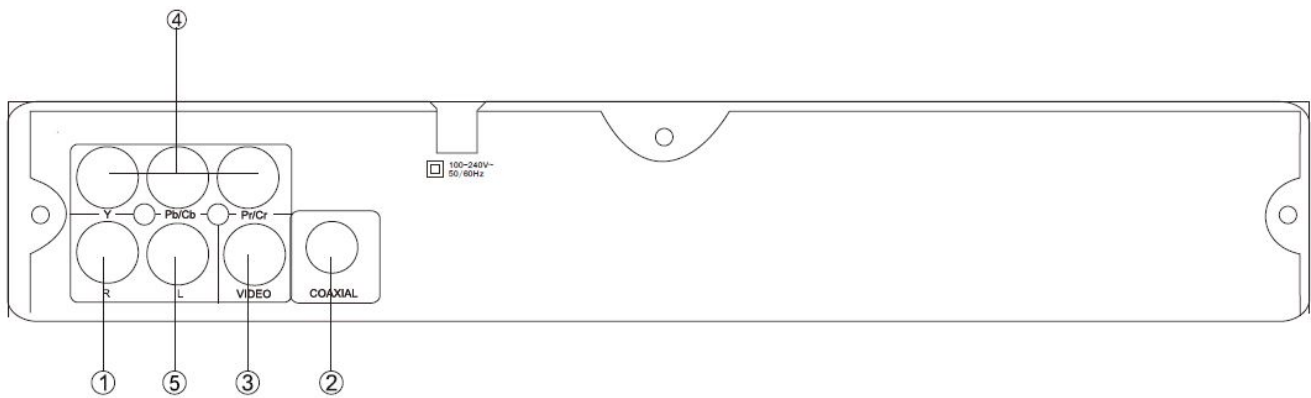 


1. RIGHT Output jack
2. Coaxial digital signal output
3. Video output
4. Component YUV(Y.Cr.cb) output
5. LEFT output jack

### Note

 Please connect YUV(Y.Pr/CrPb/Cb) cable as per the jack colour.

## Remote control

Some features of the player can only be performed by the remote control. Some features described in this owner's manual are related to the Disc's encoding. Some features may not be available, if the disc encoding does not support the feature.

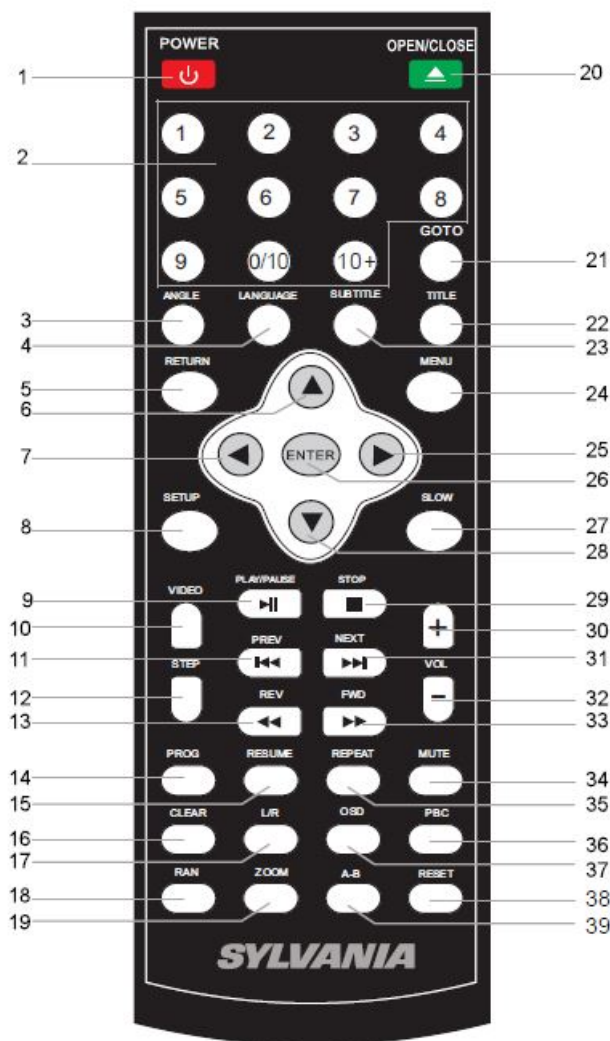

1. POWER
2. 0-10+NUMBER
3. ANGLE
4. LANGUAGE
5. RETURN
6. UP
7. LEFT
8. SETUP
9. PLAY/PAUSE
10. VIDEO
11. PREV
12. STEP
13. REV
14. PROGG
15. RESUME
16. CLEAR
17. L/R
18. RAN
19. ZOOM
20. OPEN/CLOSE

21. GOTO
22. TITLE
23. SUBTITLE
24. MENU
25. RIGHT
26. ENTER
27. SLOWM
28. DOWNN
29. STOP
30. VOL+
31. NEXT
32. VOL-
33. FWD
34. MUTE
35. REPEAT
36. PBC
37. OSD
38. RESET
39. A-B

### **Notes**

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared sensor during operation. When the sensor is covered or there is a large object between the remote control and the sensor, the sensor cannot receive signals. The sensor may not be able to receive signals properly when it is exposed to direct sunlight or a strong artificial light (such as a fluorescent or strabe light). In this case change the direction of the light or reposition the unit to avoid direct lighting.

## **SYSTEM CONNECTION**

### **Preparations Accessories**

1. Remote control
2. Audio/Video cable
3. User's manual (check whether be fully equipped after open the box)

### **Battery installation of remote controller**

Batteries not included. Place two AAA batteries not supplied into the battery compartment. Be sure the polarities are correct. There should be no large obstacles between the remote controller and the main unit.

### **System connection Optional according to your back panel**

When making connection between this unit and other components, be sure all connection with power-off. AudioNideo cables are connected according to the different colour identification and they should be fitted firmly.

 
- Yellow to video terminal
- White to audio terminal L

- Red to audio terminal R

## OSD SETUP

- Displaying the setup menu screen.
- The setup preferences.
- The selected category will provide you the setting details using the following screen

## MAIN PAGE

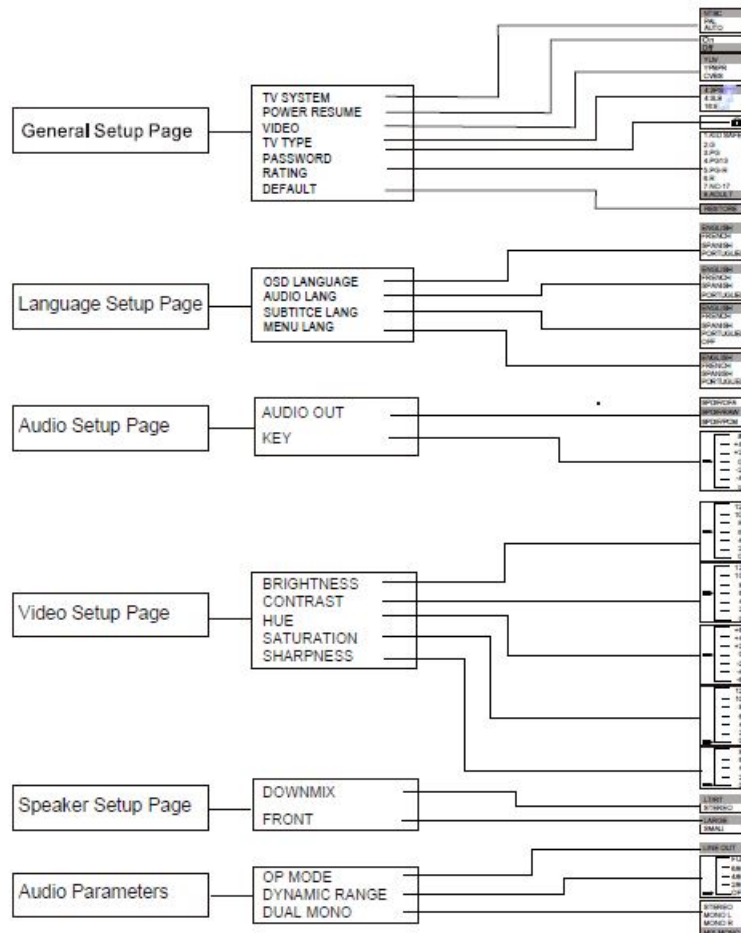

Set on PARENTAL and press PARENTAL and choose the desired rating. Then input the code 0000 and enter it, the desired rating you choosed is effective. The original factory code is 0000. If you want to change the code, Set on password and press change , Input the old password '000', then input the new code and confirm.

## REMOTE CONTROL OPERATION

POWER



During playback, press POWER to stop the player and close the power.

OPEN/ CLOSE



To open the disc tray, press OPEN/CLOSE. To close the disc tray, press OPEN/CLOSE again.

TITLE



During DVD playback, press TITLE to display the DVD title menu or play the first title.

**Note**

This function is subject to the disc.

MENU



During DVD playback, press TITLE to display the DVD title menu or play the first title. Note: this function is subject to the disc.

OSD



During VCD/DVD playback, press OSD to display the current time counter

PBC



During VCD/SVCD playback, Press PBC to select the mode of PBC On or PBC Off. PBC is: playback control used to navigate VCD/SVCD. 0 10

•

0-10 Keys



These keys are used to input the time, as well as title, chapter and track numbers.

- When a CD, DVD or VCD is playing with PBC off, press the 0-10 keys to select a track directly.
- When a numeric item is displayed on the screen, press the 0-10 keys to select the desired entry.

- Press 10+ button two times and 0/10 button once for 20.



During AVI,DVD, VCD or SVCD playback, press SLOW for slow motion playback. Once you press SLOW, the disc will play at 1/2, 1/4, 1/8 and 1/16 normal



During AVI,DVD, CD or VCD playback, press PREV to play the previous chapter.title or track.



During AVI,DVD, CD or VCD playback, press NEXT to play the next chapter, title or track.



Each press of the REPEAT button will change the repeat mode. During VCD,CD playback.there are three modes: repeat 1, rep,ereapt eAalltaAnlldaOndff.Off. During AVI/DVD,playback,there are three modes.

**Note**

During VCD playback,the PBC mode must be set to Off.



During playback, press A-B to select point.

- Press it again to select point B.
- The player will repeat the section from A to B automatically.
- Press A-B a third time to cancel A-B repeat and clear points A and B.

**Note**

During AVI/CD/VCD/SVCD playback, points A and B must be within the same track. During AVI/DVD playback, points A and B can be selected.



During AVI/DVD, CD or VCD playback, press REV To in reverse. the disc at 2, 4, 8 and 20 times speed



Press PLAY to resume normal

- During AVI/DVD, CD or VCD playback, press FWD to forward.
- The disc at 2, 4, 8 and 20 times speed.
- Press PLAY to resume normal playback.



Press RAN play disc randomly

## **REMOTE CONTROL OPERATION**

### **MUTE**

- Press MUTE to turn off the audio.
- Press MUTE again to resume normal sound.

### **L/R**

During VCD/SVCD playback, press L/R repeatedly to select the channel of audio output: Mono L / Mono R / Auto LIAuto R / Stereo.

### **CLEAR**

Press CLEAR to delete the numbers you have entered when programming.

### **PAUSE**

Press PAUSE during playback to pause playback.

### **PLAY**

Press PLAY to start playing.

### **STOP**

- Press STOP once during playback to stop and hold playback.
- Press PLAY to resume playback from the point you have pressed

## STOP

 
Press STOP twice to stop playback completely.

## RETURN

When the PBC is on, press return and you can select once again from the menu displaying. This function is only available to DVD.

## ZOOM

During VCD/SVCD/DVDAVI playback, press ZoOM to magnify the image as follow.

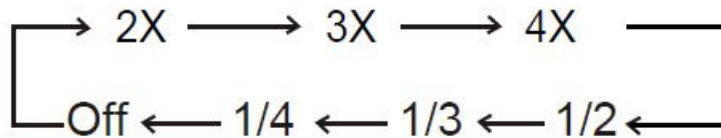

## STEP

- When playing AVI/DVD,vCD,SVCD disc press STEP once, the picture changes to next frame.
- Press PLAY to resume normal play.

## SETUP

- Press the SETUP button on you remote control to access the setup menu.
- The setup menu is a Multi level Menu.
- Use the or buttons to select the menu option that you need.
- Use the and to go back to previous level menu or to enter the next level menu.
- Press ENTER button to confirm selection.
- Press sETUP button to exit setup.

## VOL

Press VOL + to increase the volume. Press VOL – to reduce the volume.

## SUBTITLE

During DVD playback Press SUBTITLE repeatedly to select from up to 32 subtitle languages.

## Note

This function is disc specific language will vary.

## ANGLE

- During DVD playback.
- Press ANGLE to view scenes from different camera angles.
- Press ANGLE repeatedly to change from one camera angle to another.

- Note: This function is disc specific.

## LANGUAGE

LANGUAGE Press repeatedly to select from up to 8 audio languages/formats during DVD playback. Press repeatedly to select from up to 4 audio languages/formats during SVCD playback.

## GOTO

### DVD disc

Press GOTO to select CHAPTER, TITLE or TIME, and you need to press it several times to switch CHAPTER, TITLE or TIME, when you insert number key, it will turn to desired item.

### VCD disc

Press GOTO to select TRACK, TIME or DISC TIME, and you need to press it several times to switch TRACK, TIME or DISC TIME, when you insert number key, it will turn to desired item.

## PROG

Press PROG to get program menu when reading DVD & VCD, then program your wanted songs. (DVD programme needs TITLE and MENU.

## TROUBLE SHOOTING

Should your DVD player develop a problem, please check below before requesting service

Symptom	Check and Action
Cannot SKIP or SEARCH	<ul style="list-style-type: none"> <li>• Some discs are programmed that do not allow users to SKIP or SEARCH at some sections, especially at the beginning WARNING section.</li> <li>• Single Chapter disc cannot apply SKIP function.</li> </ul>
No sound or sound output not complete	<ul style="list-style-type: none"> <li>• Check if the TV and Amplifier have been switched on, and correctly set.</li> <li>• Check if the TV and Amplifier system connection is secured.</li> <li>• Press LANGUAGE button to select other audio tracks output of disc.</li> <li>• Check if the MUTE function of the TV or Amplifier has been activated.</li> <li>• There will be no sound output during PAUSE / STEP / SLOW and SEARCH.</li> </ul>
MP3 disc no sound or noisy	<ul style="list-style-type: none"> <li>• When PC program files or other data files are mixed with MP3 files in the same disc, the player may play the non-MP3 files with noise or no sound.</li> <li>• Check the disc, if all the files on disc are MP3 files Skip the file, try other files.</li> </ul>
Remote control does not function	<ul style="list-style-type: none"> <li>• Remove the obstacles between the remote control and the player.</li> <li>• Point the remote control towards the remote sensor on the player.</li> <li>• Check if the batteries of the remote control have been loaded with correct polarities.</li> <li>• Replace the batteries of the remote control.</li> </ul>

## CAUTION

To reduce the risk of fire and electric shock, do not remove the cover (or back) of the unit.

## WARNING

RISK OF ELECTRIC SHOCK .DO NOT OPEN.

 
Symptom	Check and Action
No Power	<ul style="list-style-type: none"><li>• Check if the power cord has been properly connected to the power outlet.</li><li>• Check if the main power has been switched on.</li></ul>
Does not play	<ul style="list-style-type: none"><li>• No disc, load a disc.</li><li>• Disc has been loaded upside down. Place the disc with the label side up.</li><li>• Disc's region code does not match to the player.</li><li>• Disc is not correct type for player.</li><li>• Disc is damaged or dirty, clean the disc or try another disc.</li><li>• Moisture may be condensed inside the player. Remove the disc and leave the unit power on for one or two hours.</li></ul>
No Picture	<ul style="list-style-type: none"><li>• Check if the TV set has power on, use TV remote to select A/V signal for DVD rather than broadcast.</li><li>• Check if the system connection is proper and secure.</li><li>• Check if the connection cables are damaged.</li><li>• Clean the disc.</li></ul>
Picture noise / distorted	<ul style="list-style-type: none"><li>• The disc is dirty or damaged, Clean the disc or try another disc.</li><li>• Reset the color system of the player or the TV set.</li><li>• Try to direct the player to the TV set instead of via other components, such as a VCR.</li></ul>
Picture not full screen	<ul style="list-style-type: none"><li>• Select the screen format from the player's SETUP MENU, see "SETUP MENU " of this manual.</li><li>• Select the screen format from DVD disc menu.</li></ul>
Malfunction	<ul style="list-style-type: none"><li>• Should the player develop a malfunction, unplug the player for 30 minutes. After 30 minutes, power on the player and the restore function should reset the player.</li></ul>

## SPECIFICATIONS

Type of Disc	DVD CD-DA CD-MP3 Kodak Picture CD CD-R / CD-RW
Video Format	MPEG 2
Audio Format	MPEG 1, LAYER 1, LAYER 2, LAYER 3
Signal Output	Color System: NTSC Audio System: DIGITAL down mix stereo DIGITAL digital output Audio DAC 16bit/48KHz  Video Output: 1 Vpp (at 75 ohm) Audio Output (Stereo): 2 Vpp
Frequency Response	CD: 4Hz 20KHz (EIAJ) DVD: 4Hz 22KHz (48K) 4Hz 44KHz (96K)
S/N ratio	> 92 dB
Output Terminals	Video (composite) output X1 2.0CH output X1 Component YUV(Y,Cb,Cr) output X1 Coaxial digital signal output X1
Power Supply	AC 100-240V~ 50/60Hz
Dimensions	DVD size : W225xD202xH48mm

For service assistance and product information, please call: 1-800-968-9853. Curtis International Ltd. 7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 [www.curtisint.com](http://www.curtisint.com)

## Documents / Resources

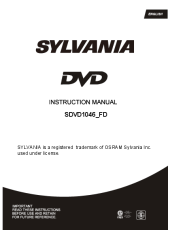	<p><a href="#">SYLVANIA SDVD1046 Progressive Scan Auto Load Compact DVD Player</a> [pdf] Instruction Manual</p> <p>SDVD1046, Progressive Scan Auto Load, Compact DVD Player, DVD Player, Scan Auto Load</p>
---	---

## References

- [Curtis International - Affordable TVs, electronics and appliances](#)