



SYLVANIA SRCD1075BT CD PLAYER FM RADIO BLUETOOTH-LED DISPLAY Owner's Manual

[Home](#) » [SYLVANIA](#) » SYLVANIA SRCD1075BT CD PLAYER FM RADIO BLUETOOTH-LED DISPLAY Owner's Manual 

Contents

- 1 SYLVANIA SRCD1075BT CD PLAYER FM RADIO BLUETOOTH-LED DISPLAY
- 2 SAFETY INSTRUCTION
- 3 Control Location (Top & Front View)
- 4 Control Location (Rear View)
- 5 Power Connection
- 6 Battery Operation
- 7 CD Operation
- 8 Loading disc
- 9 CD playback
- 10 Bluetooth Operation
- 11 Radio Operation
- 12 AUX IN Operation
- 13 Specifications
- 14 FCC Statment
- 15 Documents / Resources
 - 15.1 References
- 16 Related Posts

SYLVANIA

SYLVANIA SRCD1075BT CD PLAYER FM RADIO BLUETOOTH-LED DISPLAY



SAFETY INSTRUCTION

CAUTION

- **RISK OF ELECTRIC SHOCK DO NOT OPEN A CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
- **LASER SAFETY:** This unit employs a laser. Only qualified service personnel should attempt to service this device due to possible eye injury
- **CAUTION:** USE OF CONTROLS, ADJUSTMENTS, OR PERFORMANCE PROCEDURES HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE
- **DANGEROUS VOLTAGE:** The lightning flash with the arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
- **ATTENTION:** The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
- **DANGER:** Invisible and hazardous laser radiation when open and interlock failed or defeated. Avoid direct exposure to the beam. This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

SURGE PROTECTORS:

It is recommended to use a surge protector for AC connection. Lightning and power surges ARE NOT covered under warranty for this product

INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit. For example, this unit may not have the capability to be connected to an outdoor antenna

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long period of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This apparatus shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
16. The mains plug is used as a disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus completely, the main plug should be disconnected from the main socket outlet completely.
17. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.

18. OUTDOOR ANTENNA GROUNDING

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electric Code, ANSI/NFPA 70, provides information With respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna discharge product, connection to grounding electrodes and requirements for grounding electrodes

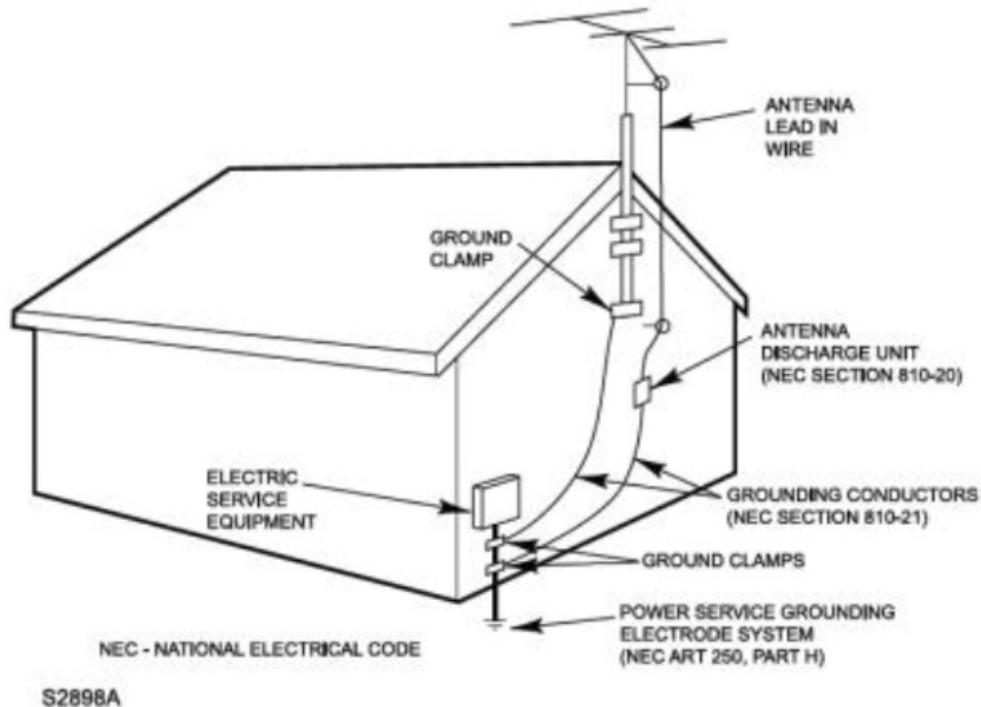

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

19. SERVICING

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

20. REPLACEMENT PARTS

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

21. SAFETY CHECK

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

22. WALL OR CEILING MOUNTING

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

23. DAMAGE REQUIRING SERVICE

Unplug the product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid had been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls

that are covered by the operating instructions, as an adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.

e. If the product has been dropped or the cabinet has been damaged.

f. When the product exhibits a distinct change in performance this indicates a need for service.


24. **HEAT**


The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

25. **NOTE TO CATV SYSTEM INSTALLER**


This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practica

Control Location (Top & Front View)

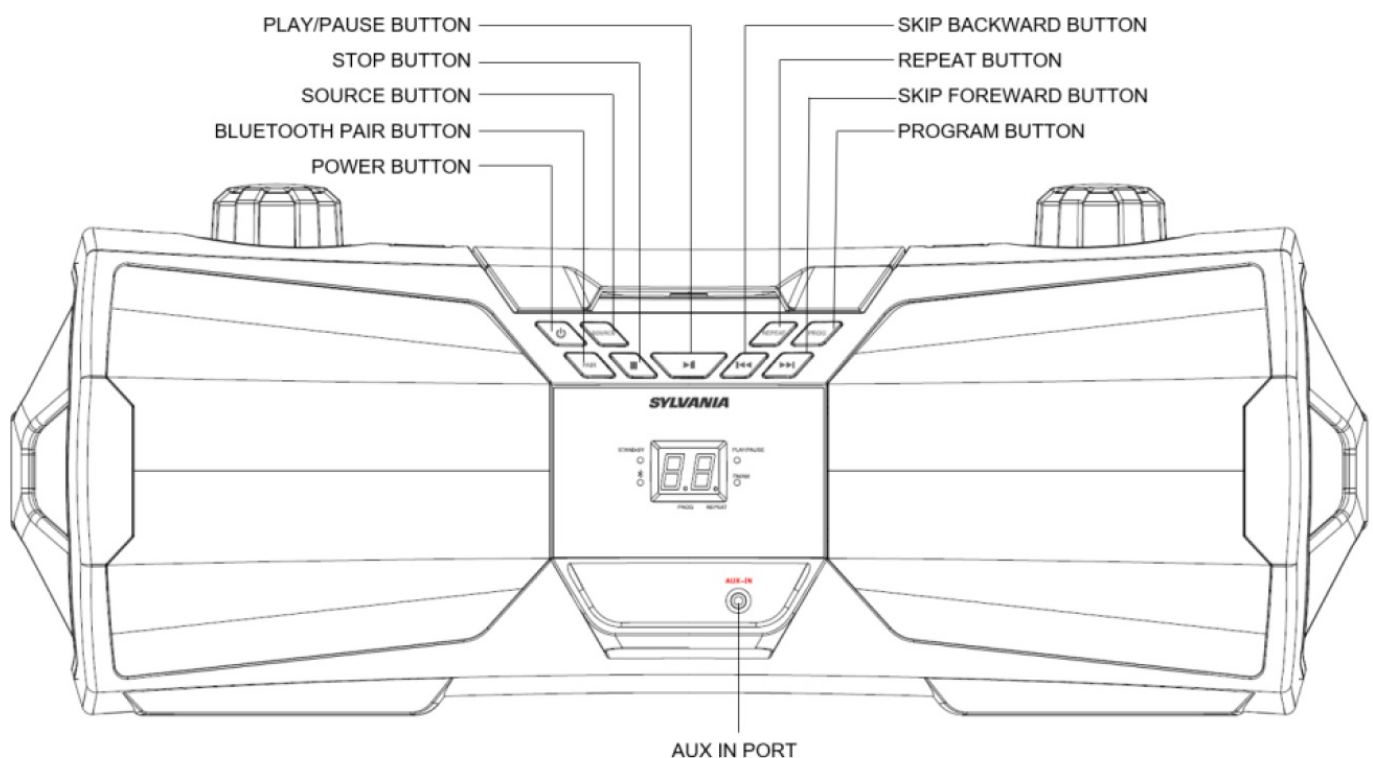

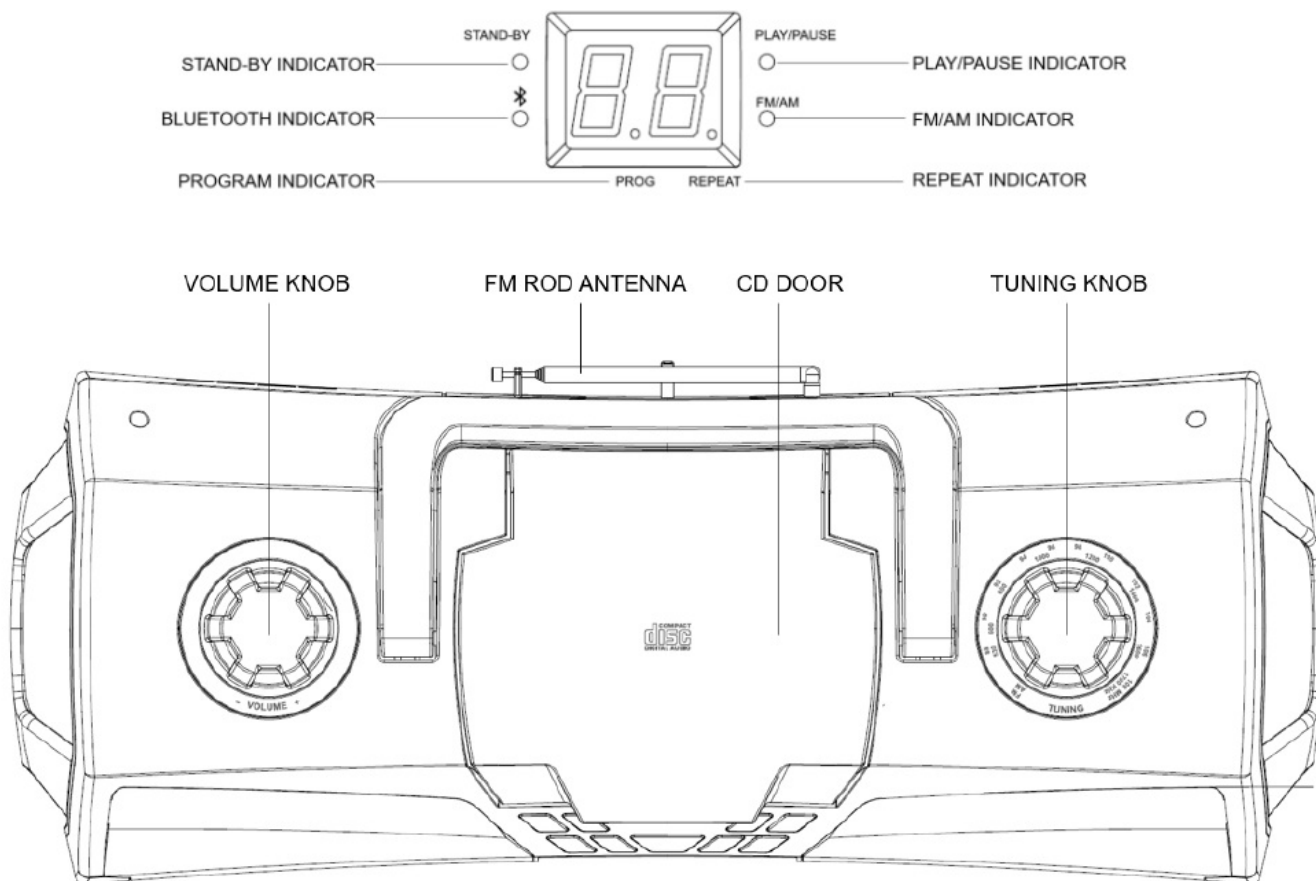

Control Location (Rear View)

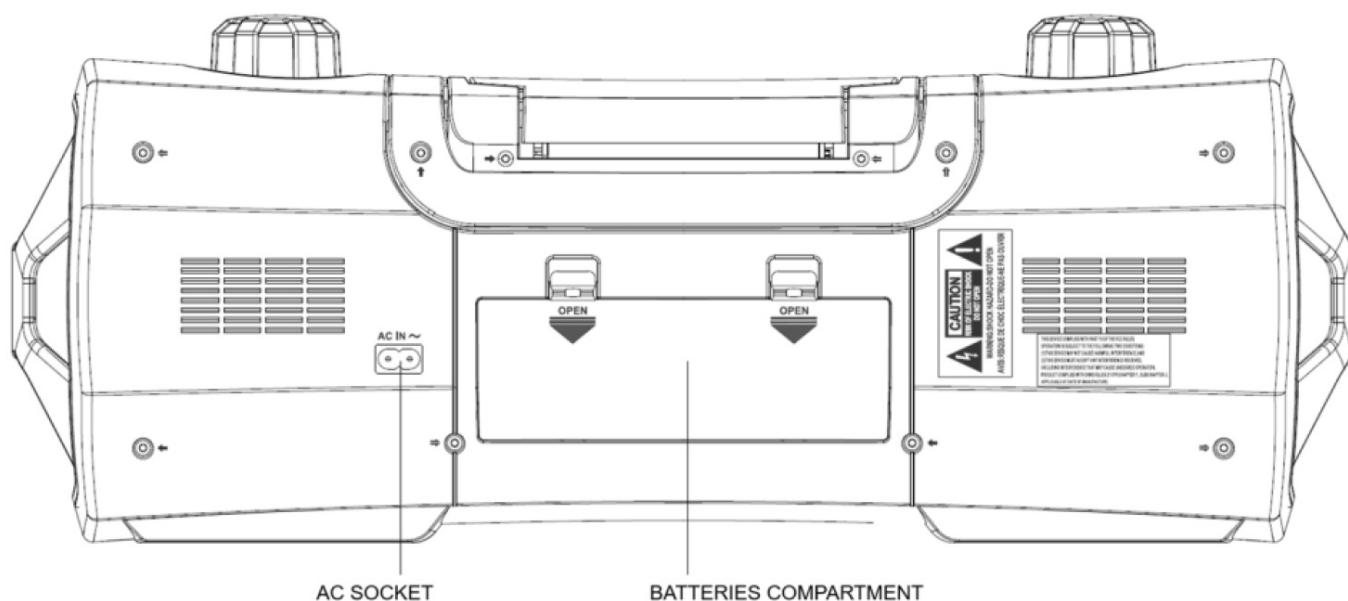


Power Connection


Connecting AC Power

Connect the small end of the AC cord to the socket at the back of the main unit and insert the plug of the AC cord into the standard AC wall outlet.

Caution: The unit is designed to operate from the main supply of AC 120V~60OHZ. If the plug of the AC cord does not fit properly, try to turn it over and try again. Do not force it. When the unit is intended for being unused for a long period of time. Please press the STANDBY button to turn off the unit and unplug the power cord from the AC wall outlet. AC

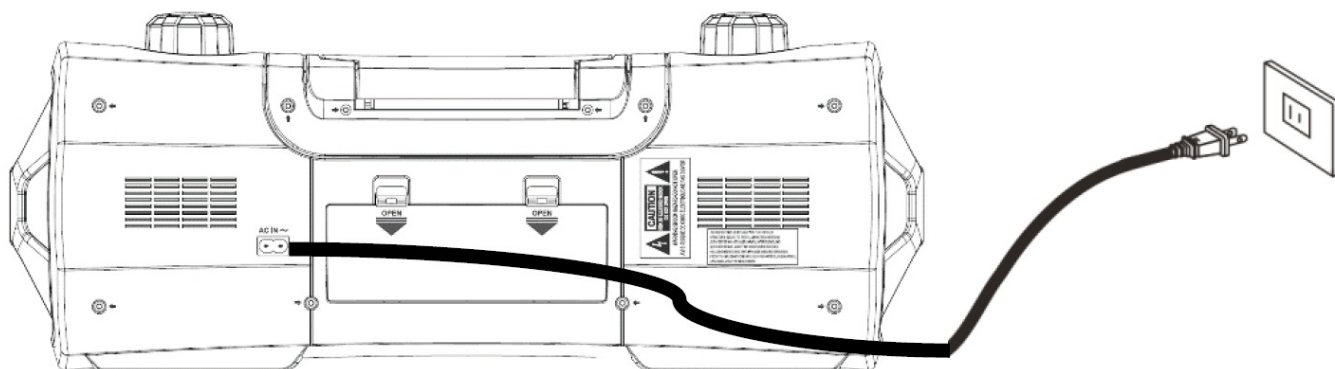

BATT. SUPPLY: UM-2 / LR14 / SIZE "C" 1.5V x 6

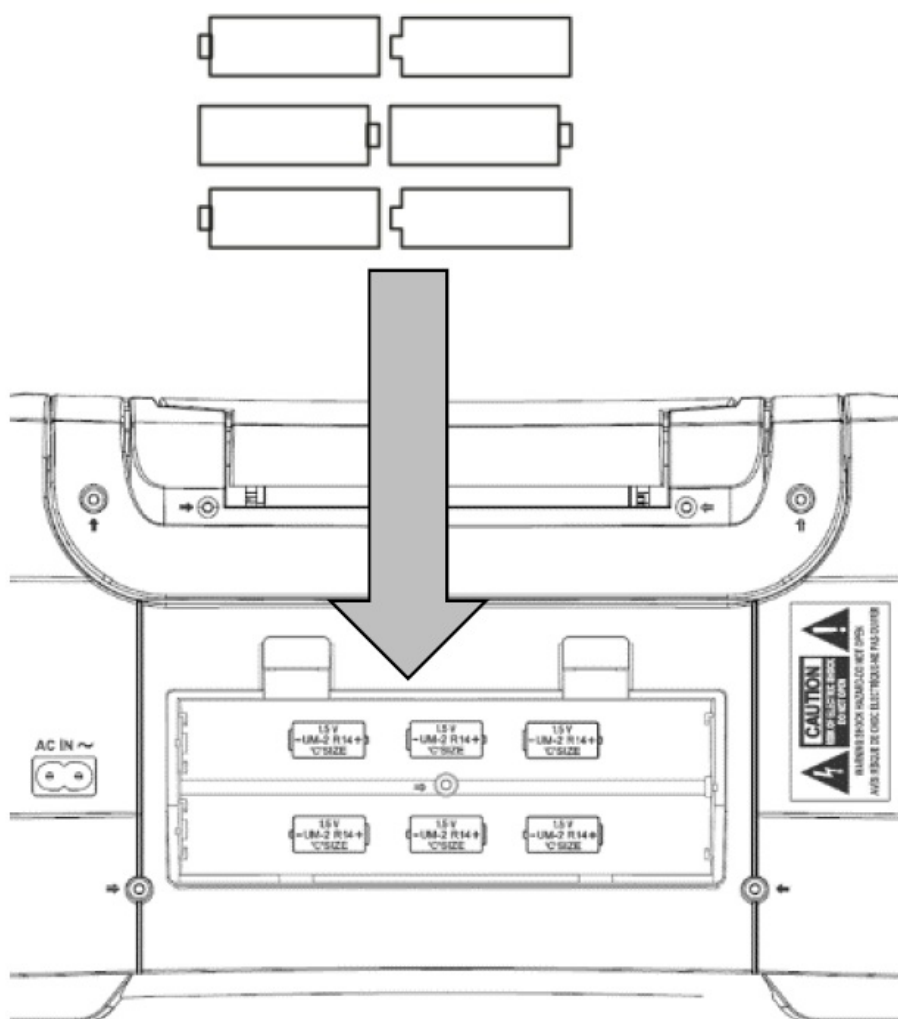

Battery Operation

Before installing batteries (not included), ensure that the unit is disconnected from the main supply. Remove the battery compartment cover on the bottom of the unit by sliding the battery cover in the opening direction indicated on the battery cover. Install 6 pieces of 1.5V (UM2) batteries (not included) by following the polarity markings and then replace the cover. For battery operation, unplug the AC cord from the AC wall outlet first and then remove the AC cord from the socket at the back of the main unit.

Caution:

There is a danger of explosion if batteries are replaced incorrectly. Replace batteries with the same type and same brand only. When the unit is intended for being unused for a long period of the time, press the POWER

button to turn OFF the unit and remove all batteries from the main unit

- **Switching On for the first time**

Plug into AC power or install batteries by following the instructions in the previous Power Connection section. The STANDBY indicator will lit. Press the STANDBY button to turn on the unit. The STANDBY indicator will be lighted off. To turn the unit off, press the STANDBY button again to turn the unit off.

- **Switching between different sources (AM/FM/CD/BLUETOOTH)**

After turning on the unit, press, and toggle the FUNCTION switch to select different sound sources.

- **Adjusting the sound volume level**

After turning on the unit, turn the VOLUME knob to adjust the level of sound volume.

- **Adjusting the rod antenna**

The aerial should be extended to ensure good reception in both FM radio modes. It may be necessary to adjust the position of the unit and /or aerial position to achieve the best signal reception.

CD Operation

The unit is designed to play normal music CD discs bearing the correct identification logo. If the disc does not confirm the standard, it may not be played back properly

Caution:

- Playback of CD-R / CD-RW may depend on recording conditions.
- Do not attach a seal or label to either side (the recordable side of the labeled side) of a CD-R/ RW disc. It may cause malfunction.
- Do not load a blank CD-R/ RW disc. It will take over 1 minute to read the disc.
- The disc may be damaged if you try to open the CD Door while reading the disc. CD-ROM, CD-I, CDV, VCD, DVD or computer CDs are not possible to be read.

Loading disc

1. Press and toggle the FUNCTION button to switch to CD mode.
2. Press down the OPEN/CLOSE AREA on the CD door on the top of the unit to unlock and open the CD door.
3. Hold the CD disc by its edge with CD graphical side facing up and put it onto the CD compartment after the CD door is opened. Make sure that the disc label is facing up.
4. Close the CD door and make sure the VOLUME knob is not in minimum position

CD playback

After loading the disc, the disc will begin spinning and the total number of the tracks on the disc will be shown on the display, and the first track/file on the CD will be played back automatically

Remark:

- If there is no disc in the unit, "NO" will be indicated on the display.
- If the CD cannot be read, "NO" will be indicated on the display.

Play/Pause Control

To pause playback temporarily by pressing the PLAY/PAUSE button. Music playback will be paused and the current elapsed track number will be shown on the display and the play icon will be blinking. Press the PLAY/PAUSE button again to resume playback.

Stop playback

To stop playback, press the STOP button on the unit. The total number of tracks of the disc will be displayed.

Skip track

During playback, press the forward or backward SKIP buttons to skip to the next or previous tracks.

High-speed music search

During playback, press and hold the forward or backward SKIP buttons to skip/search through the current track at high speed in forwarding or backward directions. When the SKIP buttons are released, the normal playback speed will be resumed immediately.

Repeat playback modes (Repeat 1 / Repeat all)

Repeat the Current Track

During playback, press the REPEAT button once to repeat the current CD track.

Repeat All Tracks

During playback, press the REPEAT button twice to repeat the entire album.

Return to normal playback

Press the REPEAT button until NO repeat indicator is displayed. The normal playback will be resumed.

Programmed CD playback

This unit can be programmed to play up to 20 tracks in CD mode. Load the music CD disc onto the CD compartment (without pressing the "PLAY/PAUSE" button

1. Press the PROGRAM button once in the stop mode. "P01" will be shown on the display and blinking.
2. Press the SKIP buttons to select the desired track to be programmed.
3. Press the PROGRAM button again to save the selected tracks/files.
4. Repeat steps 2-3 to program up to 20 tracks.
5. Press the PLAY/PAUSE button to play the programmed tracks after programming is completed. The "PROG" indicator will light.
6. To clear the program and resume normal playback, press the STOP button twice during playback, open the CD door, or change to the next mode to clear the programmed tracks

Remark

The unit can store up to 20 tracks in the programmable memories. During the programmed playback, the user can still select the "repeat 1 / repeat all" functions.

Bluetooth Operation

If the unit has never been paired with a Bluetooth device before, you need to follow the pairing instructions below to link the SRCD1075BT with your Bluetooth device.

- Press the POWER button to turn on the unit.
- Press and toggle the FUNCTION button to select Bluetooth mode. The unit will search the paired device with the "BLUETOOTH" Indicator lit.
- Press and hold the STOP/PAIR Button for 4~5 seconds. Then the "BLUETOOTH" Indicator is flashing, the unit will go into Pairing/Discoverable mode.
- Turn on the Bluetooth function of your Bluetooth device and enable the search or scan function to find the unit.
- Select "SRCD1075BT" from the device list when it appears on your device screen. If required, enter the passcode "0000" to pair (link) the unit with your device.
- After successfully pairing (linking) the Bluetooth-enabled device the "BLUETOOTH" Indicator steadily and a

short beep will hear.

Note: If you can't pair the unit with your Bluetooth-enabled device, you can try to turn Off & On the power of your unit to solve the problem

Radio Operation

The unit is designed to receive FM Stereo / FM and AM radio bands.

1. Switch and toggle the FUNCTION button on the top of the unit to switch to AM or FM mode.
2. Adjust the TUNING knob on the top of the unit to tune the frequency of desired radio station.
3. To turn off the unit power, press the STANDBY button to switch off the unit

AUX IN Operation

Setting up (AUX IN) connection

AUX-IN jack will allow you to connect an external music player or external sound source to the main unit.

1. Turn on the unit and slide the function switch to CD/AUX.
2. Plug into a 3.5mm audio cable (not included) into your external music player and connect the other end (3.5mm jack) to the AUX IN jack on the top of the unit.
3. Make sure your external music player is turned on and start music playback on the music player
4. Adjust VOLUME knob to control the sound level of music playback from the speakers on the unit

Specifications

- **Power Output** 1.5 watt RMS x 2 channels
- **AC Power** AC120V~60Hz
- **Battery Size** UM-2 or C-Size batteries x 6 PCS
- **Radio Frequency** FM: 87.5 – 108MHz, AM: 520- 1710 kHz

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853. 90-day Warranty This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace it with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us. This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase, is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz). We exclude all claims for special, incidental, and consequential damages caused by the breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you. For faster service, locate the model, type, and serial numbers on your appliance.

FCC Statment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

For service assistance and product information, please call 1-800-968-9853. Curtis International Ltd. 7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

Documents / Resources

 <p>SYLVANIA MODEL NO. SRCD1075BT PORTABLE CD PLAYER WITH AM/FM RADIO, BLUETOOTH AND LED DISPLAY OWNER'S MANUAL</p> <p>PLEASE READ BEFORE USING THIS UNIT <small>©2014 Sylvania Inc. All rights reserved. Sylvania, the Sylvania logo, and other marks are trademarks of Sylvania Inc.</small></p>	<p>SYLVANIA SRCD1075BT CD PLAYER FM RADIO BLUETOOTH-LED DISPLAY [pdf] Owner's Manual</p> <p>SRC1075BT CD PLAYER FM RADIO BLUETOOTH-LED DISPLAY, CD PLAYER FM RADIO B LUETOOTH-LED DISPLAY, BLUETOOTH-LED DISPLAY, LED DISPLAY</p>
--	---

References

- [Curtis International - Affordable TVs, electronics and appliances](#)