



SYLVANIA SRCD804BT-B CD Microsystem Instruction Manual

[Home](#) » [SYLVANIA](#) » SYLVANIA SRCD804BT-B CD Microsystem Instruction Manual 

Contents

- [1 SYLVANIA SRCD804BT-B CD Microsystem](#)
- [2 FCC](#)
- [3 SAFETY INSTRUCTIONS](#)
- [4 LOCATION OF CONTROLS](#)
- [5 Locations of Remote Control](#)
- [6 RADIO OPERATION](#)
- [7 HANDING A COMPACT DISC](#)
- [8 PROGRAM FUNCTION](#)
- [9 PLAYING MUSIC VIA USB](#)
- [10 90 day Warranty](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

SYLVANIA

SYLVANIA SRCD804BT-B CD Microsystem



The picture is only provided for reference. Please refer to the actual unit!
SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.
For service assistance and product information, please call: 1-800-968-9853. Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

FCC

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

SAFETY INSTRUCTIONS

The lightning flash with an arrowhead symbol, with an equilateral triangle, is intended to alert the user of the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions. In the literature accompanying the appliance.

b: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE APPLIANCE TO RAIN OR MOISTURE.

SAFETY INSTRUCTIONS

THESE IMPORTANT SAFETY INSTRUCTIONS ARE INCLUDED, AS APPLICABLE TO THE APPLIANCE, CONVEYING TO THE USER THE INFORMATION ITEMIZED BELOW

1. Read instructions-All the safety and operating instructions should be read before the appliance is operated.
2. Retain instructions-The safety and operating instructions should be retained for future reference.
3. Head VWarnings-All warnings and cautions on the appliance and in the operating instructions should be adhered to.
4. Follow instructions-All operating and use instructions should be followed.
5. Water and Moisture-The appliance should not be used near water, e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool or the like.
6. Ventilation-The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings, or placed in a built-in installation, such as a bookcase or cabinet, that may impede the flow of air through the ventilation openings.
7. Heat-The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.. Power Sources-The product should be operated only with the type of power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operation instructions.
8. Grounding Polarization-This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way this is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
9. Power-Cord Protection-Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
10. Cleaning-The appliance should be cleaned only as recommended by the manufacturer.
11. Nonuse periods-The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
12. Object and Liquid Entry-Care should be taken so that objects do not fall and liquids are not spilled into the product case through product openings.
13. Damage Requiring Service-Unplug this product from the wall outlet and take it to qualified service personnel

 
under the following conditions.

1. when the power-supply cord or plug is damaged.
2. If liquid has been spilled into, or objects have fallen into the product.
3. if the product has been exposed to rain or water.
4. If the product does not operate when used according to the operating instructions.

Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may interfere with the product's normal operation.

14. If the product has been dropped or damaged in any way.
15. when the product exhibits a distinct change in performance-this indicates a need for service.
16. Servicing-The user should not attempt to service the product beyond that described in the operating instruction.
All servicing should be referred to qualified service personnel.
17. Power Lines-An outside antenna system should not be located in the vicinity of overhead power lines, or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching power lines or circuits as contact with them might be fatal.
18. If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static. Section 810 of the National Electrical Code ANSVNEFA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding conductors, location of antenna-discharge unit, size of grounding electrodes, and requirements for the grounding electrode (see figure).
19. Cleaning-Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
20. Lightning-For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
21. Safety Check-Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operation condition.
22. Overloading-Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

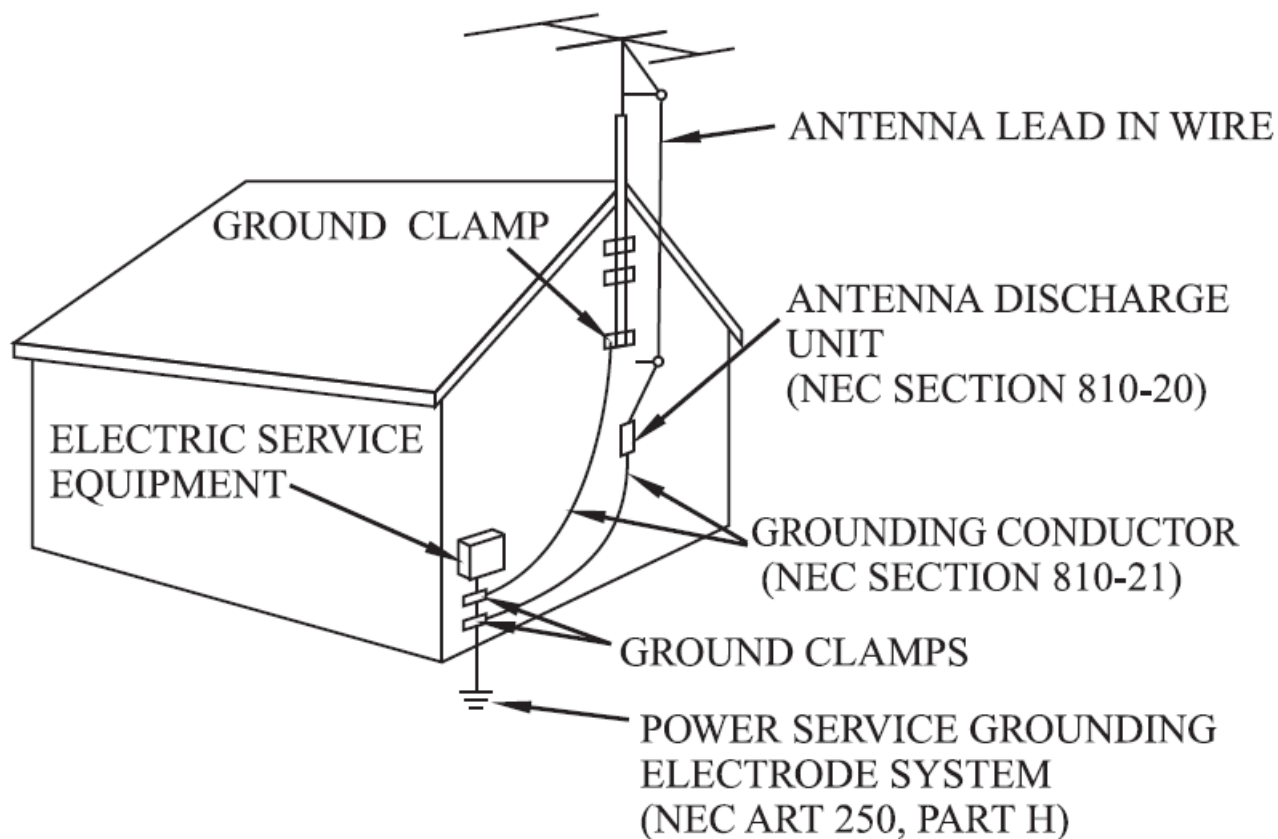

NEC NATIONAL ELECTRICAL CODE

 
Do not apply oil or petroleum products to this product.

CAUTION

Invisible laser radiation will be emitted when the product is open and interlocks are defeated. Do not defeat the safety interlocks.

GRAPHIC SYMBOLS WITH SUPPLEMENTARY MARKINGS ARE LOCATED ON THE BOTTOM OF THE UNIT. USE OF CONTROLS, ADJUSTMENTS, OR PERFORMANCE PROCEDURE HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

LOCATION OF CONTROLS

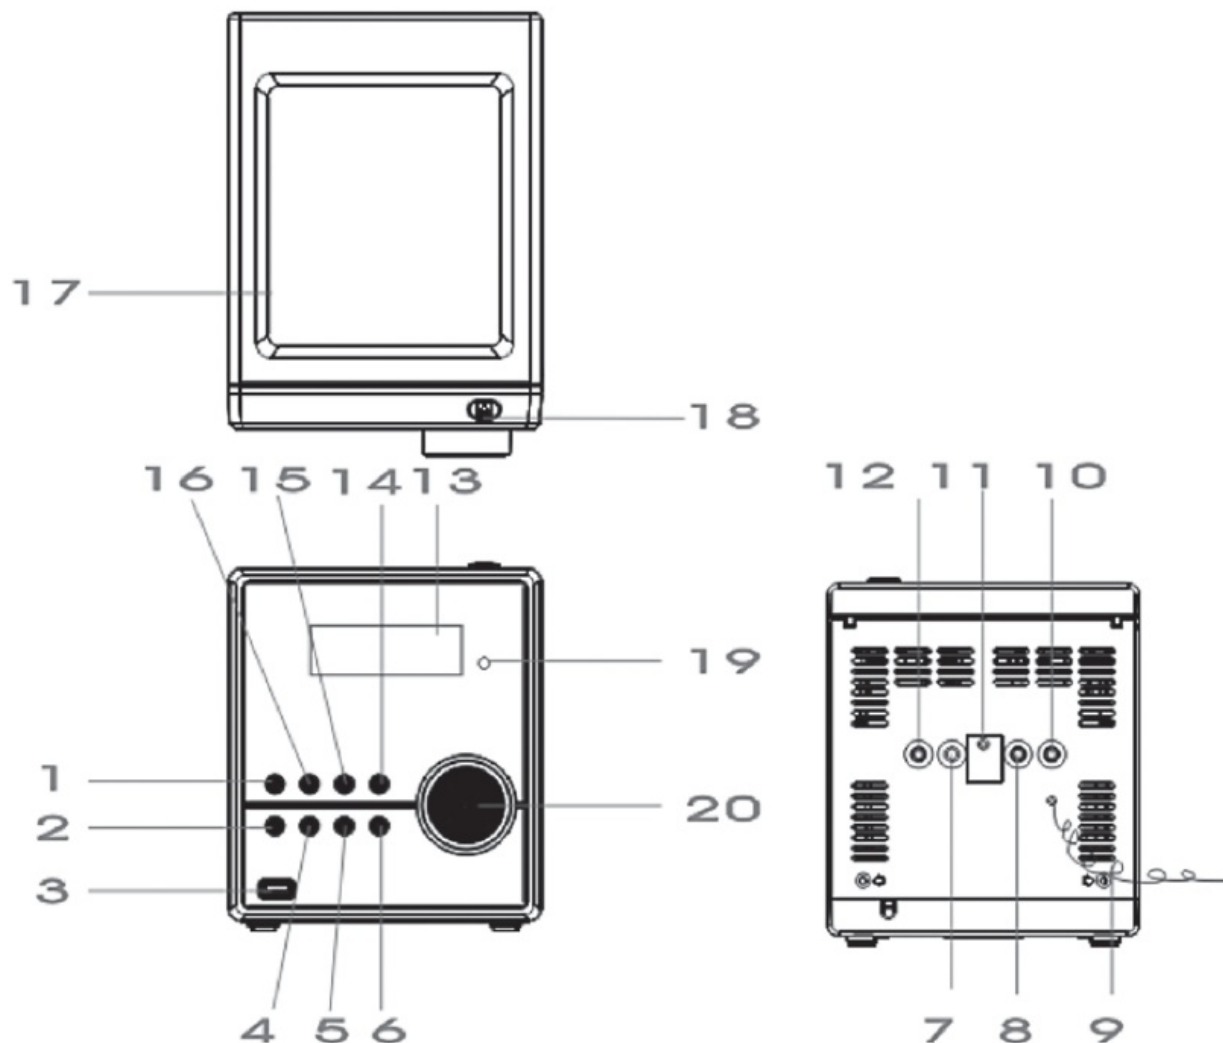


1. PLAY/PAUSE/M- BUTTON
2. SKIP- button
3. USB PORT
4. SKIP+ button
5. CLOCK/SLEEP BUTTON
6. FUNCTION BUTTON
7. PHONE JACK
8. Right speaker jack
9. FM antenna
10. Left speaker jack
11. DC jack
12. AUX jack
13. LCD display
14. STANDBY button
15. PLAY MODE/PROG/MEM button
16. STOPI M+ button
17. CD Door
18. CD Door open button

19. REMOTE SENSOR

20. Volume control

 Locations of Remote Control

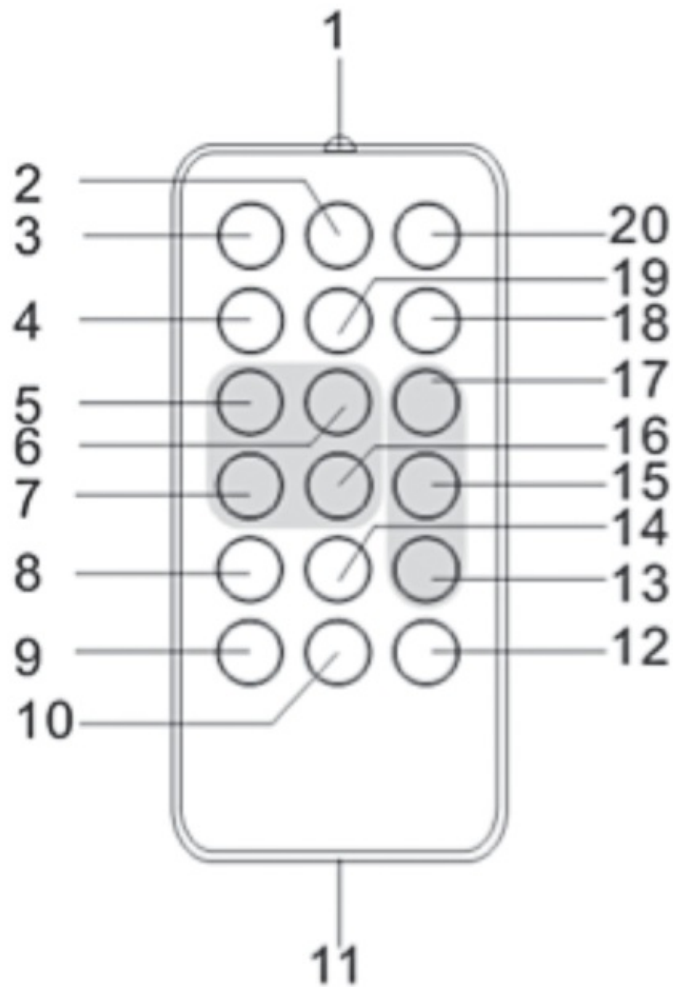

1. TRANSMITTER

2. PLAY MODE BUTTON

3. POWER BUTTON

4. MEMORY BUTTON

5. STOP BUTTON

6. PLAY/PAUSE BUTTON

7. SKIP-BUTTON

8. CLOCK BUTTON

9. SLEEP BUTTON

10. SCAN BUTTON

11. BATTERY DOOR

12. PROG BUTTON

13. MUTE BUTTON

14. ST BUTTON

15. VOL- BUTTON

16. SKIP+ BUTTON

17. VOL + BUTTON
18. MEM + BUTTON
19. MEM – BUTTON
20. FUNCTION BUTTON

Unit Power Supply

This unit is designed to operate on wither AC/DC adaptor.

Operation with AC/DC Adaptor

- Insert the small plug of adaptor into the DC Jack.
- Insert the AC/DC adaptor in to any convenient having AC~100-240V 50/60Hz household outlet in vertical or horizontal direction.

TO SET THE CLOCK TIME

In Standby off mode.

1. Press and hold the CLOCK/SLEEP BUTTON on the unit or CLOCK BUTTON on the remote, the digit 24H or 12H will blink on the display, then press SKIP+ / SKIP- button to desired 24H 12H, and press the CLOCK/SLEEP BUTTON on the unit or CLOCK BUTTON on the remote to confirm
2. Then press the SKIP+ / SKIP- Button to set the desired HOUR,
3. Then press the CLOCK/SLEEP BUTTON on the unit or CLOCK BUTTON on the remote again, the MINUTE will blink.
4. Press the SKIP+/SKIP- Button to set desired MINUTE.
5. Press the CLOCK/SLEEP BUTTON on the unit or CLOCK BUTTON on the remote to confirm

TO adjust the volume

- Rotate the volume control knob clockwise Or press the vol + button on remote control to increase the volume.
- Rotate the volume control knob anti-clockwise Or press the vol – button on remote control to decrease the volume.
- Check the display to confirm the volume setting.

Mute function

Press the mute button on remote control to mute the volume. Press it again to cancel the mute function.

RADIO OPERATION

1. Press the STANDBY button on the unit then press the FUNCTION button repeatedly, until the frequency shown on the display OR, press the STANDBY button on the remote to turn on the unit, then press the FUNCTION button on the remote until the frequency shown on the display
How to use the buttons for radio

2. Manual Tuning

1. Press the SKIP+ / SKIP- button to search for desired frequency.

3. Automatic Tuning

1. Press and hold the SKIP+ / SKIP- button until the display frequency starts run. in) When a station of sufficient strength has been found Tuning will stop or you can stop the automatic tuning by pressing SKIP+ / SKIP- button.
4. To switch off the radio, press the STANDBY button on the remote once OR press the STANDBY button on the unit, until the normal time shown on the display

PRESET TUNING

1. Select your desired station according to the normal tuning procedure.
2. Press the MEMORY button, "P01" will appear and flash in the LCD, Then use SKIP+ / SKIP- button to change the number where the station will be stored. (PO1 to P20)
3. Store the current frequency by pressing MEMORY button again when you get the desired number.
4. Repeat the same procedure to set other desired frequencies into Memory No.1 to NO.20

Note: The unit can be preset up to 20 stations.

MEMORY RECALL

Recall the stored frequencies by pressing M- or M+ button to select 1 to 20 stations as desired

Bluetooth mode

You should follow several steps to connect your mobile phone

1. Activate Bluetooth from your mobile phone (please refer to your phone's user's manual)
2. Press the STANDBY BUTTON to turn on the unit, then press FUNCTION BUTTON repeatedly till "bt" indicator appears on LCD display. it will be ready to pair automatically.
3. Use your mobile phone to search Bluetooth device with the name of "Syl SRCD804BT-B".
4. Your mobile phone will find "Syl SRCD804BT-B", and will have options to connect or not. Please connect it with the password of "0000" (if any). When you successfully connect it, the Bluetooth indicator "bt" stop flashing on LCD display.

Connecting with your phone Automatically

Pairing is only needed the first time the unit and phone are used together. When the unit and phone have been paired once they will automatically connect when the unit is on and Bluetooth is activated on the phone. The next time you power on, the unit will automatically connect the latest phone that you connected.

Play from Bluetooth device

After successful Bluetooth connection, press the PLAY/PAUSE/M- button to play, Press SKIP or SKIP + button to skip the tracks backwards or forwards. To pause or resume play, press PLAY/PAUSE/M- button again.

HANDING A COMPACT DISC

- Always protect a disc against scratches, soil, dust and etc. If a disc is treated with reasonable care, wiping off

the disc with a soft cloth should be the only maintenance needed to retain its excellent sound reproduction.

Discs should be retained in their original case during periods of non-use.

- Handle a disc only by its edges, Do not touch the surface or rainbow-colored side of the disc
- Handle a disc as shown in the illustrations in this section
- Use a soft cloth to wipe a disc clean. Do not use benzene, thinner, or other chemical cleaners to clean the disc as damage may result. A disc should always be wiped in a straight line from its center to its edge. Never wipe a disc in a circular motion.
- Do not expose a disc to direct sunlight, high humidity, or high temperatures for extended periods of time. Do not place the Disc on other equipment or near any heat source.
- Dust on the pickup lens can lead to erratic operation and interruption of the sound during play.
- To clean the pickup lens, open the disc compartment and blow the dust off. Using a camera lens blower(available at most camera stores)

Note: Do not touch the surface of the lens. Do not allow any liquids on the inside of the product.

- To clean the CD player cabinet, use a soft and damp cloth to wipe off the exterior surface.
- Never use benzol, benzene, or other strong chemical cleaners, as these could damage the finish.

DO:



DO NOT:



PLAYING A COMPACT DISC (CD)

NOTE: Never touch the laser lens inside of the CD compartment. Clean the laser lens with a CD cleaner disc if it becomes dirty.

1. Press the STANDBY button on the unit to turn off the unit then press the FUNCTION button repeatedly, until the CD icon shown on the display OR, press the STANDBY button on the remote to turn on the unit, then press the FUNCTION button on the remote until the CD icon shown on the display
2. Open the CD DOOR by pressing the CD door open button and insert a CD into the tray with printed label side facing up.
3. Close the CD DOOR and the disc will rotate for a few seconds and then play automatically.
4. Use the SKIP+/ SKIP- button to choose a track
5. Press the PLAY/PAUSE/M- BUTTON again to PAUSE play.
6. Press the STOP/M+ BUTTON to STOP play.
7. To turn off the unit, press the STANDBY button on the remote once OR press the STANDBY button on the unit, until the normal time shown on the display

REPEAT FUNCTION

1. Press the PLAY MODE/PROG/MEM button once during playback, the "1" sign will show on LCD Display. The same track will be repeated over and over.
2. Press the PLAY MODE/PROG/MEM button second time to repeat all tracks. The "ALL" sign will show on the







LCD display.

3. To cancel REPEAT PLAY, Press the PLAY MODE/PROG/MEM button repeatedly until the all sign disappeared.

RANDOM PLAY

1. In CD Play mode, press the PLAY MODE/PROG/MEM button until "RAND" will appear on LCD Display.
2. Then it will enable random tracks play.
3. To cancel RANDOM PLAY, press the PLAY MODE/PROG/MEM button again, "RAND" will disappear on the display

REVERSE/FORWARD

1. The CD SKIP-  and CD SKIP+  Buttons can be used to jump to a different track number or to scan disc tracks at high speed.
2. Press the CD SKIP-  button once to hear the beginning of the current track. Press it two or more times to hear previous tracks on the disc.
3. Press the CD SKIP+  button to hear the next track on the disc.
4. Press and hold the SKIP-  Button, the current track will be scanned and move backward to the previous track(s); When the desired track section is found, release the button and normal play will resume.
5. Press and hold the SKIP+  Button, the current track will be scanned and move forward to the next track(s); When the desired track section is found, release the selected button and normal play will resume.

PROGRAM FUNCTION

The Program feature can be used to program up to 20 tracks to play in a selected order.

1. While in the stop mode only (CD is not playing). Press the PLAY MODE/PROG/MEM Button, LCD Display will show the wording "PROG" & "P01".
2. Press the SKIP+ / SKIP- button to allocate the desired track.
3. Press the PLAY MODE/PROG/MEM button to select and store the track in memory.
4. Repeat step 2 to 3 to select up to 20 tracks.
5. To play the selected tracks (in the program mode), press the PLAY/PAUSE/M- button. The "PROG" appears on LCD Display.
6. Press the SKIP- button to hear the previous or press the SKIP+ button to hear the next program track.
Note: After all of the programmed tracks have been played, the CD player will return to the stop mode.
To clear the programmed tracks from memory, press the STOP button until "PROG" disappear.

PLAYING MUSIC VIA USB

This device has been developed in line with the latest technical advances in the USB field. The wide range of different USB storage devices of all types which are currently on the market, unfortunately, does not allow us to guarantee full compatibility with all USB storage devices. For this reason, in rare cases there may be problems in playing back files from USB storage devices.
This is not a malfunction of the device.

1. Press the STANDBY button to turn on the unit then press the FUNCTION button repeatedly until 'USB' is shown on the display
2. Connect a USB storage device directly to the USB port. The display briefly shows the total number of tracks. Playback will automatically start after a few seconds.
3. For operation regarding the control buttons, it is the same as CD play. please refer to CD DISC SECTION operations as described previously.

NOTE:

- Always directly connect a USB storage medium to the USB port to prevent any malfunctions.
- The USB port is not designed for charging external devices.
- **Important:** Switch the device to a different operating mode before you remove the USB storage device.
- program function is invalid for USB play

SLEEP FUNCTION IN POWER-ON MODE

1. Tune in the desired radio station or CD/ aux/ usb/ Bluetooth play mode and adjust the volume control.
2. Press the SLEEP Button. The "90" will appear on the display.
3. Repeatedly press the SLEEP Button on remote control for desired sleep time between 90, 80, 70, 60, 50, 40, 30, 20, 10 minutes.
4. The unit will automatically switch off when the SLEEP time expires.

AUX INPUT JACK

1. Press the STANDBY button to turn on the unit the press FUNCTION button repeatedly, until the "AUX" shown on the display. OR, press the STANDBY button on the remote to turn on the unit, then press the FUNCTION button on the remote until the AUX icon shown on the display.
2. Connect the AUX connect wire from the out jack of your Personal Player such as portable MP3 player to the AUX input jack.
3. Play Start from your Personal Player.

HEADPHONE JACK

- This unit will accept stereo headphones with a o 3.5mm plug. Before connecting the headphones set the volume to a minimum level as not to damage your ears or the headphones.
- Connect the headphones to the headphones jack. The speakers will be automatically disconnected.
Warning: Prolonged exposure to high sound levels may permanently damage your hearing. You may not hear some warning sounds while wearing these headphones.

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

90 day Warranty


This product is warranted to be free from defects in material and workmanship for ninety (90) days from the date

of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace it with a similar one of equal or greater value. Before a replacement is sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase, is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V-60Hz).

We exclude all claims for special, incidental, and consequential damages caused by a breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you. For faster service, locate the model, type, and serial numbers on your appliance.

Documents / Resources

	<p>SYLVANIA SRCD804BT-B CD Microsystem [pdf] Instruction Manual</p> <p>SRCD804BT-B, SRCD804BT-CS1, SRCD804BT-B CD Microsystem, CD Microsystem, Microsystem</p>
---	---