



SYLVANIA SRC894 Bluetooth Retro Turntable with Stand User Manual

[Home](#) » [SYLVANIA](#) » SYLVANIA SRC894 Bluetooth Retro Turntable with Stand User Manual 

Contents

- [1 SYLVANIA SRC894 Bluetooth Retro Turntable with Stand](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 Location of Controls](#)
- [4 Other Connections](#)

SYLVANIA

SYLVANIA SRC894 Bluetooth Retro Turntable with Stand



IMPORTANT SAFETY INSTRUCTIONS

CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE

RECOMMENDED ACCESSORIES ONLY.

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING:

To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

For example, this unit may not have the capability to be connected to an outdoor antenna.

1) Read these instructions.

All the safety and operating instructions should be read before the product is operated.

2) Keep these instructions.

The safety and operating instructions should be retained for future reference.

3) Heed all warnings.

All warnings on the product and in the operating instructions should be adhered to.

4) Follow all instructions.

All operating and use instructions should be followed.

5) Do not use this apparatus near water.

Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool.

6) Clean only with dry cloth.

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

Use a dry cloth for cleaning.

7) Do not block any ventilation openings. Install in accordance with the manufacturer's

instructions.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus

(including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two

blades with one wider than the other. A grounding type plug has two blades and a third grounding

prong. The wide blade or the third prong are provided for your safety. If the provided plug does not

fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles,

and the point where they exit from the apparatus.

11) Only use attachments/ accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

An appliance and cart combination should be moved with care.

Quick stop, excessive force and uneven surfaces may cause the appliance and cart combination to overturn.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.

To protect your product from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture does not operate normally, or has been dropped.

15) Power source

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other source, refer to the operation instructions.

16) Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

17) Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry

Never push objects of any kind into the product through openings as they may touch dangerous voltage points or

short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some

protection against voltage surges and built up static charges. Section 810 of the National Electric Code ANSI/ NFPA

70 provides information with respect to proper grounding of the mast and supporting structure, grounding of

the

lead- in wire to an antenna discharge product,
size of grounding conductors, location of antenna- discharge product,
connection to grounding
electrodes and requirements for the grounding electrodes.

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

3

2

4

) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions.

- a) When the power- supply cord or plug is damaged.
- b) If liquid has been spilled or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or the cabinet has been damaged.
- f) When the product exhibits a distinct change in performance- this indicates a need for service.

2) Note to CATV system installer

This reminder is provided to call the CATV system installer' s attention to Article 820- 40 of the NEC that provides

guidelines for proper grounding and, in particular, specifies that the cable
ground shall be connected to the
grounding system of the building, as close to the point of cable
entry as practical.

NOTE: Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

Location of Controls

Turntable

- A Turntable
- B 45 RPM adapter
- C Lever
- D Tone arm holder
- E Speed selector
- F Tone arm

Front View and Rear View

- 1. AUX IN Jack

2. Headphone Jack
3. PHONO/AUX/FM/
Power Indicator (RED)
4. Function selector
5. Bluetooth Indicator
(BLUE)
6. Radio tuning knob
7. Power ON-OFF/
Volume knob
8. DC IN jack
9. LINE OUT jacks
10. FM antenna

NOTE: Headphone jack can be used to listen privately by headphone(not included).

Machine Feet Installation

1. Turn unit body on either side. 2. Place the unit on a flat, smooth surface. Be careful the cover stays closed. 3. Match the holes on the plastic feet to the holes on unit's bottom. 4. Using a phillips head screwdriver (not included), screw the supplied screws into the unit's bottom, making the legs firm. 5. When finished, turn over the unit, making sure it stands firmly on a flat surface.

Listening through Bluetooth

1. Turn the Power ON-OFF/Volume knob clockwise to power on the unit and set the volume to the desired level. 2. Turn the Function selector to BT position. The color of Bluetooth indicator will turn Blue and blink. 3. Power on the external BT Device and enter to BT searching mode. When the external BT player searched the unit, our model number " SRC894 " will appear on the display of external BT Device. After paired, the Blue indicator will stop blinking, the tone sound of connected will be heard. (For details pairing procedures, please refer to the user's manual of your BT Device.). 4. Play the music in the paired BT Device as usual. 5. During playback, using the control buttons on the paired device to skip the tracks; pause; play...etc.

NOTE: The unit will connect with the last paired device automatically when the unit and the external device are in bluetooth mode and in range.

Listening to the Radio

1. Turn the Power ON-OFF/Volume knob clockwise to power on the unit and set the volume to the desired level. 2. Turn the Function selector to FM position. 3. Turn the Radio tuning knob to receive the desired radio station.

Antenna: If reception is weak, unwind and extend the wire or relocate the wire to improve the radio reception.

Listening to a Record

1. In first time use, take off the protective cover from the stylus as the illustrated below:
2. Place the Record on the center spindle.
3. Slide the Speed selector to 33; 45 or 78 to match the play speed of the record.
4. Unlock the Tone Arm from the holder as the illustrated below:

Note: If you are playing a 45 RPM Single (small size record), place the supplied 45 RPM adapter to the center spindle then place the record on it





5. Power on the unit and turn the Function selector to the PHONO position.



6. 6. Raise the Lever to raising the Tone Arm then move it to the top of the desired location of the record. Release the Lever to put the Tone Arm onto the record. Plays will auto start.
7. 7. When finished playback, the unit will auto stop turning (or you wants to stop immediately); raise the Lever to rising the Tone Arm then put it back to the Holder. Release the Lever then lock the Tone Arm on the Holder.

Other Connections

      
AUX IN:






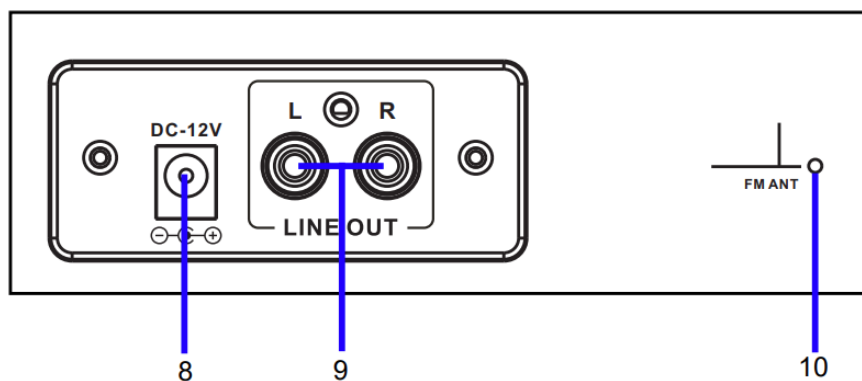
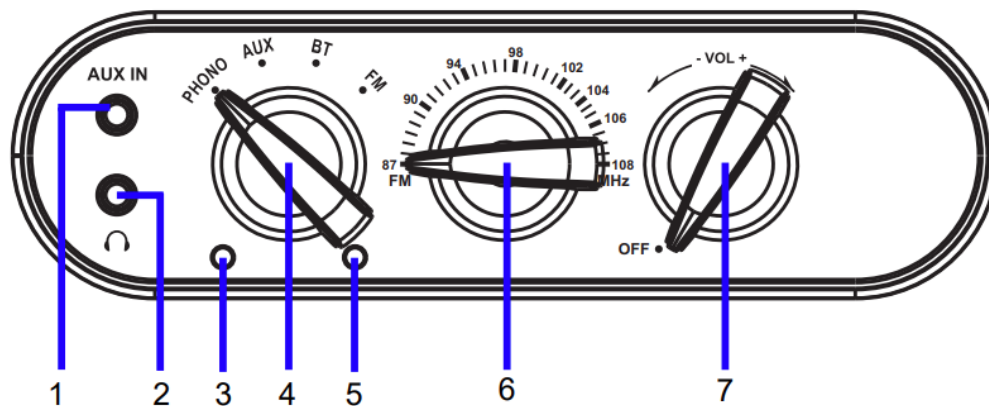
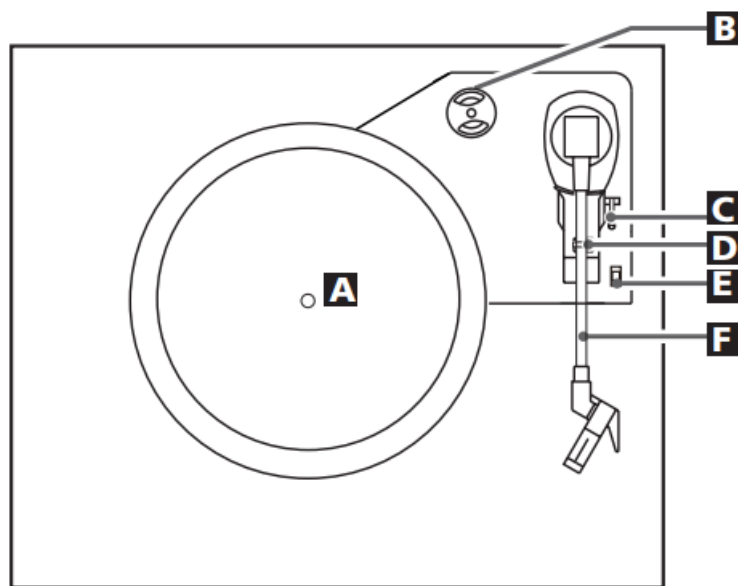
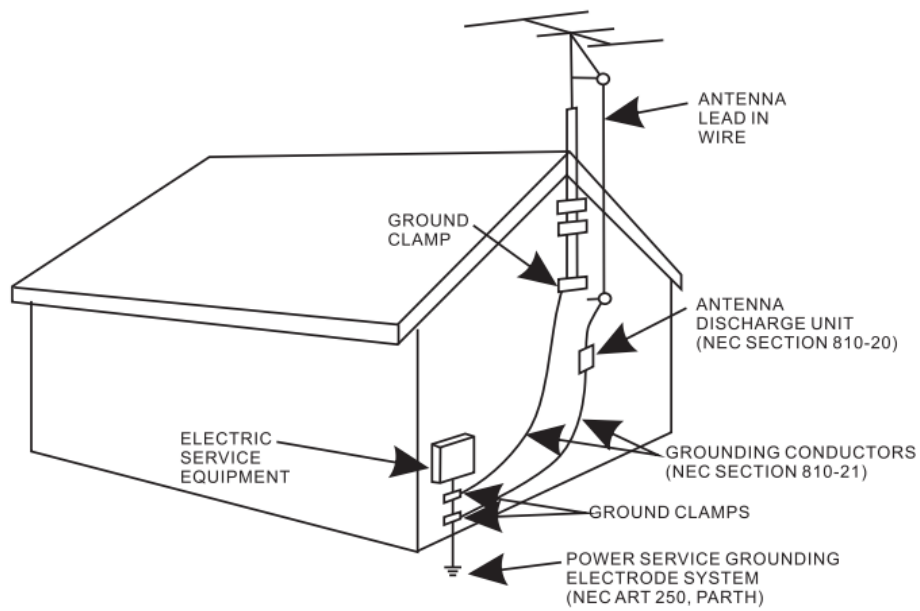


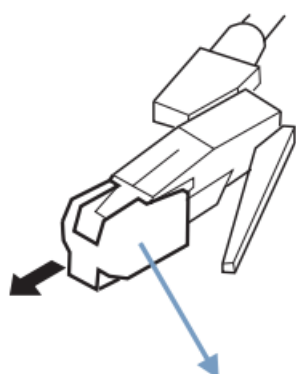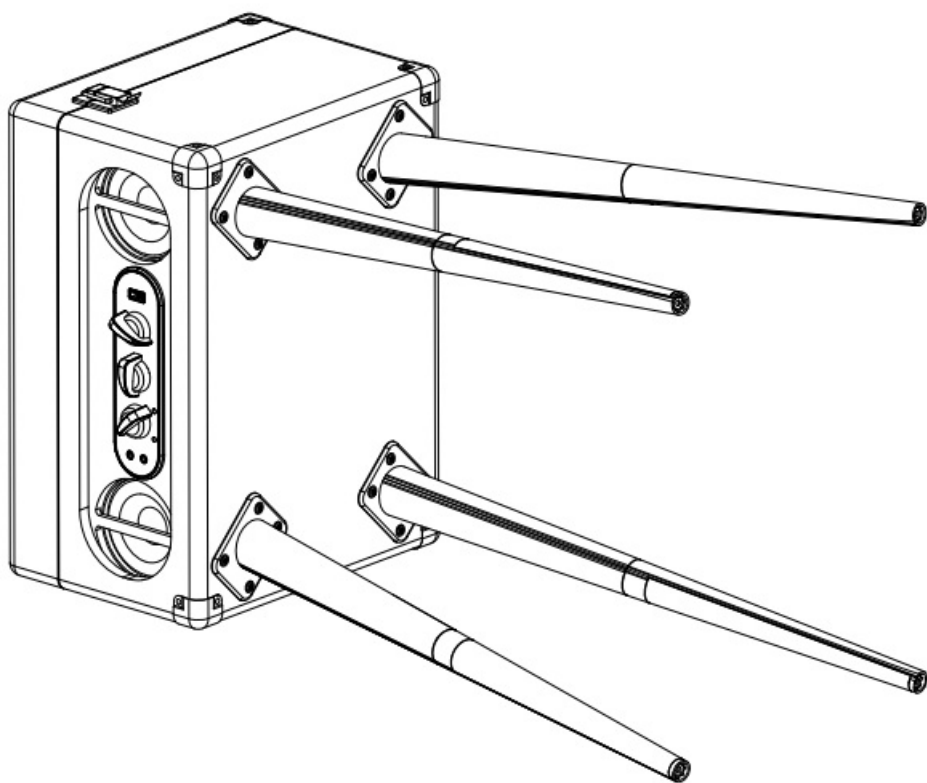

Plastic protective cover (White color)

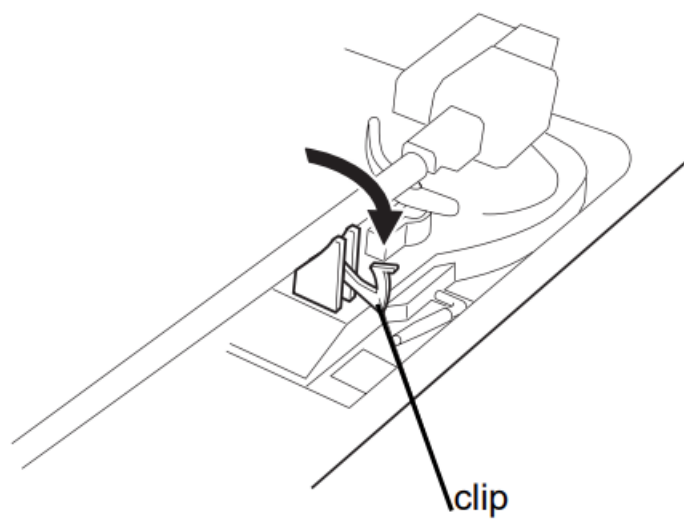 

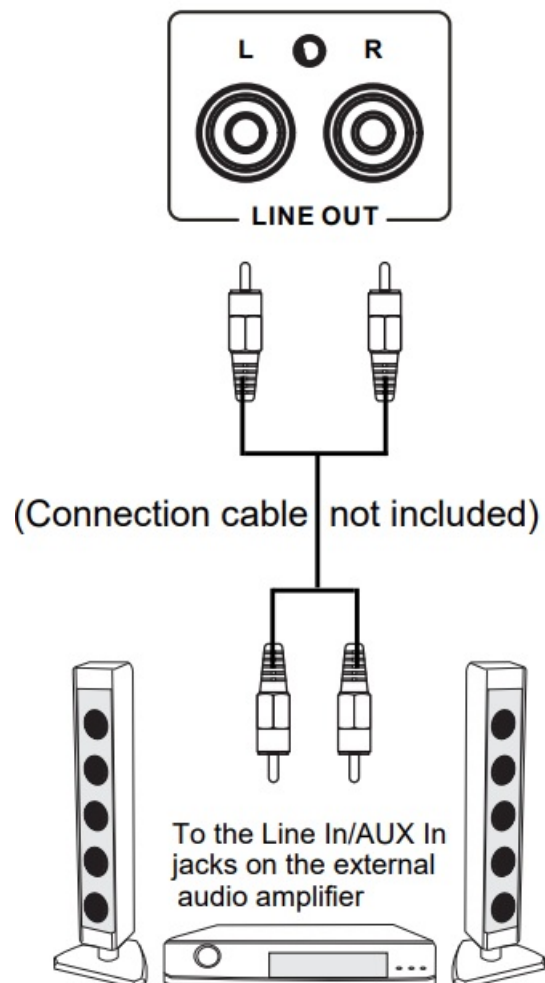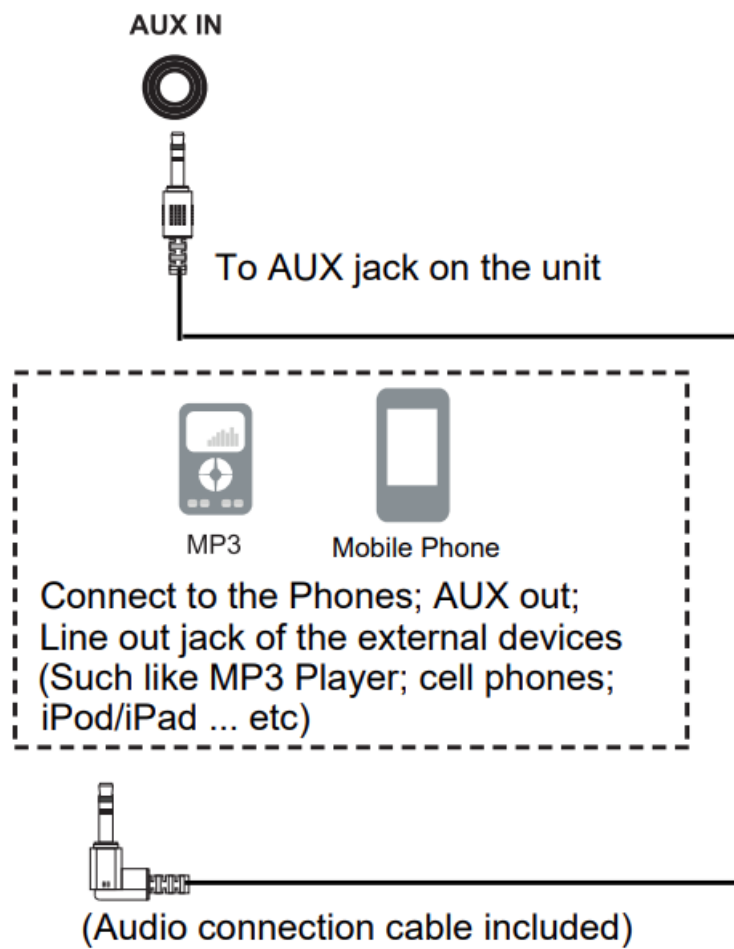  

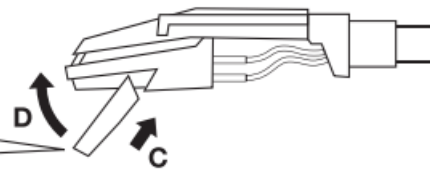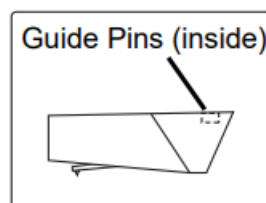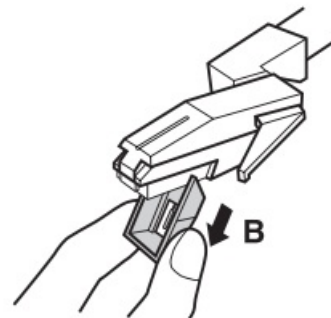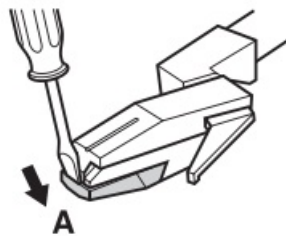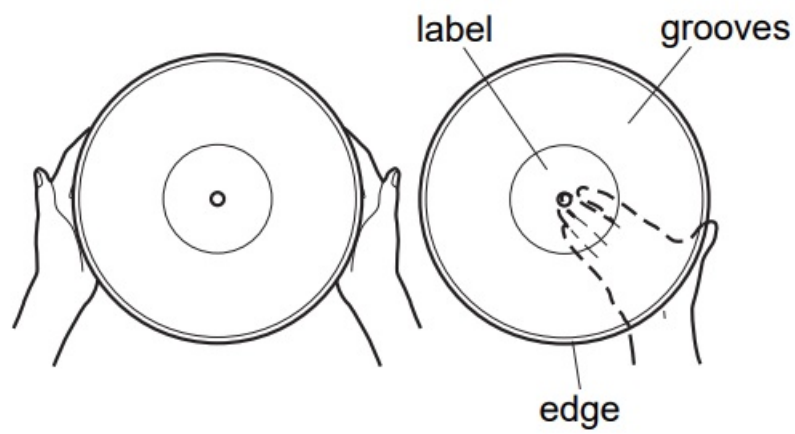     

[SYLVANIA SRC894 Bluetooth Retro Turntable with Stand User Manual](#)