

 **synapptic**
V2 USB Playback
Speaker



synapptic V2 USB Playback Speaker User Manual

[Home](#) » [synapptic](#) » synapptic V2 USB Playback Speaker User Manual 

Contents

- [1 synapptic V2 USB Playback Speaker](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 BUTTONS AND CONTROLS](#)
- [5 Frequently Asked Questions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



synapptic V2 USB Playback Speaker



Product Specifications

- **Product Name:** USB Playback Speaker V2
- **Playback Modes:** USB, MicroSD card, Aux input
- **Charging:** USB-C charging
- **File Format:** MP3
- **Charging Time:** Approximately 3 hours

Product Usage Instructions

Buttons and Controls:

- With the speaker grill facing you, the top buttons from left to right:
- With the back of the speaker facing you, the available sockets and controls:
- USB Socket (with a square yellow outline) for playing MP3s from a memory stick.
- MicroSD card socket for playing MP3s from a MicroSD card.
- Aux input socket for wired music input or FM radio antenna.
- USB-C charging socket (with an oval yellow outline) for charging the speaker.
- On/Off switch (colored yellow) for turning the speaker on and off.

Playing a Memory Stick

To play a memory stick:

- Insert it into the USB Socket on the back of the speaker.
- The speaker will switch to USB mode and start playing automatically.
- Files on the memory stick must be in MP3 format.
- Files are played in the order they were copied to the memory stick.

Please read carefully before using

Before using your new Synapptic speaker for the first time, please remove the thin plastic film that covers each rubber foot. We also recommend the speaker is fully charged before first use.

BUTTONS AND CONTROLS

With the speaker grill facing you, from left to right, the buttons on the top of the speakers have the following functions:



- Skip backward to the previous track
- Skipping past the previous track will play the last track.



- Skip forward to the next track
- Skipping past the last track will play the first track.



- Play / Pause / Mode
- Press quickly for play/pause. Press and hold for 3 seconds to change mode. A voice will announce the current mode (USB, FM or Bluetooth). USB mode requires a memory stick to be plugged in. FM mode requires the antenna cable to be plugged into the Aux socket. The Bluetooth mode requires a phone or other Bluetooth-enabled device as an audio source. The speaker will show as "Speaker 5.0" on your Bluetooth device.



Increase volume

- Press quickly for a small volume increase. Press and hold for continuous volume increase. A small beep will sound when the max volume is reached.



Decrease volume

- Press quickly for a small volume decrease. Press and hold for continuous volume decrease. A small beep will sound when the volume is reached.

Book- marking: To bookmark your position on a memory stick or SD card, pause playback, then remove the memory stick and optionally switch off. Alternatively, press pause, leaving the speaker powered on and charging. Inserting a different memory stick will reset the bookmark.



With the back of the speaker facing you, from left to right, the following sockets and controls are available: USB Socket (with a square yellow outline) for playing MP3s from a memory stick. MicroSD card socket for playing MP3s from a MicroSD card.

Aux input socket for wired music input or the FM radio antenna.

USB-C charging socket (with an oval yellow outline) for charging the speaker. On/Off switch (colored yellow) for turning the speaker on and off.

PLAYING A MEMORY STICK

To play a memory stick, insert it into the USB Socket on the back of the speaker. The speaker will switch to USB mode and start playing automatically. Files on the memory stick must be in MP3 format. Files are played in the order they were copied to the memory stick.

CHARGING THE BATTERY

The charging wire has a large rectangular USB plug on one end and a smaller USB-C plug on the other end. Insert the large end of the wire into the supplied USB main charger and the smaller end into the speaker. A small red light at the top of the speaker grill will turn on when the speaker is charging and will turn off when fully charged. Charging takes approximately 3 hours.

WHAT'S IN THE BOX

The box includes the playback speaker, USB-C charging cable, aux/antenna cable, and instructions.

DEVICE CARE & WARNINGS

- Do not clean the speaker with water or any other liquid, as this can damage the electronics and create a safety hazard. Use only a dry cloth
- Do not expose the speaker to high force, temperatures or humidity, as this can damage the internal battery and create a safety hazard. Keep out of direct sunlight. Do not leave in a hot car. Do not place on a radiator or other hot surface
- Keep the speaker, packaging and all accessories out of reach of children and pets, as small parts may cause a choking or other hazard
- Do not disassemble the speaker or attempt to repair it yourself, as this can damage the battery and create a safety hazard
- Only use the supplied charging cable and accessories, as non-approved accessories may damage the device or cause a safety hazard
- If the speaker is not going to be used for an extended period of time, it is recommended to store it with approximately 50% charge, to maximize battery life
- When disposing of the speaker, follow local regulations for recycling or disposing of lithium-ion batteries
- Always read and follow the instruction manual for the speaker to ensure safe and proper use, including information about the internal battery


For further help, please visit our website at www.synapptic.com, email us at help@synapptic.com, or call us on 0191 909 7 909

Do not dispose of this speaker, charger or accessories in regular waste bins. Please take to your local recycling center.

Frequently Asked Questions

- **Q: How do I know if the speaker is fully charged?**
 - A: A small red light at the top of the speaker grill will turn off when the speaker is fully charged.
- **Q: Can I play music directly from a MicroSD card?**
 - A: Yes, you can play MP3s directly from a MicroSD card inserted into the designated socket.

Documents / Resources

 <p>User Manual Please read carefully before use.</p> <p>Before using your new Synapptic speaker, please read the following information carefully. Please keep this manual for future reference. The speaker is fully charged when the red light is off.</p> <p>FEATURES AND CONTROLS</p> <p>1. Power Button Press and hold the power button for 3 seconds to turn the speaker on. Press and hold the power button for 5 seconds to turn the speaker off. Press and hold the power button for 10 seconds to reset the speaker.</p> <p>2. Volume Buttons Press the volume up/down buttons to adjust the volume. Press and hold the volume up/down buttons for 3 seconds to turn the speaker on/off.</p> <p>3. MicroSD Card Slot Insert the MicroSD card into the slot. The speaker will automatically detect the card and play the music.</p> <p>4. USB Port Connect the USB cable to the port. The speaker will automatically detect the device and play the music.</p> <p>5. Bluetooth Press the Bluetooth button to enter pairing mode. The speaker will be visible on your phone's Bluetooth list. Press the Bluetooth button again to connect the speaker to your phone.</p> <p>6. LED Indicator The LED indicator shows the charging status. Red light: Charging. Green light: Fully charged. Blue light: Bluetooth pairing mode.</p> <p>7. Battery Life The speaker has a battery life of up to 12 hours. Press the power button to turn the speaker on. The speaker will automatically turn off after 10 minutes of inactivity.</p> <p>8. Reset Press and hold the power button for 10 seconds to reset the speaker. The speaker will turn on and play the music.</p> <p>9. Warranty The speaker is covered by a 1-year warranty. Please contact our customer support for more information.</p> <p>10. Contact Us Email: support@synapptic.com. Phone: 1-800-123-4567. Website: www.synapptic.com</p>	<p>synapptic V2 USB Playback Speaker [pdf] User Manual</p> <p>V2 USB Playback Speaker, USB Playback Speaker, Playback Speaker, Speaker</p>
---	--

References

-  [Phones, Tablets & Software For People With Sight Loss - Synapptic](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.