



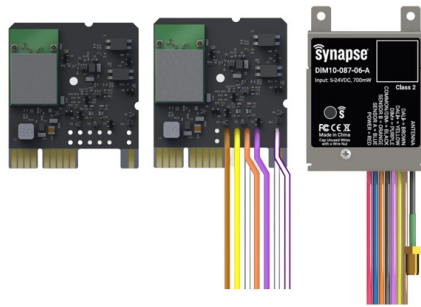

synapse DIM10-087-06-FW Controller Cut Sheet Installation Guide

[Home](#) » [Synapse](#) » synapse DIM10-087-06-FW Controller Cut Sheet Installation Guide 

synapse DIM10-087-06-FW Controller Cut Sheet Installation Guide

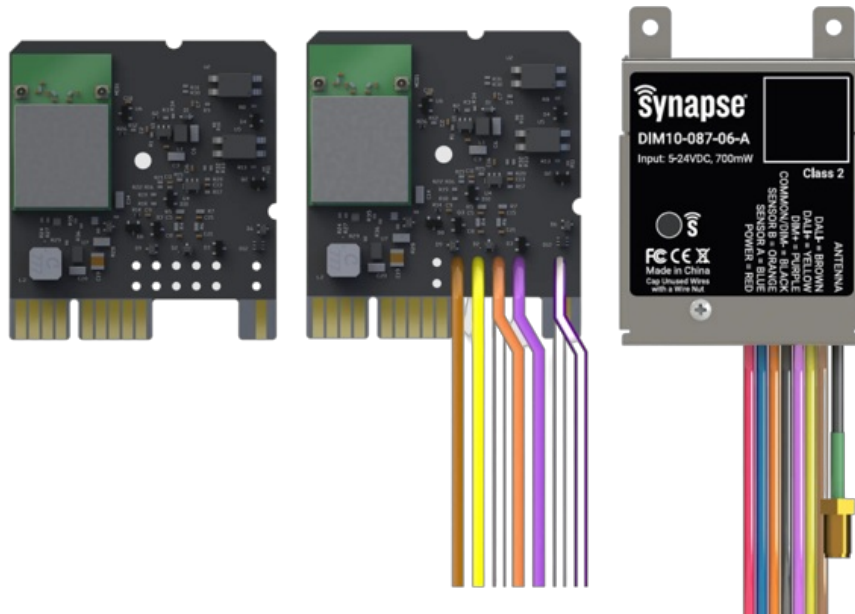

Contents

- [1 INSTALLATION GUIDE](#)
- [2 INSTALLATION INSTRUCTIONS](#)
- [3 POWERING UP THE FIXTURE AND CONTROLLER](#)
- [4 REGULATORY INFORMATION AND CERTIFICATIONS](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

SPECIFICATIONS

- Dim Control Max Load: 30 mA Source/Sink
- Radio Frequency: 2.4 GHz (IEEE 802.15.4)
- RF Transmission Output Power: +20dBm
- Operating Temperature: -40 to +85 C
- Operating Humidity: 10 to 90%, non-condensing
- Drivers: Limited to 4 LED Drivers
- Wire Size: 18 AWG, 8" Wires, UL1316, 600V
- Dimensions: 2.25" L x 2.0" W x .3" H (57 x 50.8 x 7.6 mm)

CAUTION

DIM10-087-06-FW controllers must be installed in accordance with national, state, and local electrical codes and requirements.

DESIGN CONSIDERATIONS

Below are some recommendations for successful dimming using the DIM10-087-06-FW. The dimming control wires are referenced as Dim+ and Dim-. The dimming signals have a Maximum voltage of 10V DC.

- Do not ground the DIM- wire to chassis ground; this is a return signal and is critical for proper dimming.
- Route dimming wires away from AC lines if possible.
- Maximum of 4 LED Drivers per controller, consult Synapse Support if a greater ratio is needed.
- Do not mount to a heatsink or to a LED driver.
- When installing the DIM10-087-06-FW into an enclosure, consideration of the internal antenna position and interference is required in order to provide the most optimum wireless signal strength. Prior to permanently mounting it, make sure the antenna is free of any metal objects within 12 in. of the antenna

NEEDED MATERIAL

- **Mounting Hardware:** (1) #4 and M3 screws and standoff recommended

INSTALLATION INSTRUCTIONS

WARNING: TO AVOID FIRE, SHOCK, OR DEATH: TURN OFF POWER AT CIRCUIT BREAKER OR FUSE AND VERIFY THAT POWER IS OFF BEFORE WIRING!

MOUNTING

1. Place the controller in desired location and secure it using #4 sized screw and standoff using the mounting hole located in the center of the board.

WIRING THE DIM10-087-06-FW CONTROLLER

Note: Unless specified, the connections to a standard Dim to Off LED driver and the DALI 2 LED driver are the same.

2. Connect the POWER (BROWN) wire of the DIM10- 087-06-FW to the 5-24V DC Aux output from the LED driver.
3. Connect the DIM- and DALI- (GRAY/WHITE STRIPE) wires of the DIM10-087-06-FW to the COMMON/DALI-

or COMMON/DIM- based on the LED driver you have

CONNECTING SENSORS

Note: Steps 4-7 are for adding sensors to the DIM10-087-06-FW controller; if you are not connecting sensors skip this section.

There are two sensor inputs on the DIM10-087-06-FW designed for low powered (24V DC) type sensors.

- The SENSOR A (YELLOW) wire is used to connect sensor A.
 - The SENSOR B (ORANGE) wire is used to connect sensor B.
4. Connect the sensor power wire to the AUX out on the LED driver (the LED driver powers the sensor).
 5. Connect the sensor Common to the COMMON/DALI- or COMMON/DIM- based on the LED driver you have.
 6. Connect the SENSOR A (YELLOW) wire or the SENSOR B (ORANGE) wire of the DIM10-87-06-FW controller to the sensor CTRL/Control wire.
 7. If you are using more than one sensor then duplicate the installation as described above. (See Figures 1 AND 2)

CONNECTING THE DIMMING CIRCUIT

Note: Steps 8-10 are for connecting up to a Standard Dim to Off LED driver; if you are using a DALI 2 LED driver skip to steps 11-13.


8. Connect the DIM+ (PURPLE) wire from the DIM10- 087-06-FW to the DIM+ wire on the LED driver.
9. Connect the DIM- (GRAY/WHITE STRIPE) wire from the DIM10-087-06-FW to the COMMON/DIMwire on the LED driver.
10. Cap the unused DALI+ (PURPLE/WHITE STRIPE) wire. (See Figure 1)

Note: Steps 11-12 are for connecting up to a DALI 2 LED driver.

11. Connect the DALI+ (PURPLE/WHITE STRIPE) wire from the DIM10-087-06-FW to the LED driver DALI+.
12. Cap the unused DIM+ (PURPLE) wire. (See Figure 2)

POWERING UP THE FIXTURE AND CONTROLLER

After connecting the Controller to the LED Driver and any sensors, make sure to cap any unused wires. Switch power on to the fixture. The light should turn on.

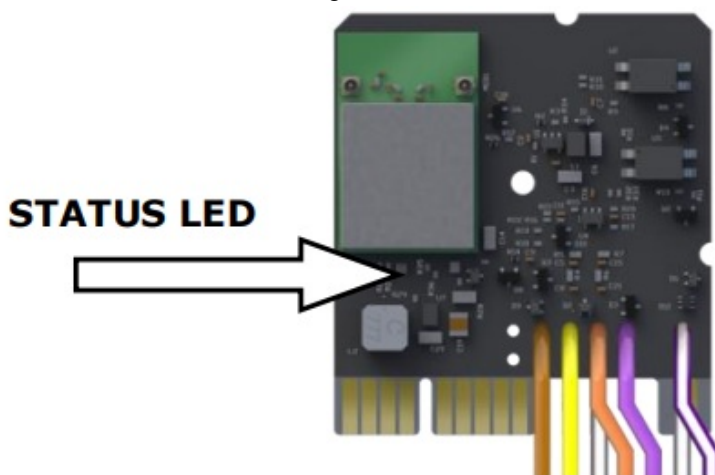


STATUS LED

Note: When the controller is powered the following colors indicate the current status.

- **Red** = No Network Found (Communication Lost)
- **Blinking Green** = Network Found, Controller Not Configured (Device not yet added to SimplySNAP)
- **Green** = Network Found, Controller Configured (Normal Operation)

Refer to the Simply SNAP User's Manual for information on provisioning the DIM10-087-06-FW.

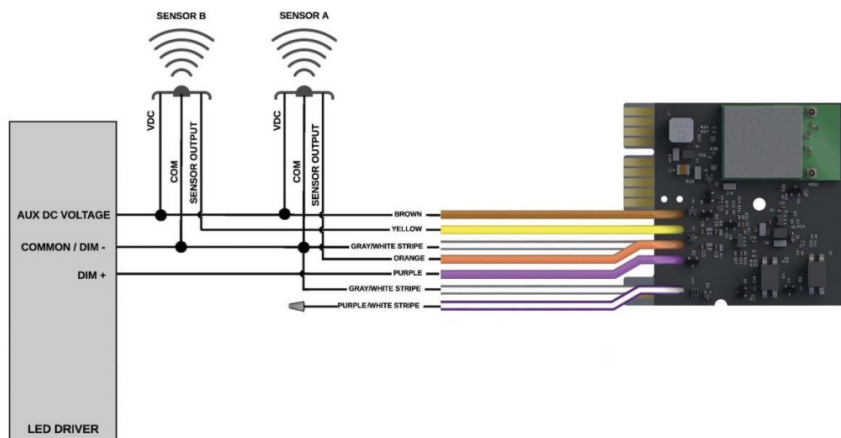

WARNING:

If a single Synapse controller is used to drive the DIM+ input of multiple LED drivers, then all of the DIM- lines from all drivers MUST be directly tied/shorted together to provide a common return/ground to the controller.

Synapse will not warranty or be liable for designs with any other electronic means of coupling DIMlines from multiple drivers.

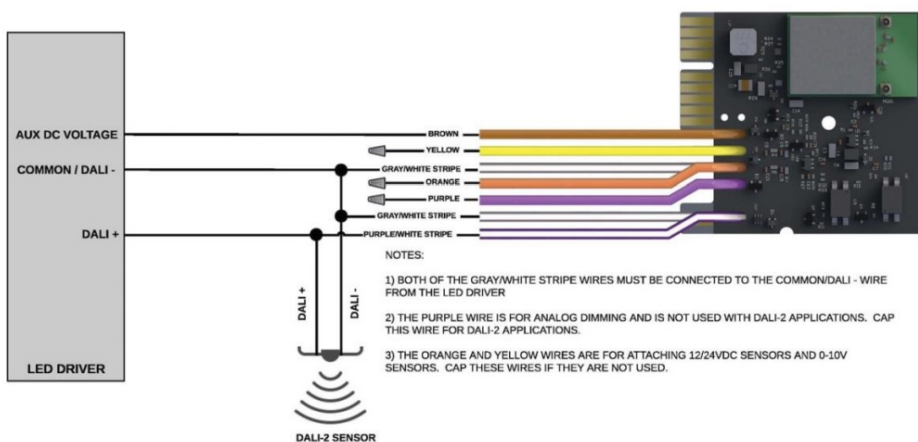


Figure 2 – DALI-2 Wiring Diagram

REGULATORY INFORMATION AND CERTIFICATIONS

RF Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada (IC) certifications: This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

FCC certifications and regulatory information (USA only)

FCC Part 15 Class B: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) These devices may not cause harmful interference, and (2) These devices must accept any interference received, including interference that may cause harmful operation.

RADIO FREQUENCY INTERFERENCE (RFI) (FCC 15.105): This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna; (2) Increase the separation between the equipment and the receiver; (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected; (4) Consult the dealer or an experienced radio/TV technician for help.

Declaration of Conformity (FCC 96 -208 & 95 -19): Synapse Wireless, Inc. declares that the product name "DIM10 -087 -06 -FW" to which this declaration relates, meet the requirements specified by the Federal Communications Commission as detailed in the following specifications:

- Part 15, Subpart B, for Class B equipment
- FCC 96 -208 as it applies to Class B personal computers and peripherals
- This product has been tested at an External Test Laboratory certified per FCC rules and has been found to meet the FCC, Part 15, Emission Limits. Documentation is on file and available from Synapse Wireless, Inc.

If the FCC ID for the module inside this product enclosure is not visible when installed inside another device, then the outside of the device into which this product is installed must also display a label referring to the enclosed module FCC ID. Modifications (FCC 15.21): Changes or modifications to this equipment not expressly approved by Synapse Wireless, Inc., may void the user's authority to operate this equipment.

WARNING AND CAUTIONS:

- TO AVOID FIRE, SHOCK, OR DEATH: TURN OFF POWER AT CIRCUIT BREAKER OR FUSE AND TEST THAT POWER IS OFF BEFORE INSTALLING!
- PROPER GROUNDING REQUIRED TO AVOID STATIC DISCHARGE WHICH CAN DAMAGE CONTROLLERS DURING INSTALLATION.

WARNING AND CAUTIONS:

- If you are unsure about any part of these instructions, consult an electrician; all work should be performed by qualified personnel.
- Disconnect power at circuit breaker or fuse when servicing, installing or removing fixture or changing lamps.

DIM10-087-06-FW Controller

Load Ratings: 700mW @ 5 to 24V DC

Operating Temperature: -40 to +85 C / Operating Humidity: 10 to 90%, non-condensing

CERTIFICATIONS

Model : DIM10 -087 -06 -FW
Contains FCC ID : U9O -SM220
Contains IC : 7084A -SM220
UL File No: E346690
DALI -2 Certified Application Controller

Contact Synapse for Support – (877) 982 -7888



Documents / Resources

	synapse DIM10-087-06-FW Controller Cut Sheet [pdf] Installation Guide DIM10-087-06-FW Controller Cut Sheet, DIM10-087-06-FW, Controller Cut Sheet, Cut Sheet
---	---

Manuals+