
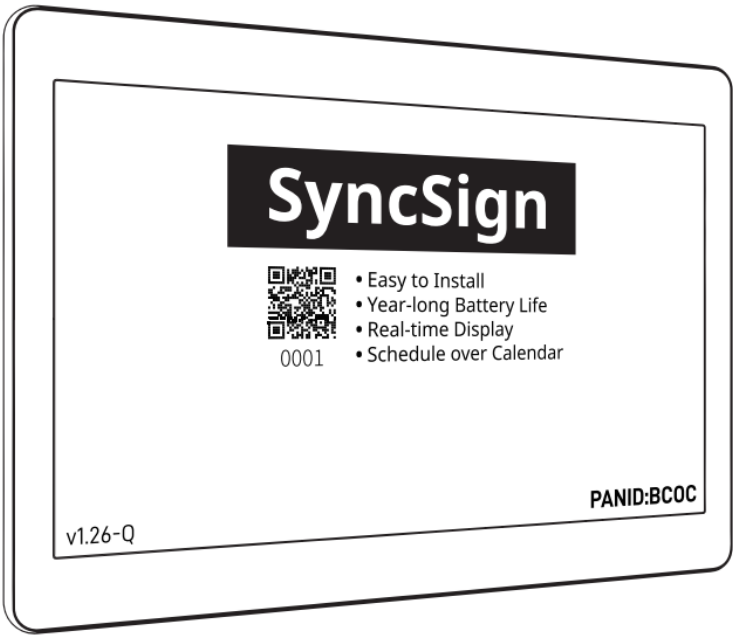 




SyncSign D75C 7.5-Inch E-ink Display User Manual

[Home](#) » [SyncSign](#) » SyncSign D75C 7.5-Inch E-ink Display User Manual 

SyncSign

 


7.5-Inch
Syncsign® Display
User Manual


Contents

- 1 [Getting to know Syncsign Display](#)
- 2 [Packing list](#)
- 3 [Node-Hub Pairing Mode](#)
- 4 [Need Assistance?](#)
- 5 [For more:](#)
- 6 [Warning:](#)
- 7 [Documents / Resources](#)
- 8 [Related Posts](#)

Getting to know Syncsign Display

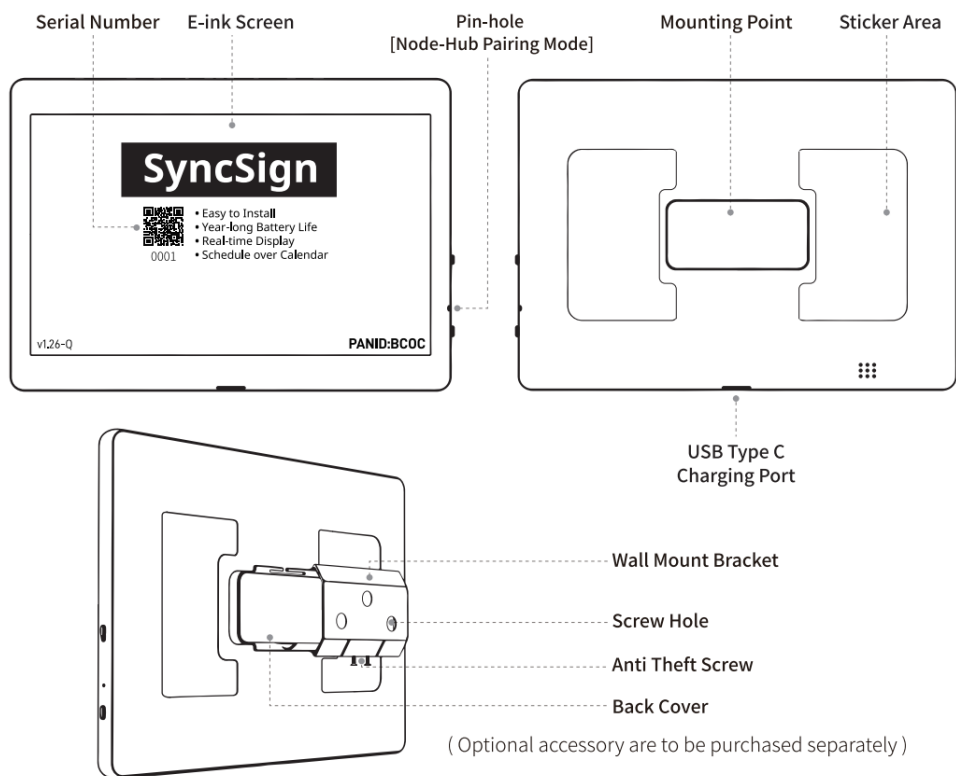


Packing list

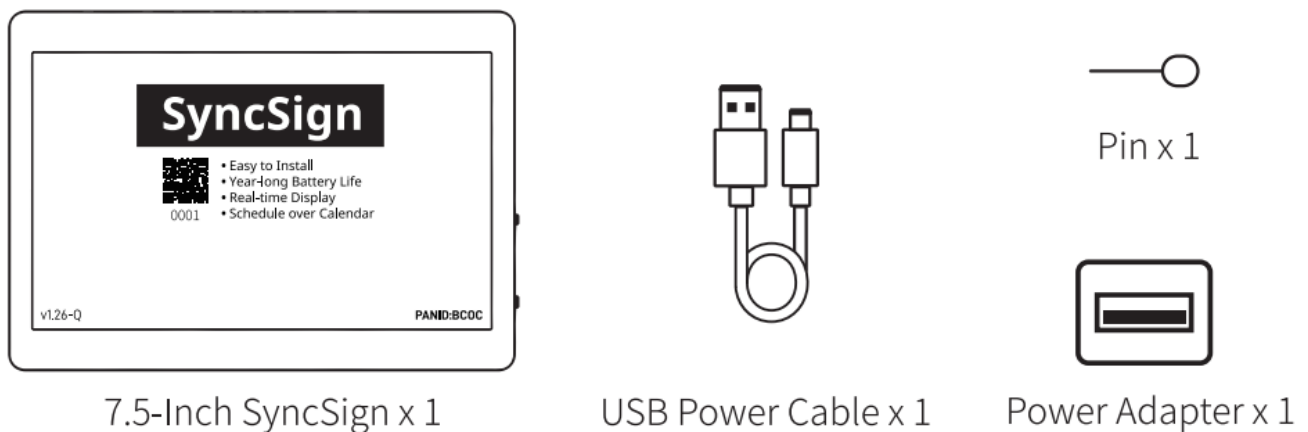 

Node-Hub Pairing Mode


Note: The 7.5inch Display connects with the Hub via ZigBee protocol, either you've purchased SyncSign IoT Hub

 or this is your first SyncSign order, the Display was paired to the Hub before shipping out from the factory. After the Hub was bound to your SyncSign account, use a pin clip to poke the pin-hole for 1s, then release, then the Display will wake up to join the Hub. Then the Hub can push the content to the Display via the ZigBee protocol.

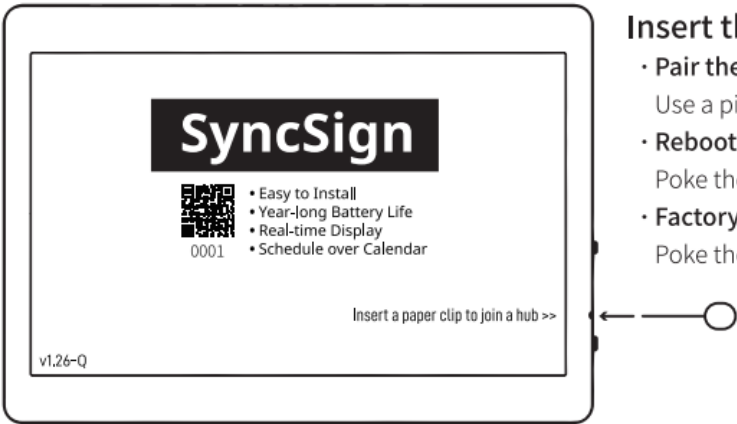

Insert the clip into the pin-hole



- **Pair the Display with the Hub:**
Use a pin clip to poke the pin-hole for **1s**, then release
- **Reboot:**
Poke the pin-hole for **3s**, then release
- **Factory reset and unpair:**
Poke the pin-hole for **12s**, then release

 There is a little occasion that requires resetting the Display or unpairing it from the Hub. If you want to reset the Display, please contact SyncSign Support first.

Need Assistance?

	https://help.sync-sign.com
	help@sync-sign.com

For more:

   
Search “SyncSign” on social networks

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Pan 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter

RF Exposure Statement

To maintain compliance with FCC's RF exposure guidelines, This equipment should be installed and operated with a minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter

SyncSign



Documents / Resources



[SyncSign D75C 7.5-Inch E-ink Display](#) [pdf] User Manual

D75C, 2A36D-D75C, 2A36DD75C, D75C 7.5-Inch E-ink Display, 7.5-Inch E-ink Display, E-ink Display, Display