



SYRiS SYSR-S8 TCP-IP QR Code Scanner with HF RFID Reader Instructions

[Home](#) » [SYRiS](#) » SYRiS SYSR-S8 TCP-IP QR Code Scanner with HF RFID Reader Instructions 



SYS R-S8
QRCode + HF RFID Reader Install Instruction
V0100



Please use the QR Code to download the Tools and manual.

Contents

[1 SYS R-S8/ Specification](#)

[2 SYSR-S8 WIRING
DIAGRAM](#)



[3 Documents / Resources](#)

[4 Related Posts](#)


SYS R-S8/ Specification

Items	Specs
Frequency	13.56MHz
Code Scan Mode	640*480 CMOS
Read 2D Code Type	OR Code,Data Matrix,PDF417,maxicode,Aztec,hanxin
Read 1D Code Type	EAN,UPC,Code 39,Code 93,Code 128,UCC/EAN128,Codabar,Interleaved 2 of 5,Standard 25,MSI-Plessey GS1 Databar,Industrial 25,Matrix 2 of 5
Scanning angle	Intersection angle 360°, Elevation ± 55° Deflection angle ± 55°
Viewing angle	Inclination 60° ,Elevation 46°
HF Protocols	IS015693 / IS014443A IS014443B / Mifare Block
HF Read range	Up to 5 cm
Status Indicator	Tricolor LED(RGB) & Beeper
Configuration Interface	Micro USB / Ethernet / Wi-Fi
Digital Output	2 Relay output
Power Supply	12 VDC
Power Consumption	1W-6W
Operating temperature	-10°C – +60°C
Size(mm)	86.0 x 86.0 x 41.6 mm

SYSR-S8 WIRING DIAGRAM

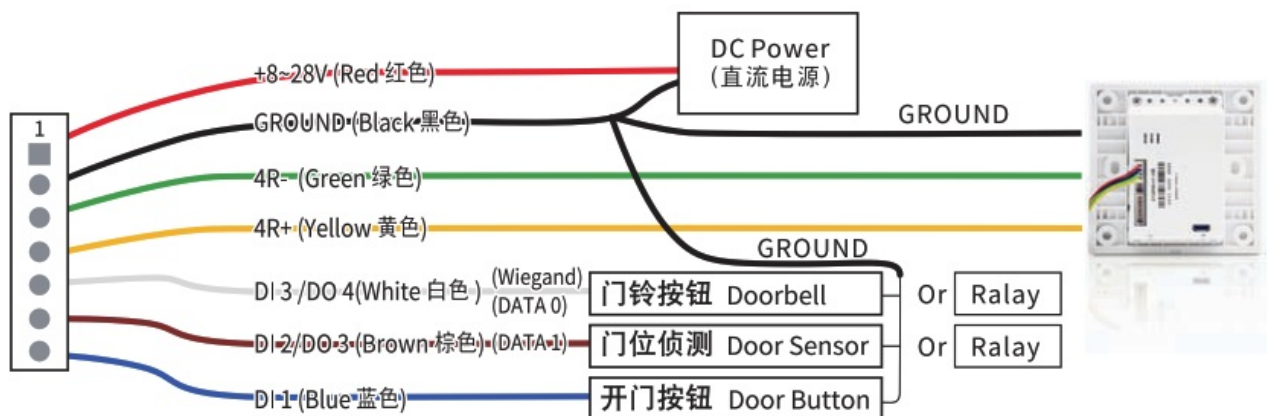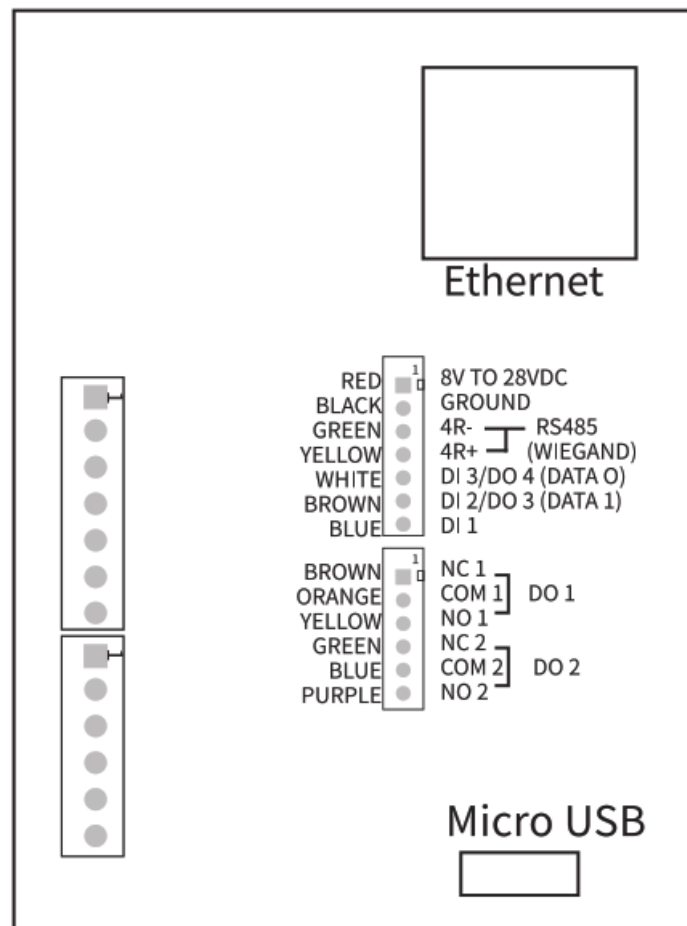

Relay COM

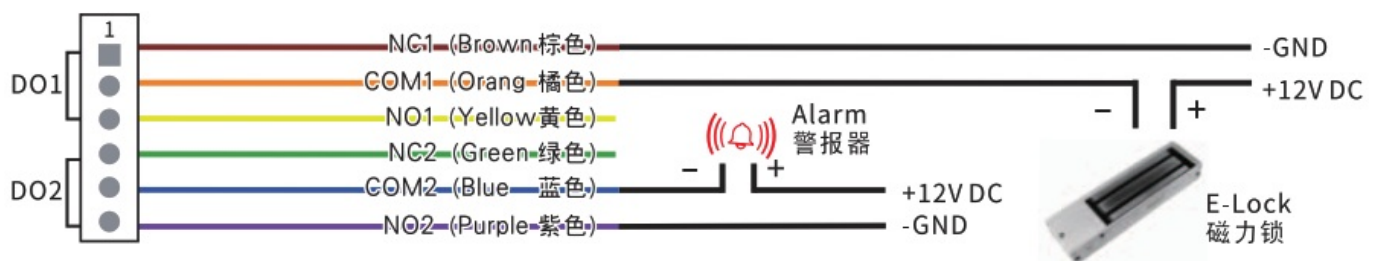

<https://reurl.cc/pmlo2b>



Micro USB For setup only

SYRIA TECHNOLOGY CORP.
12F, No.16, Sec. 2, Taiwan Blvd., West Dist.,
Taichung City 40354, Taiwan
TEL: +886-4-2207-8888
FAX: +886-4-2207-9999
E-Mail: service@syris.com
Web: <http://www.syris.com/app>

Documents / Resources



[SYRiS SYSR-S8 TCP-IP QR Code Scanner with HF RFID Reader](#) [pdf] Instructions
SYSR-S8, TCP-IP QR Code Scanner with HF RFID Reader

[Manuals+](#)