



sysform A320 Desktop Auto Paper Cutter Instruction Manual

[Home](#) » [Sysform](#) » sysform A320 Desktop Auto Paper Cutter Instruction Manual 

Contents

- [1 sysform A320 Desktop Auto Paper Cutter](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Operation Steps:](#)
- [5 Specifications](#)
- [6 Documents / Resources](#)



sysform A320 Desktop Auto Paper Cutter



Product Information


- **Model:** FTLUPQVUP1BQFS
- **Product Type:** DVUUFS
- **Features:**
 - GJOFQPTJUJPO BEKVTUPS
 - CBDLHBVHF
 - MFGUTJEFMBZ
 - MPDLGPSCBDLHBVHF QVMMBOENPWF
 - DVUUJOHTUJDL
 - UPQDPWFS
 - PQUJDBMDVUUJOH MJOF
 - GSPOUTBGFUZ HVBSE
 - 4BGFUZLFZ TXJUDI
 - QPXFSTXJUDI
 - UXPIBOEFE DVUUJOHTZTUFN

Product Usage Instructions

1. Connect the device to a power source using the provided cable.
2. Turn on the device by pressing the power button located on the side of the device.
3. To access the menu options, press the menu button located on the front of the device.
4. Use the navigation buttons to select the desired option and press the select button to confirm.
5. To adjust the volume, use the volume buttons located on the side of the device.
6. To play music, connect your device to the DVUUFS using a compatible cable.
7. To record audio, press the record button located on the front of the device.
8. To transfer files from the device to a computer, connect the device to the computer using a compatible cable.
9. Use the file explorer on your computer to locate and transfer files.
10. When finished, safely disconnect the device from the computer and power off the device.

Operation Steps:

1. Open 9 Front safety guard and load the paper.
2. Pull 1 Lock for back gauge and move it to the desired position and release. Use 2 Fine position adjustor to fine adjust the back gauge. Jog the paper and close the Front safety guard.
3. Turn on 6 Power switch, and 10 Optical cutting line will light up. Turn on 8 Safety key switch. Note: For safety, always turn the Safety key switch to off position when the machine is not in use.
4. Press 7 Two-handed cutting system using both hands until the paper is completely cut and the knife goes back to its home position.
Switch off the Safety key switch. Open Front safety guard and take out the cut paper.

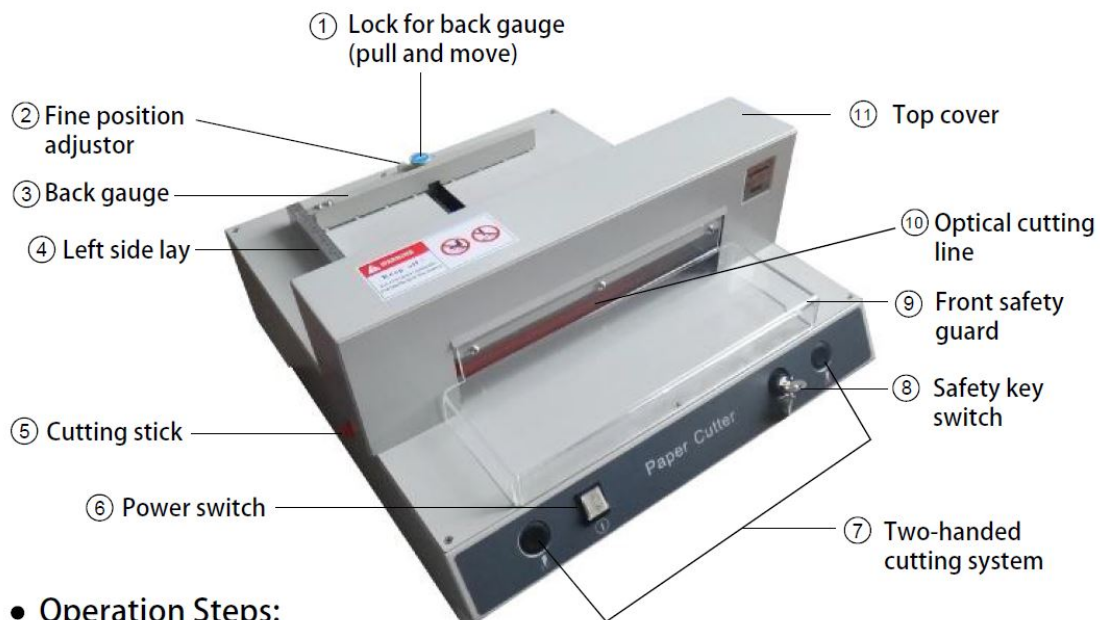

• Operation Steps:

- **Replacing the knife:** Turn the 6 Power switch off. Open 11 Top cover and loosen the screws on the knife. Replace the old knife with a new one. Tighten the screws back.
- **Replacing the cutting stick:** Take out the current cutting stick from the left side of the machine and turn it to another side or insert a new one.

Note: Cutting sticks can be used repeatedly by turning to different surfaces.

Specifications

Cutting Width	12.6" (320mm)
Cutting Capacity	1.18" (30mm)
Narrow Cut	1.97" (50mm)
Cutting Depth	12.4" (315mm)
Power	110V / 60Hz 250W
Weight	101.41 lbs (46kg)
Dimensions (DxWxH)	23.03" x 19.69" x 10.63" (585x500x270mm)



Documents / Resources

	<p>sysform A320 Desktop Auto Paper Cutter [pdf] Instruction Manual</p> <p>A320 Desktop Auto Paper Cutter, A320, Desktop Auto Paper Cutter, Auto Paper Cutter, Paper Cutter, Cutter</p>
--	--