

systemair IHW10 IH Infrared Heater Instruction Manual


[Home](#) » [systemair](#) » systemair IHW10 IH Infrared Heater Instruction Manual 

Contents

- [1 systemair IHW10 IH Infrared Heater](#)
- [2 Dimensions](#)
- [3 Positioning](#)
- [4 Installation height](#)
- [5 Minimum mounting distance](#)
- [6 Replacing the lamp](#)
- [7 Accessories](#)
- [8 Controls](#)
- [9 Technical specifications](#)
- [10 Wiring diagrams](#)
- [11 Documents / Resources](#)




systemair IHW10 IH Infrared Heater

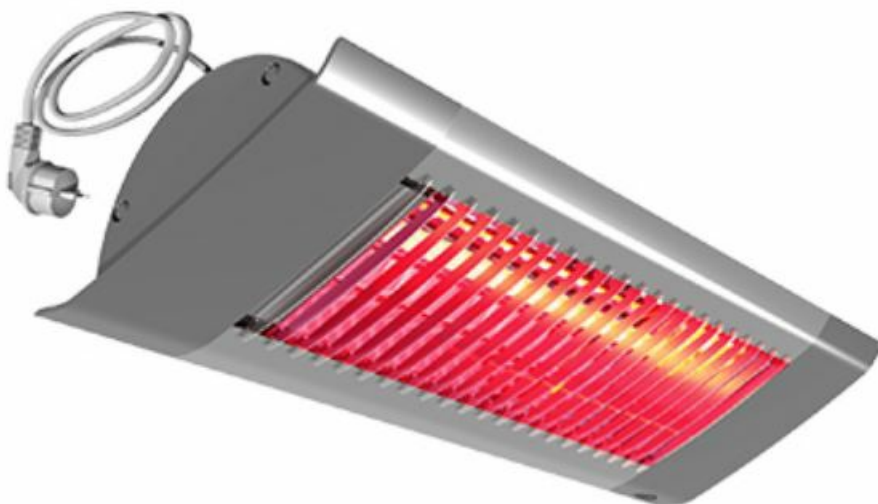


The introduction pages consist mainly of pictures. For translation of the English texts used, see the respective language pages.


Dimensions

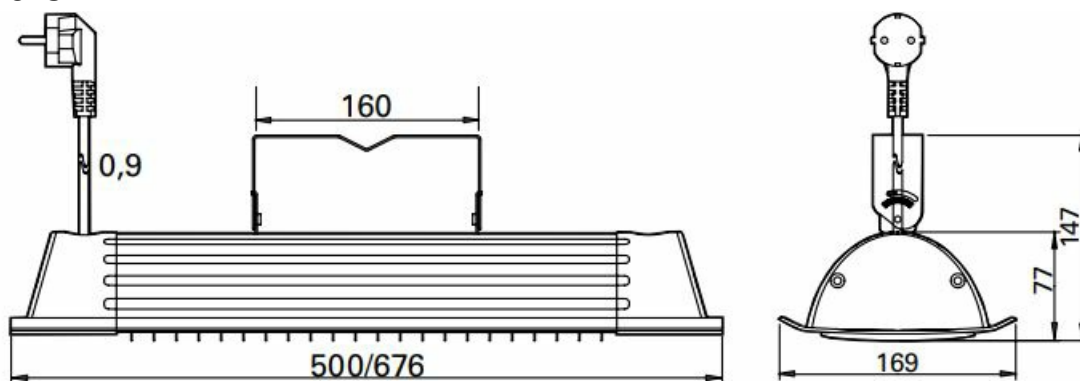

Wall bracket

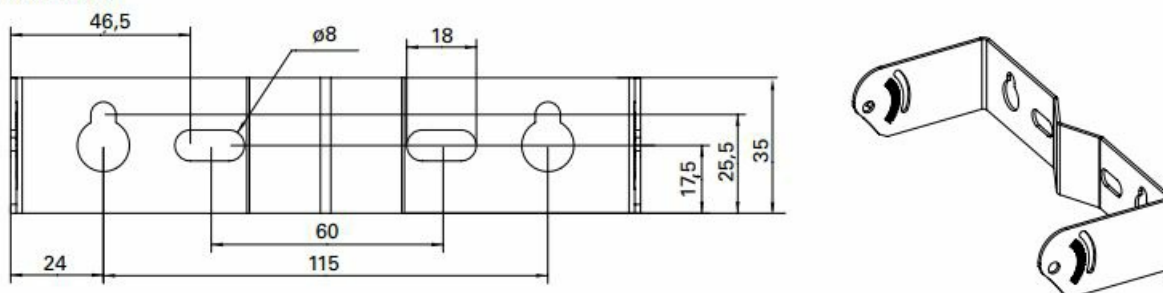

IHE (18050)

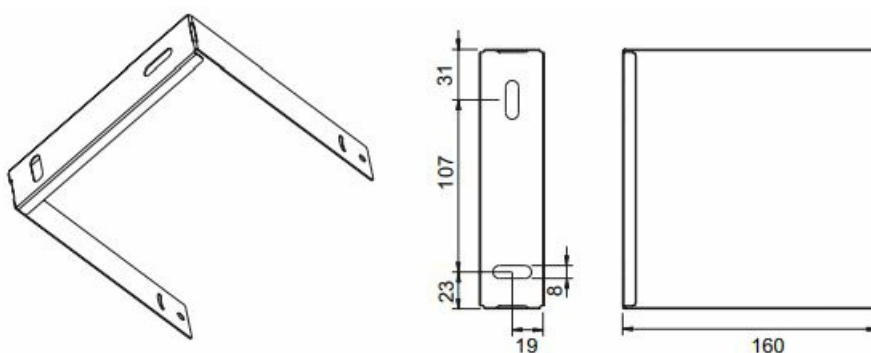

Positioning



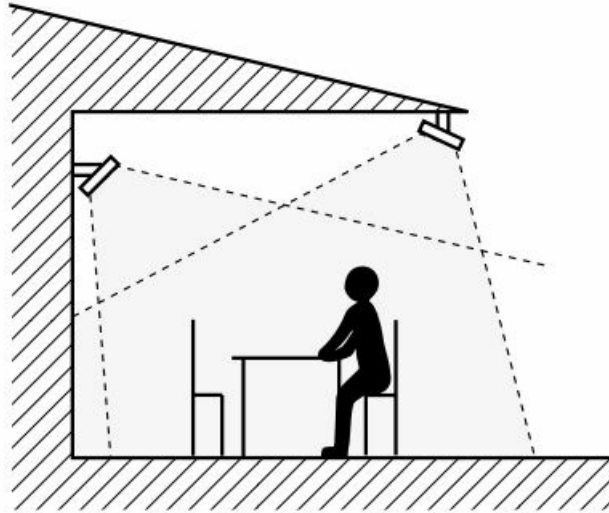


Fig.1: The heaters should heat from at least two directions for even heating


Installation height

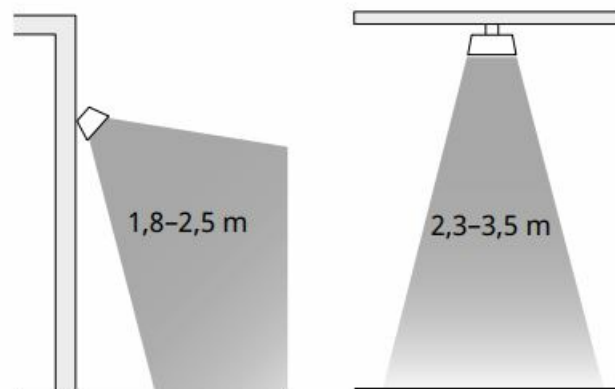

Minimum mounting distance

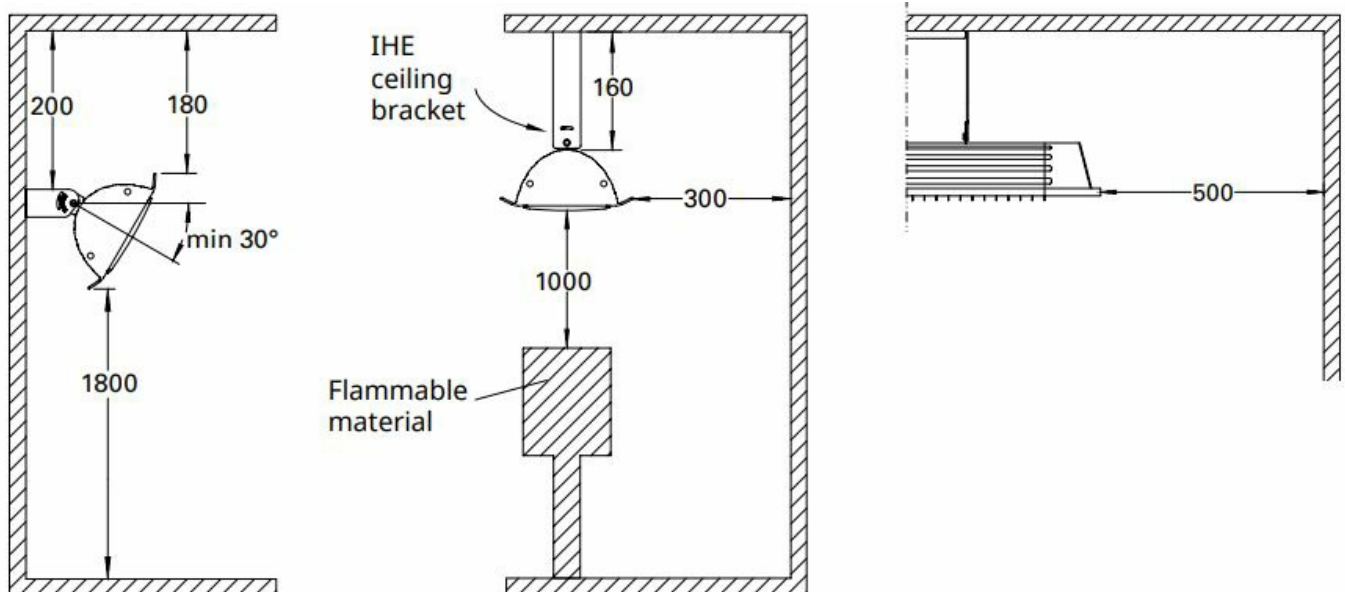

Replacing the lamp

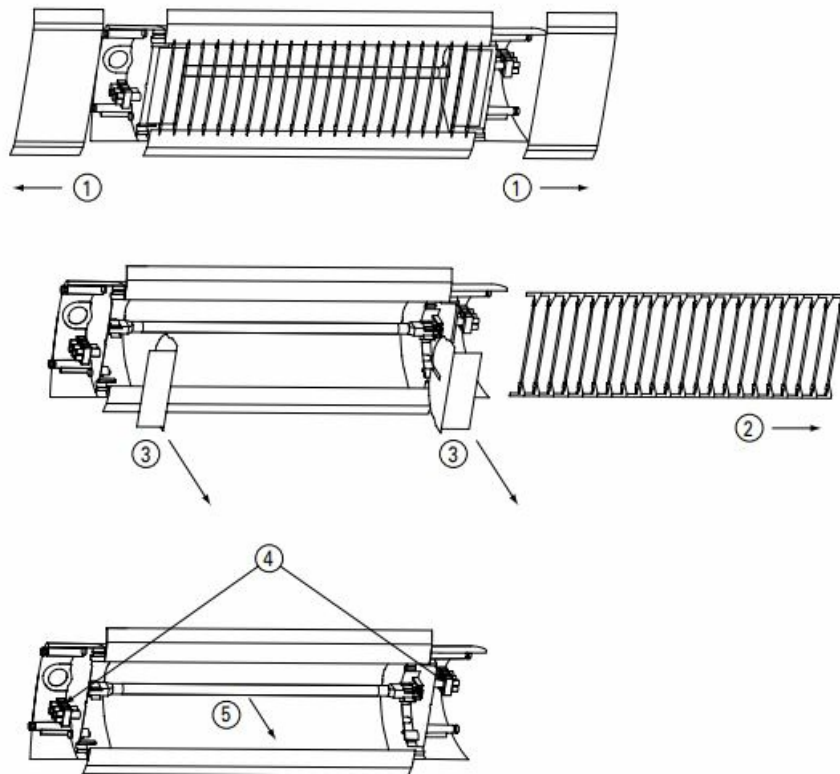

Accessories

- **11884 IHUB***
 - **18050 IHE**
- **16975 IHXH***
 - **16976 IHXL***
- **11887 IHT***
 - **16974 IHTW***
- **16970 IHP***
 - **92865 KLS1KS**
- **93272 IHAF**
 - **220646 IHL1000**
- **220647 IHL1500**
 - **206496 IHL2000**



- See separate manual.

Controls



- 92867 IHBD3
- 10740 CBT

See separate manual

Technical specifications

Infrared heater IHW with wide heat distribution (IP44)


Item number	Type	Heat output	Voltage	Amperage	Max. filament temperature	Length	Weight
		[W]	[V]	[A]	[°C]	[mm]	[kg]
11878	IHW10	1000	230V~	4,3	2200	500	1,9
11879	IHW15	1500	230V~	6,5	2200	500	1,9
11880	IHW20	2000	230V~	8,7	2200	676	2,5

Infrared heater IHF with directed heat distribution (IP44)


Item number	Type	Heat output	Voltage	Amperage	Max. filament temperature	Length	Weight
		[W]	[V]	[A]	[°C]	[mm]	[kg]
11881	IHF10	1000	230V~	4,3	2200	500	1,9
11882	IHF15	1500	230V~	6,5	2200	500	1,9
11883	IHF20	2000	230V~	8,7	2200	676	2,5

Wiring diagrams

Timer control

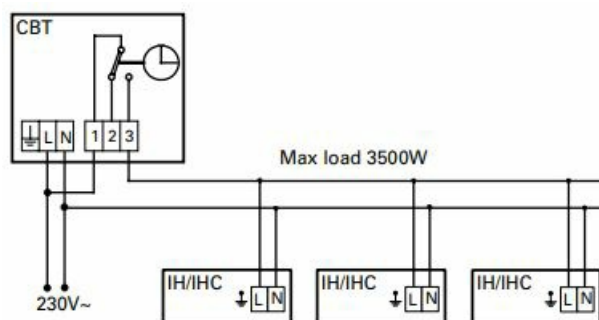

Timer control with contactor

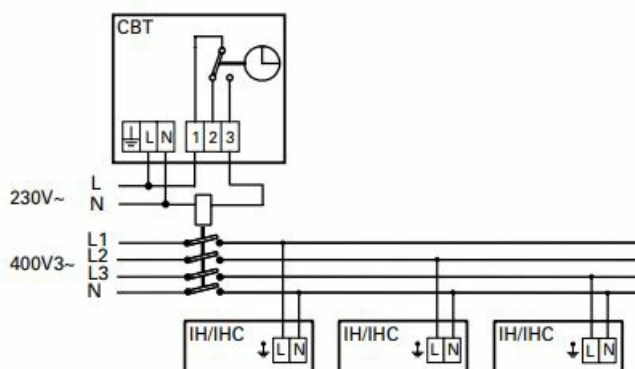

- Main office
- Frico AB Tel: +46 31 336 86 00
- Industrivägen 41
- SE-433 61 Sävedalen mailbox@frico.se
- Sweden www.frico.net
- For latest updated information and information about your local contact: www.frico.net

Documents / Resources

  	systemair IHW10 IH Infrared Heater [pdf] Instruction Manual IHW10, IHW15, IHW10 IH Infrared Heater, IH Infrared Heater, Infrared Heater, Heater, IHW20, I HF10, IHF15, IHF20
--	--