



T J WF310400 Extendable Wood Dining Set For Small Spaces **Installation Guide**

Home » T J » T J WF310400 Extendable Wood Dining Set For Small Spaces Installation Guide 🖫



Contents

- 1 T J WF310400 Extendable Wood Dining Set For Small
- **Spaces**
- **2 DESCRIPTION**
- **3 CARTON CONTENT**
- **4 TABLE PART LISTS**
- **5 INSTALLATION**
- **6 OVERVIEW**
- **7 CHAIR PART LISTS**
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



T J WF310400 Extendable Wood Dining Set For Small Spaces



Product Specifications

• Product Name: Dining Table WF310399

• Table Dimensions: Standard dining table size

• Material: Wood/Metal

• Color: As per product image

Assembly Instructions for Dining Table WF310399

Step 1: Table Assembly

- 1. Place all parts on a clean and smooth surface to avoid scratches.
- 2. Identify and lay out all the table parts as per the part list provided.
- 3. Assemble the table legs (R) and (L) to the tabletop using the provided hardware (A, B, C).
- 4. Attach the leaf and stretchers to complete the table structure.

Step 2: Hardware Installation

- 1. Use the hex comb to tighten the screws and bolts securely.
- 2. Ensure all parts are properly aligned before tightening any screws.

Assembly Instructions for Dining Chair WF310400

Step 1: Chair Assembly

- 1. Place all chair parts on a clean and smooth surface to prevent damage.
- 2. Attach the back legs, front legs, seat, and box seat following the part list.

- 1. Use the provided JCBC bolts, washers, and Allen key to secure the chair parts together.
- 2. Tighten all bolts gradually to ensure stability.


Frequently Asked Questions (FAQ)


- Q: Can I use power tools for assembly?
 - A: It is recommended to assemble the product manually to prevent over-tightening or damaging the parts.
- Q: What should I do if a part is missing?
 - A: Contact customer support with your order details to request a replacement part.
- Q: How do I clean the dining set?
 - A: Use a soft cloth dampened with water to clean the surfaces. Avoid harsh chemicals that may damage the finish.

IMPORTANT NOTE:

- PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE 15 FULLY SET-UP.

DESCRIPTION

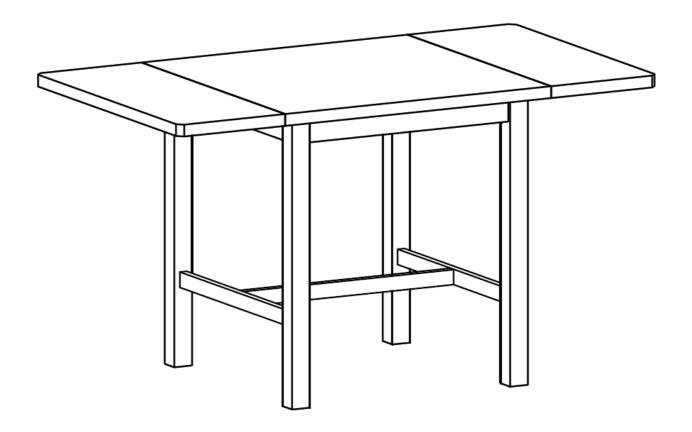

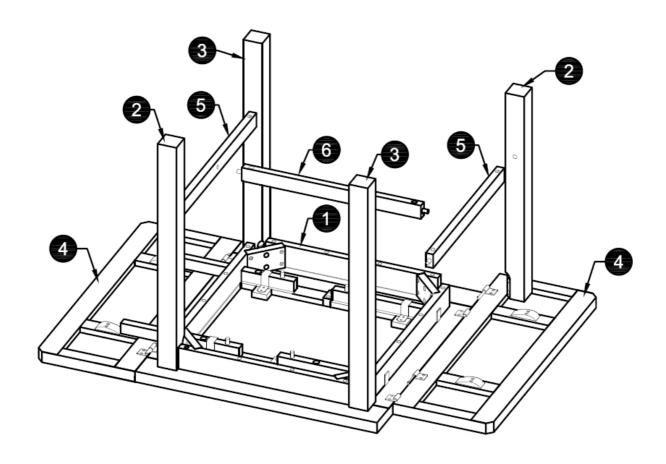

CARTON CONTENT

WF310399:



 


TABLE PART LISTS

TABLE PART LISTS					TABLE HARDWARE LISTS				
NO.	DESCRIPTION	SKETCH	QTY	NO.	DESCRIPTION	SKETCH	QTY		
1	TABLE TOP	11.1. "Mu 11.7.	1 PC	Α	HEX COMB 5/16 x 2 1/2"		8 PCS		
2	TABLE LEG (R)	0	2 PCS	В	SPRING WASHER 5/16"	8	8 PCS		
3	TABLE LEG (L)		2 PCS	С	FLAT WASHER 5/16"	0	8 PCS		
4	LEAF		2 PCS	D	SPANNER 1.28		1 PC		
5	STRETCHER (S)	· ·	2 PCS	E	C/B SCREW M4 x 45mm	Diminimin-	6 PCS		
6	STRETCHER (L)		1 PC						

INSTALLATION

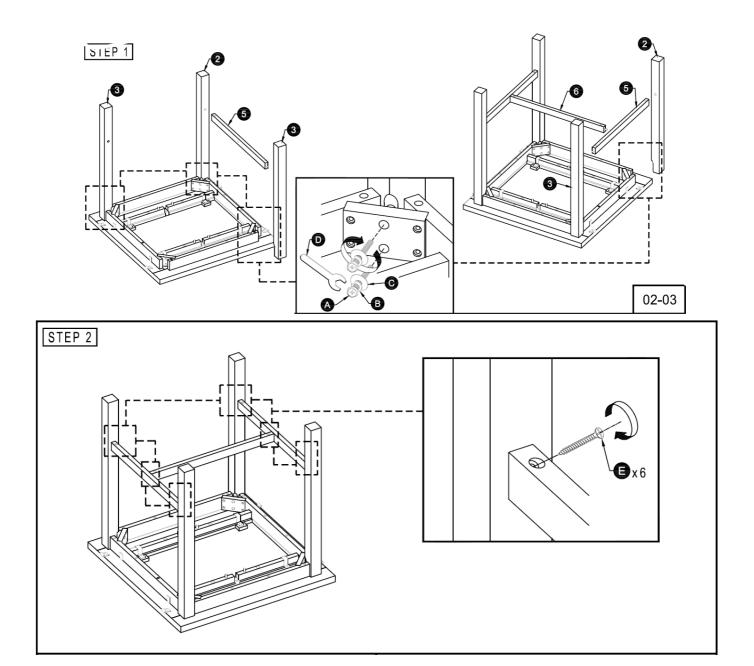


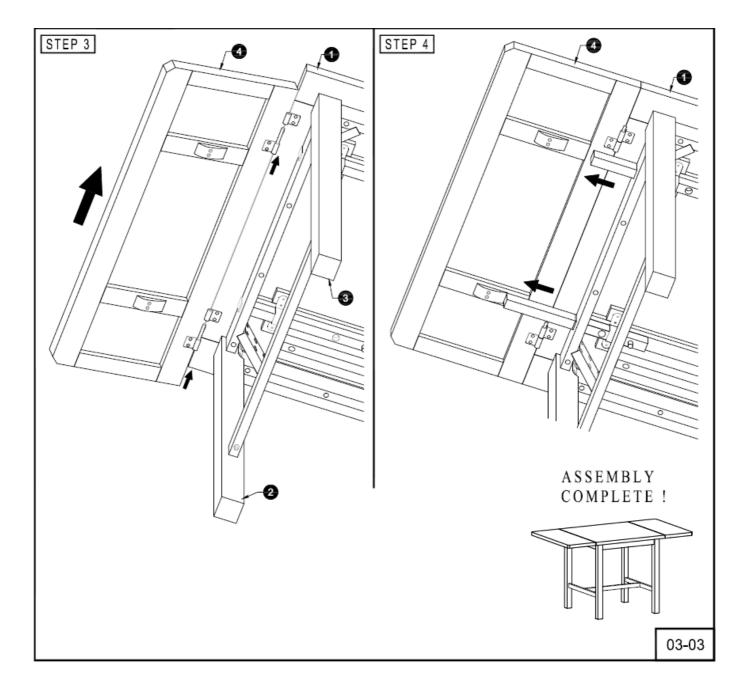

IMPORTANT NOTE:


- PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR 15 FULLY SET-UP.

OVERVIEW

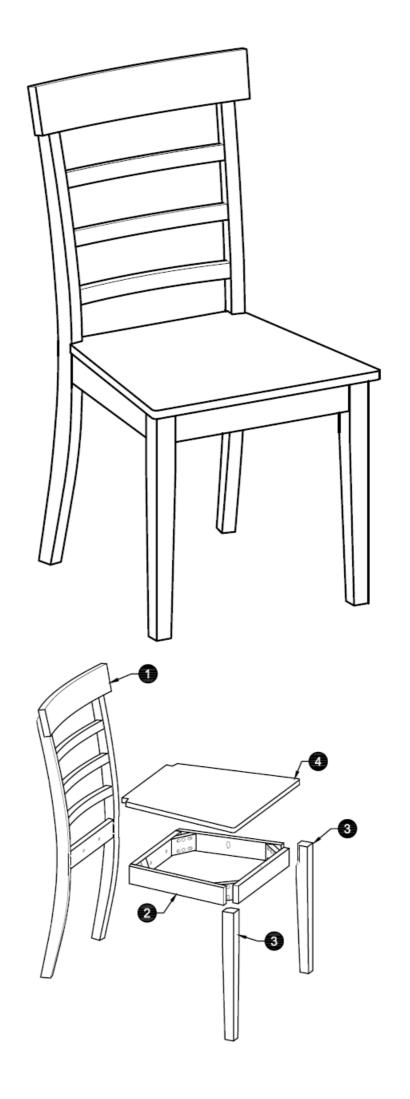

CARTON CONTENT:




 


CHAIR PART LISTS

CHAIR PART LISTS				CHAIR HARDWARE LISTS			
NO.	DESCRIPTION	SKETCH	QTY	NO.	DESCRIPTION	SKETCH	QTY
1	BACK LEG		4 PCS	Α	JCBC BOLT M6 x 35mm		8 PCS
2	BOX SEAT		4 PCS	В	JCBC BOLT M6 x 60mm	0	16 PCS
<u> </u>	BOX GENT		4100	С	JCBC BOLT M6 x 80mm	9	16 PCS
3	FRONT LEG		8 PCS	D	SPRING WASHER	ෂ	40 PCS
4	SEAT		4 PCS	Е	FLAT WASHER 1/4"	0	40 PCS
		-		F	ALLEN KEY M4		1 PC
				G	C/B SCREW M4 x 30mm	Diminion>	12 PCS

INSTALLATION

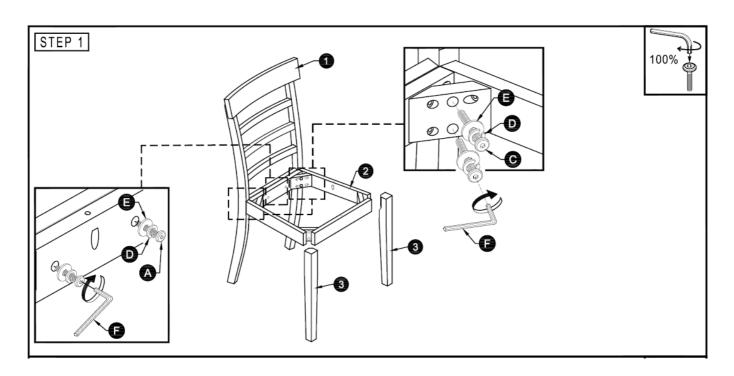

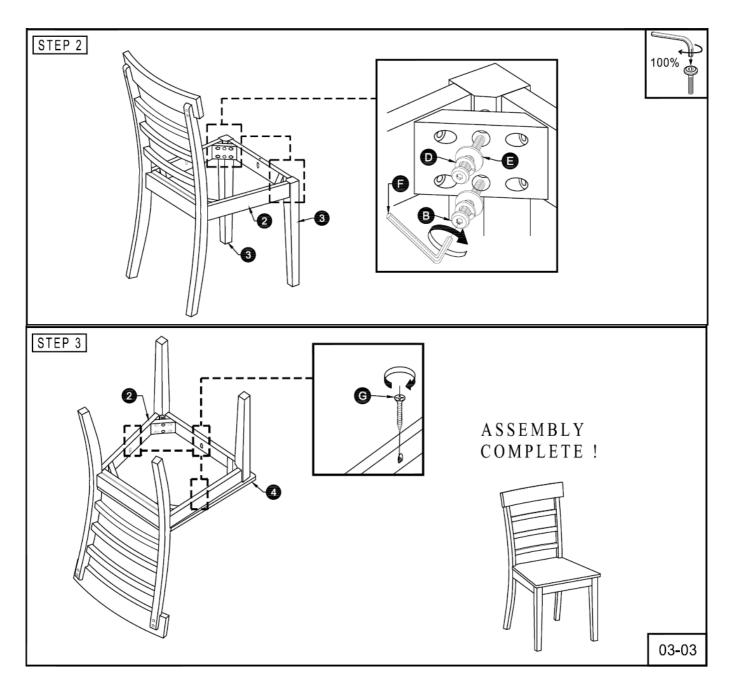

Documents / Resources



T J WF310400 Extendable Wood Dining Set For Small Spaces [pdf] Installation Guide WF310400 Extendable Wood Dining Set For Small Spaces, WF310400, Extendable Wood Dining Set For Small Spaces, Dining Set For Small Spaces, For Small Spaces, Spaces

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.