



# T-LED 100069106-3 4 Zone Dimming RF Remote Controller User Guide

[Home](#) » [T-LED](#) » T-LED 100069106-3 4 Zone Dimming RF Remote Controller User Guide 

## User Guide 4 Zone Dimming RF Remote Controller

### Contents

- 1 Summary
- 2 Technical parameter
- 3 Key function
- 4 Dimension
- 5 Operation
- 6 Match guide
- 7 Safety information
- 8 Summary
- 9 Technical parameter
- 10 Key function
- 11 Dimension
- 12 Operation
- 13 Match guide
- 14 Safety information
- 15 Documents / Resources
- 16 Related Posts

 
## Summary

- Apply to single color LED controller, dimming driver or smart lamp.
- Black or white version available.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- CR2032 button battery power supply.
- Operate with LED indicator light.


## Technical parameter

- |  |  |
|--|--|
| <ul style="list-style-type: none"><li>● Output signal: RF(2.4GHz)</li><li>● Working voltage: 3VDC(CR2032)</li><li>● Working current: 20mA</li><li>● Standby current: 4μA</li><li>● Standby time: 12 months</li></ul> | <ul style="list-style-type: none"><li>● Remote distance: 30m</li><li>● Working temperature: -30°C~55°C</li><li>● Dimension: L135×W40×H11mm</li><li>● Weight: 41g</li></ul> |
|--|--|

## Key function

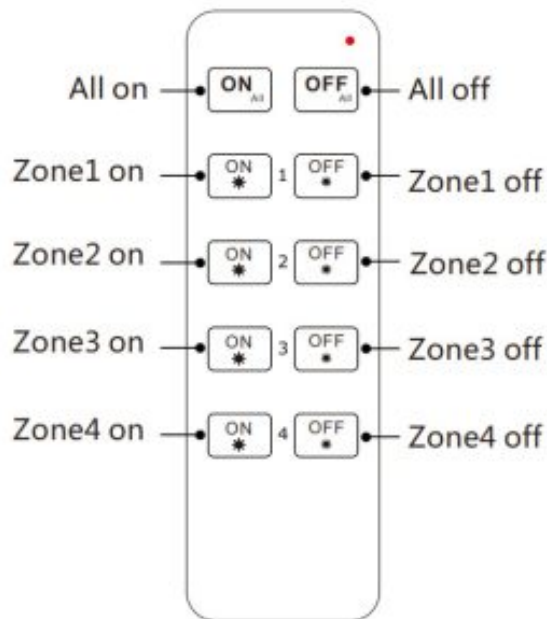

## Dimension

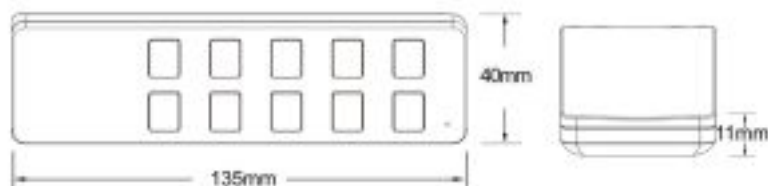 

## Operation

- Pull out the plastic battery barrier sheet from the battery compartment located on the bottom of the remote.

## Match guide

**Remote match with 2.4G RF controller, dimming driver, smart lamp and panel controller.**  
**Match with controller(with match key)**

1. Match: Short press match key, within 5s, press or zone on/off key of the remote.
2. Delete: Long press match key for 5s, delete all matched remote.

**Match with controller(without match key), dimming driver or smart lamp**

1. Match: Switch off the power, then switch on power again, short press zone on/off key 3 times on the remote quickly within 5s after power on, the link is done once the light blinks 3 times.
2. Delete: Switch off the power, then switch on power again, short press zone on/off key 5 times on the remote quickly within 5s after power on, the unlink is done once the light blinks 5 times.

### Match with panel controller

1. Match: Turn on light, turn off, immediately press on/off key for 5s, within 5s, press zone on/off key of the remote.
2. Delete: Turn on light, turn off, immediately press on/off key for 10s, delete all matched remote.

### Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.  
A long time without the remote control, remove the battery.  
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.

## User Guide 8 Zone Dimming RF Remote Controller

 
### Summary

- Apply to single color LED controller, dimming driver or smart lamp.
- Black or white version available.
- Adopt 2.4GHz wireless technology, remote distance up to 30m.
- Each remote can match one or more receiver.
- CR2032 button battery power supply.
- Operate with LED indicator light.

### Technical parameter

<ul style="list-style-type: none"><li>● Output signal: RF(2.4GHz)</li><li>● Working voltage: 3VDC(CR2032)</li><li>● Working current: 20mA</li><li>● Standby current: 4μA</li><li>● Standby time: 12 months</li></ul>	<ul style="list-style-type: none"><li>● Remote distance: 30m</li><li>● Working temperature: -30°C~55°C</li><li>● Dimension: L135×W40×H11mm</li><li>● Weight: 41g</li></ul>
--	--

### Key function

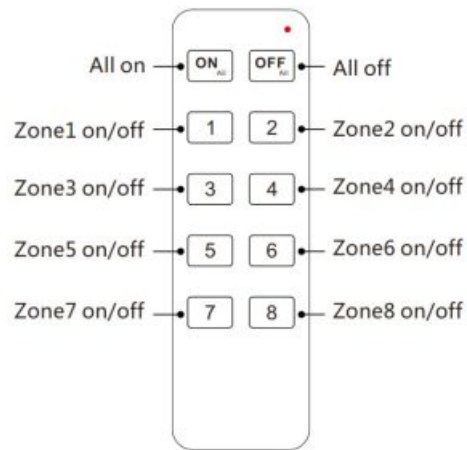


**All on:** Turn on all 8 zone light.

**All off:** Turn off all 8 zone light.

**Zone 1 8 on/off:** Short press turn on/off zone light, long press 1-5s increase or decrease brightness continuously.

## Dimension

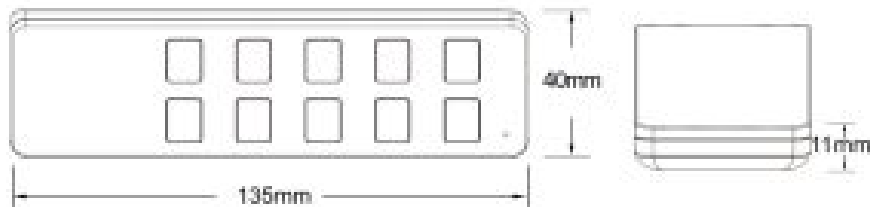 

## Operation

- Pull out the plastic battery barrier sheet from the battery compartment located on the bottom of the remote.

## Match guide

**Remote match with 2.4G RF controller, dimming driver, smart lamp and panel controller.**

**Match with controller(with match key)**

1. Match: Short press match key, within 5s, press or zone on/off key of the remote.
2. Delete: Long press match key for 5s, delete all matched remote.

**Match with controller(without match key), dimming driver or smart lamp**

1. Match: Switch off the power, then switch on power again, short press zone on/off key 3 times on the remote quickly within 5s after power on, the link is done once the light blinks 3 times.
2. Delete: Switch off the power, then switch on power again, short press zone on/off key 5 times on the remote quickly within 5s after power on, the unlink is done once the light blinks 5 times.

## Match with panel controller

 
1. Match: Turn on light, turn off, immediately press on/off key for 5s, within 5s, press zone on/off key of the remote.

2. Delete: Turn on light, turn off, immediately press on/off key for 10s, delete all matched remote.

## Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.  
A long time without the remote control, remove the battery.  
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.

## Documents / Resources

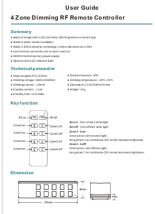	<p><a href="#">T-LED 100069106-3 4 Zone Dimming RF Remote Controller</a> [pdf] User Guide 100069106-3, 4 Zone Dimming RF Remote Controller, 100069106-3 4 Zone Dimming RF Remote Controller</p>
---	---