



T LED HN2K 4 Key Panel RF Remote Controller Owner's Manual

Home » T-LED » T LED HN2K 4 Key Panel RF Remote Controller Owner's Manual



- 1 T LED HN2K 4 Key Panel RF Remote
- Controller
- 2 Product Information
- **3 Product Usage Instructions**
- **4 Frequently Asked Questions**
- **5 Features**
- **6 Technical Parameters**
- 7 Mechanical Structures and Installations
- 8 Key function
- 9 Match Remote Control
- 10 Safety information
- 11 Documents / Resources
 - 11.1 References
- **12 Related Posts**

T LED

T LED HN2K 4 Key Panel RF Remote Controller



Product Information

Specifications

Model: HN2KDimensions:

Length: 86.00 mmWidth: 14.00 mmHeight: 12.00 mmBaseplate: 50.00 mm

- · Features:
 - Apply to single color
 - Each remote can match one or more receiver
 - CR2032 battery powered
 - Removable and easy to stick anywhere or mount on a wall using a panel base
- · Technical Parameters:

Input and Output: RF(2.4GHz)Output signal: 3VDC(CR2032)

Working voltage: 5mAStandby current: 2AStandby time: 2 years

• Remote distance: 30m (Barrier-free space)

- Environment:
 - Operation temperature: -30°C to +55°C

• IP rating: IP20

- · Safety and EMC:
 - EMC standard: ETSI EN 301 489-1 V2.2.3, ETSI EN 301 489-17 V3.2.4

Safety standard: EN 62368-1:2020+A11:2020

- Radio Equipment: ETSI EN 300 328 V2.2.2, CE, EMC, LVD, REDCertification
- · Warranty: 3 years
- · Weight:

Net weight: 0.057kgGross weight: 0.075kg

Product Usage Instructions

Replace Battery:

Before the first use, remove the protective film on the battery.

Installation Diagram:

To fix the panel:

Two options are offered for selection:

- 1. Fix it on the wall with two screws.
- 2. Adhere it to the wall with a plaster.

Key Functions:

Zone1:

- Zone1 on / Zone1 off
- Zone2 on / Zone2 off
- Zone 1-2 on: Short press to turn on zone light, long press (1-6s) to increase brightness continuously.
- Zone 1-2 off: Short press to turn off zone light, long press (1-6s) to decrease brightness continuously.

Match Remote Control (Two Match Ways):

Option 1:

Match:

• Short press match key, immediately press on/off key on the remote. The LED indicator fast flashes a few times means match is successful.

Delete:

• Press and hold match key for 5s to delete all matches. The LED indicator fast flashes a few times means all matched remotes were deleted.

Frequently Asked Questions

Q: What should I do if there is no response from the receiver?

A: Please re-match the remote control with the receiver.

Model No.: HN2K 2 Zone Dimming

Features

- · Apply to single color
- Each remote can match one or more receiver.
- · CR2032 battery powered.
- Removeable and stick anywhere easily, or mount on wall use panel base.

Technical Parameters

Input and Output		
Output signal	RF(2.4GHz)	
Working voltage	3VDC(CR2032)	
Working current	5mA	
Standby current	2μΑ	
Standby time	2 years	
Remote distance	30m(Barrier-free space)	


Environment	
Operation temperature	Ta: -30 OC ~ +55 OC
IP rating	IP20

Safety and EMC	
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3
	ETSI EN 301 489-17 V3.2.4
Safety standard(LVD)	EN 62368-1:2020+A11:2020
Radio Equipment(RED)	ETSI EN 300 328 V2.2.2
Certification	CE,EMC,LVD,RED

Warranty	
Warranty	3 years

Weight	
Net weight	0.057kg
Gross weight	0.075kg


Mechanical Structures and Installations

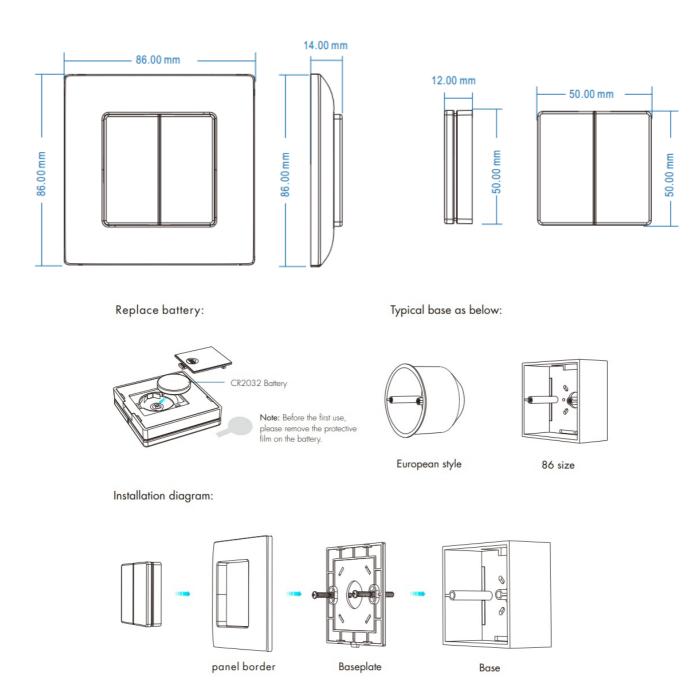

To fix the panel, two options are offered for selection:

- Option 1: fix it on the wall with two screws.
- Option 2: adhere it to the wall with paster.

Key function

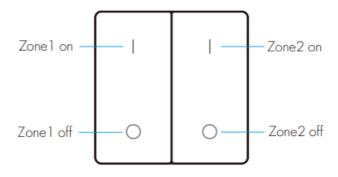

Zone 1 2 on: Short press turn on zone light,long press 1-6s to increase brightness continuously.

Zone 1-2 off: Short press turn off zone light, long press 1-6s to decrease brightness continuously.

Match Remote Control

(two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:

Short press match key, immediately press on/off key on the remote.

The LED indicator fast flash a few times means match is successful.

Delete:

Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart

Match:

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key 3 times on the remote.

The light blinks 3 times means match is successful.

Delete:

Switch off the power, then switch on power, repeat again.

Immediately short press on/off key 5 times on the remote.

The light blinks 5 times means all matched remotes were deleted.

Safety information

- 1. Read all instructions carefully before you begin this installation.
- 2. When installing battery, pay attention to the battery positive and negative polarity.

A long time without the remote control, remove the battery.

When remote distance becomes smaller and insensitive, replace the battery.

- 3. If no response from the receiver, please re-match the remote.
- 4. Gently handle remote, beware of falling.
- 5. For indoor and dry location use only.

Documents / Resources



T LED HN2K 4 Key Panel RF Remote Controller [pdf] Owner's Manual

HN2K, HN2K 4 Key Panel RF Remote Controller, HN2K, 4 Key Panel RF Remote Controller, Ke y Panel RF Remote Controller, Panel RF Remote Controller, RF Remote Controller, Remote Controller, Controller

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.