

# T-nB HPGHOSTBK Enceinte Bluetooth Speaker Instruction Manual

Home » T-nB » T-nB HPGHOSTBK Enceinte Bluetooth Speaker Instruction Manual





**ENCEINTE BLUETOOTH® Bluetooth® speaker** requency range: 2.402GHz - 2.480GHz Max power: 2.26 dBm

#### **Contents**

- 1 HPGHOSTBK Enceinte Bluetooth
- **2 ENCEINTE BLUETOOTH®**
- **3 OUR THANKS**
- **4 IMPORTANT SAFETY INSTRUCTIONS**
- **5 PAIRING**
- **6 FUNCTIONS**
- **7 FEATURES**
- 8 Documents / Resources
- 9 Related Posts


**HPGHOSTBK Enceinte Bluetooth Speaker** 



Instructions HPGHOSTBK

### **ENCEINTE BLUETOOTH®**

## Bluetooth® speaker

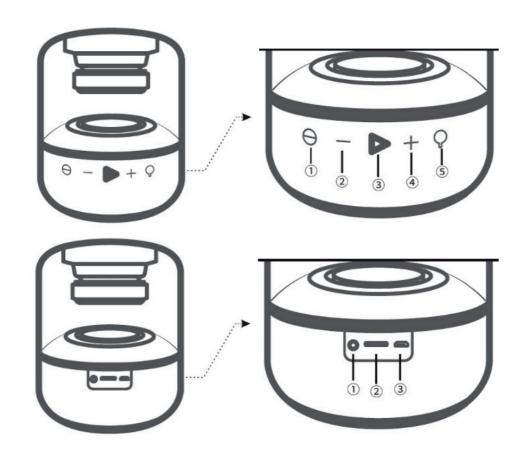

- 1. ON/OFF
- 2. Decrease volume / Previous track

- 3. Play / Pause -TWS
- 4. Increase volume / Next track
- 5. Lights / LED
- 6. 35 mm jack input
- 7. SD card port
- 8. Micro USB charge input

#### **OUR THANKS**

Congratulations on your purchase and thank you for the trust you have placed in T'nB. Our products comply with all relevant regulations and standards. Before using this equipment, we recommend that you read the instructions and safety instructions carefully and keep this manual for future reference.

#### IMPORTANT SAFETY INSTRUCTIONS

- No guarantee will apply in case of misuse.
- Trn8 accepts no liability if the safety instructions are not respected.
- · Handle the device with care.
- The power supply of your device must match the initially specified characteristics
- The socket of the electrical equipment must be located near the said equipment and easy to get to.
- Keep the device away from flammable objects, explosive substances, or dangerous objects.
- Use and store your device in an environment where the temperature is between 0°C and 40°C.
- Store your device out of the reach of children.
- This device is not designed to be used by persons (including children) whose physical, sensory, or mental capacities are reduced, or persons without experience or knowledge, except if they are supervised or receive prior instruction on using the device by a person in charge of their safety.
- Do not disassemble your device and do not attempt to repair or modify it yourself.
- Stop using your device if it has been hit or damaged.
- To avoid the risk of electric shock, disconnect your device from the mains and from any other device before cleaning it or when not in use.
- Only use the supplied accessories and connectors. The use of any other type of accessory not intended for this purpose may irremediably damage your device.
- Make sure the appliance is switched off and cold before cleaning. Do not use any product or lubricant which may damage the appliance.
- T'nB accepts no liability for damage caused by misuse of the product or by use of an incompatible electrical device.
- Unless otherwise stated, never use your device in rain, in damp places, or near a water source.
- Unless otherwise stated, this product is for indoor use only.
- Do not leave wireless products near credit cards or other data storage devices.
- Avoid using your wireless devices near sources of interference, such as power supply cables, microwave ovens, fluorescent lamps, wireless video cameras, and wireless domestic telephones.
- To improve the quality and strength of the wireless signal, reduce the number of devices operating on the same wireless frequency.

Note; Your speakers have 360° surround sound technology, which means that there are several loudspeakers

that emit music all around at 360 degrees.

#### **PAIRING**

**Stage 1:** Press and hold the (1) button for about 3 seconds to switch on the speakers. They will automatically switch to Bluetooth mode and will be ready to be connected to a device.

Stage 2: Go to the Bluetooth menu of your smartphone or computer and select TNB GHOST in the list of Bluetooth devices.

**Stage 3:** The speakers will emit a sound and the light (5) will stay blue once the pairing has been successful. If pairing fails, switch off the speakers and hold down (1) and restart the pairing process from the beginning.

#### **FUNCTIONS**

- 1. Press briefly while playing your music to Play / Pause (3)
- + 1. Press hold down to increase the volume (4)
- 2. Press and briefly to go to the next track (4)
- 1. Press hold down to decrease the volume (2)
- 2. Press and briefly to go to the previous track (2)

Change the light mode to suit your mood (6 different modes) by pressing the (5) button once to change mode. To switch off the LEDs, press and hold the button (5)

#### TWS FUNCTION (3)

To connect two GHOST speakers with each other, switch on both sets of speakers by holding down the (1) button for 3 seconds. Then press the (3) button of one of the speakers for around 3 seconds. They will connect to each other automatically and you will hear a sound to confirm this.

#### **WIRE MODE**

The speakers also have an audio jack port. Just connect the speakers with your mobile telephone / MP3 player / PC / laptop to the 3.5 mm jack audio cable.

#### **SD CARD**

You can also insert an SD card with a maximum capacity of 32 GB to listen to your music.

#### **FEATURES**

Bluetooth version: Bluetooth 5.1 Range: 10 metres Power:20 W(10 W x1 +SW x2) Battery capacity: 7,8V, 1800maH Audio input Bluetooth / 3.5 mm Jack / SD card (max 32 GB) Play time: 12 hours (50% volume) Charging time:2 to 3 hours (Input: 5 V 0.5 A) Sensitivity: 80 dB Frequency range: 50 – 21,000 Hz


#### **NEED HELP?**

Concerned about the satisfaction of our customers, you can contact us at <a href="mailto:info@t-nb.com">info@t-nb.com</a>. Maintenance, troubleshooting, and miscellaneous information about this product, please visit our website: <a href="https://www.t-nb.com">www.t-nb.com</a>.

 Direct current To indicate on the rating plate that the equipment is suitable for direct current only; to identif y relevant terminals.
Prolonged listening at full volume can damage the user's ear.



### **Documents / Resources**

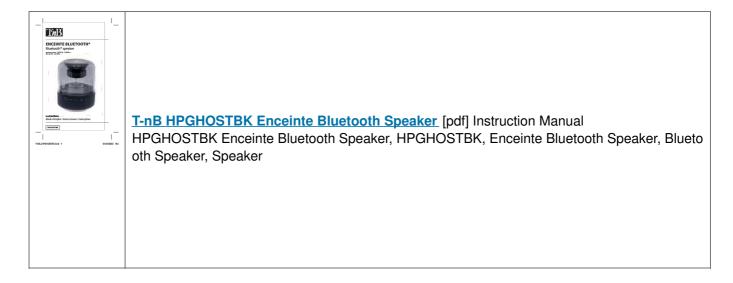

Manuals+,